


T-RITE PRECAST SHOWER DRAIN

FOR CORED HOLES THROUGH CONCRETE FLOORS

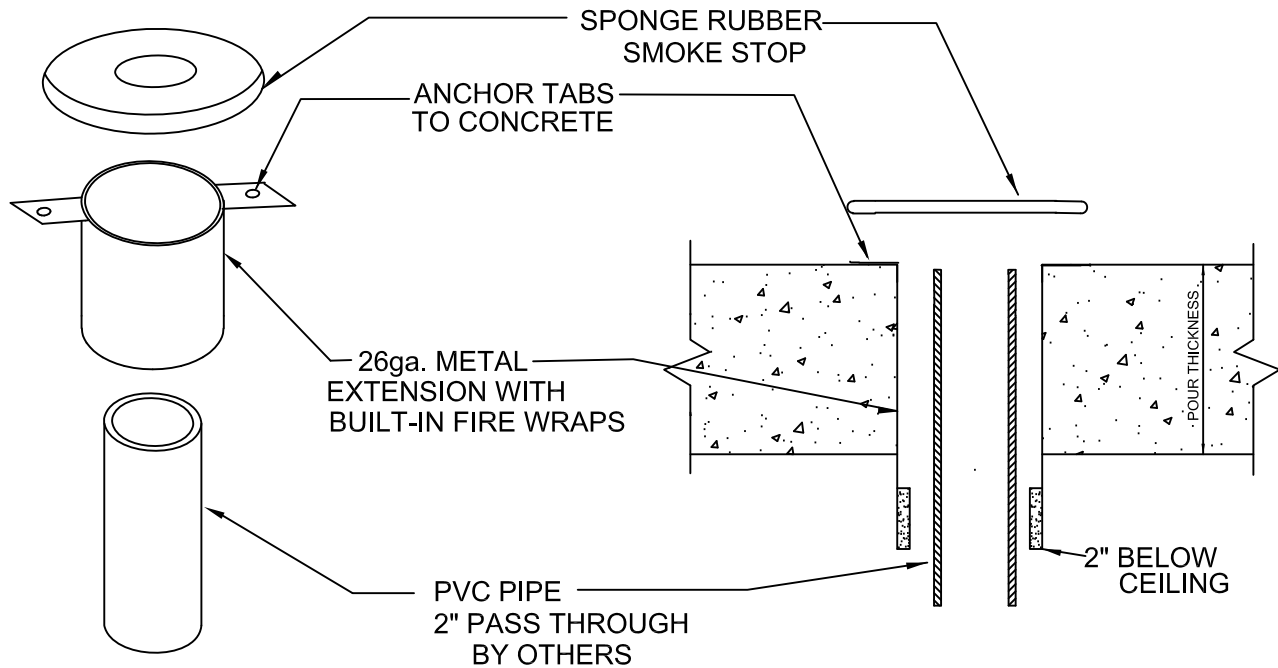

2" PASS THROUGH PVC PIPE BY OTHERS THROUGH OVERSIZE FIRESTOP

IMPORTANT NOTES :

1. Core a 4 1/2" hole for a 2" and a 6" hole for a 3" size pipe.
2. Insert the metal can into cored hole and secure the metal tabs to the concrete floor.
3. Place the sponge rubber over the opening before inserting the 2" PVC drain from the precast shower .
4. Insert the pass through drain pipe through the metal can and connect to a P-Trap.



W.H. Directory Reference 08 Edition
Firestop Device
W.H. Design No. PS/PH 120-18
F & T Rating 2 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
1-1-13

DRG . NO .
T-6332-DPS