


WALL OUTLET CLOSET ASSEMBLY

CONCRETE ON CORRUGATED METAL DECKS
FOR FLOORS

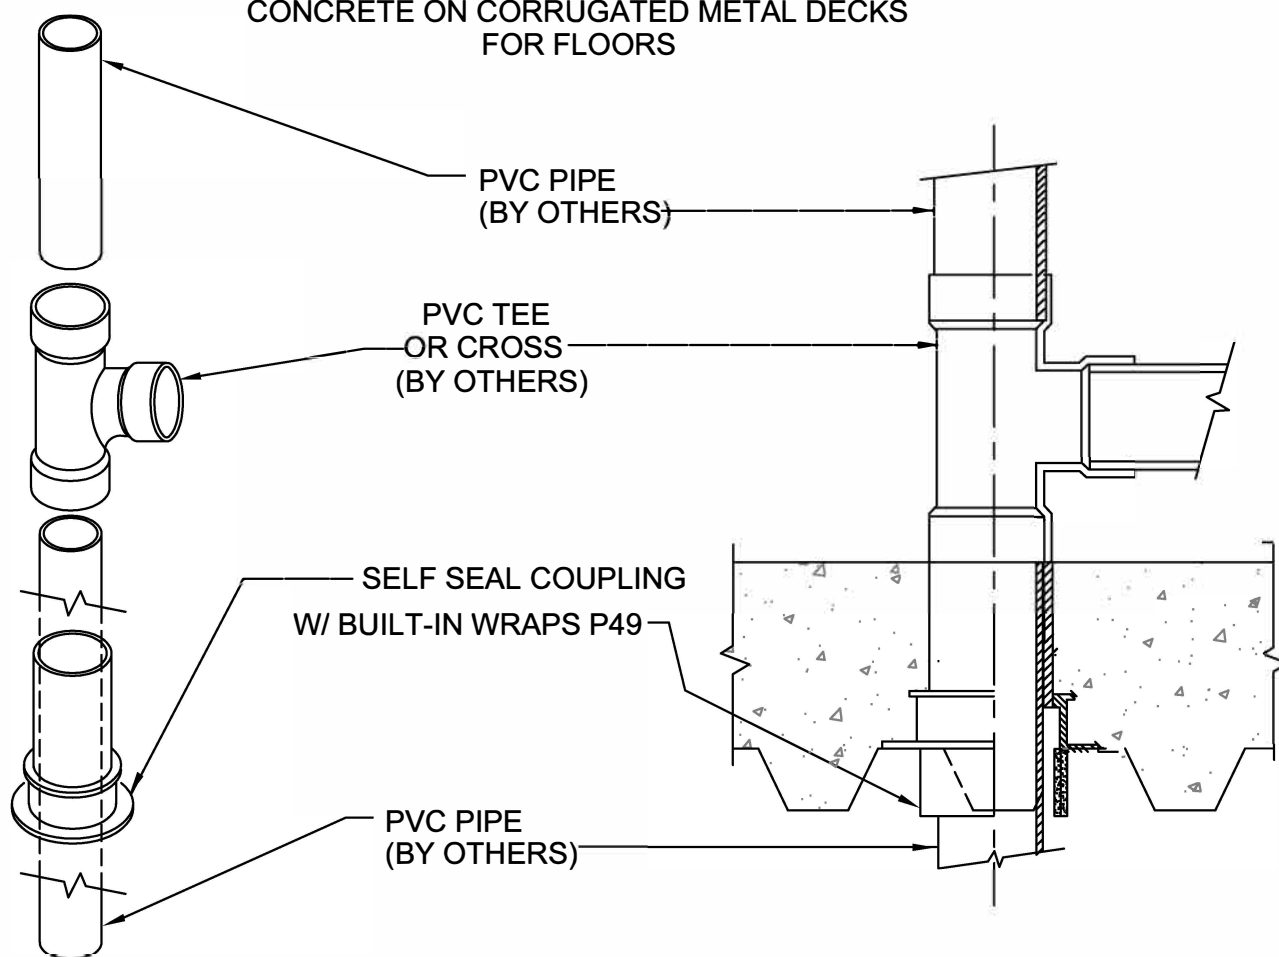

IMPORTANT NOTES :

1. Cut a hole through the corrugated metal deck to accomodate the 26 gauge metal extension.
2. Mount the # 49 flange to the corrugated metal with sheet metal screws. If necessary use a right angle metal strip, S-34348 to span the corrugations.
3. After the pour remove the cap and solvent cement the tee or cross at the proper height.
4. Solvent cement the plastic branch piping to complete the installation.



W.H. Directory Reference 99 Edition
Firestop Device
W.H. Design No. PS/PHV 180-03
F Rating 3 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
5. 31 21
DRG . NO .
C-4492-C