


# RISER CLAMP DEVICE

CONCRETE ON WOOD FORM  
FOR FLOORS OR WALLS

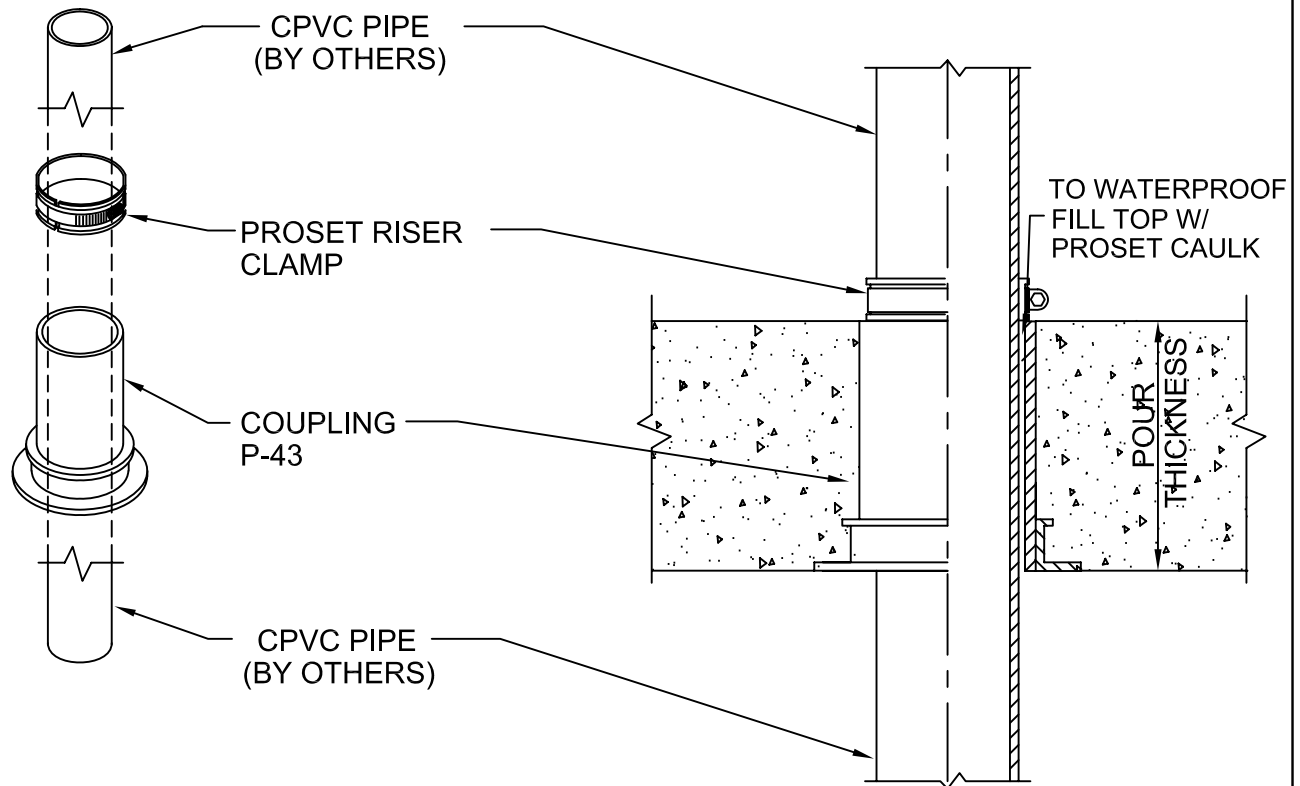

## IMPORTANT NOTES :

1. Use nails through flange holes to mount the coupling to deck.
2. After the concrete pour, remove protective cap.
3. Insert the CPVC pipe through the coupling.
4. Fill void at top with ProSet caulking to waterproof.
5. Install riser clamp around pipe to support and draft stop. Clamp on both sides for walls.
6. When ordering riser clamp - Use suffix CU for copper sizes - S for steel pipe sizes.
7. Use Black letter Sleeve Pipe for steel sizes - Red letter pipe for copper sizes.

NOTE: See drawing A-4804-C or CR to waterproof



W.H. Directory Reference 97 Edition  
Firestop Device  
W.H. Design No. PS/PHV 120-05  
F Rating 2 Hrs.



**PROSET**<sup>®</sup>  
**SYSTEMS**  
FIRESTOP PENETRATOR™

DATE :  
1-10-06  
DRG . NO .  
A-1015-A