


TUB BOX FITTING ASSEMBLY

PRECAST CONCRETE OR EXISTING CONCRETE
FOR FLOORS

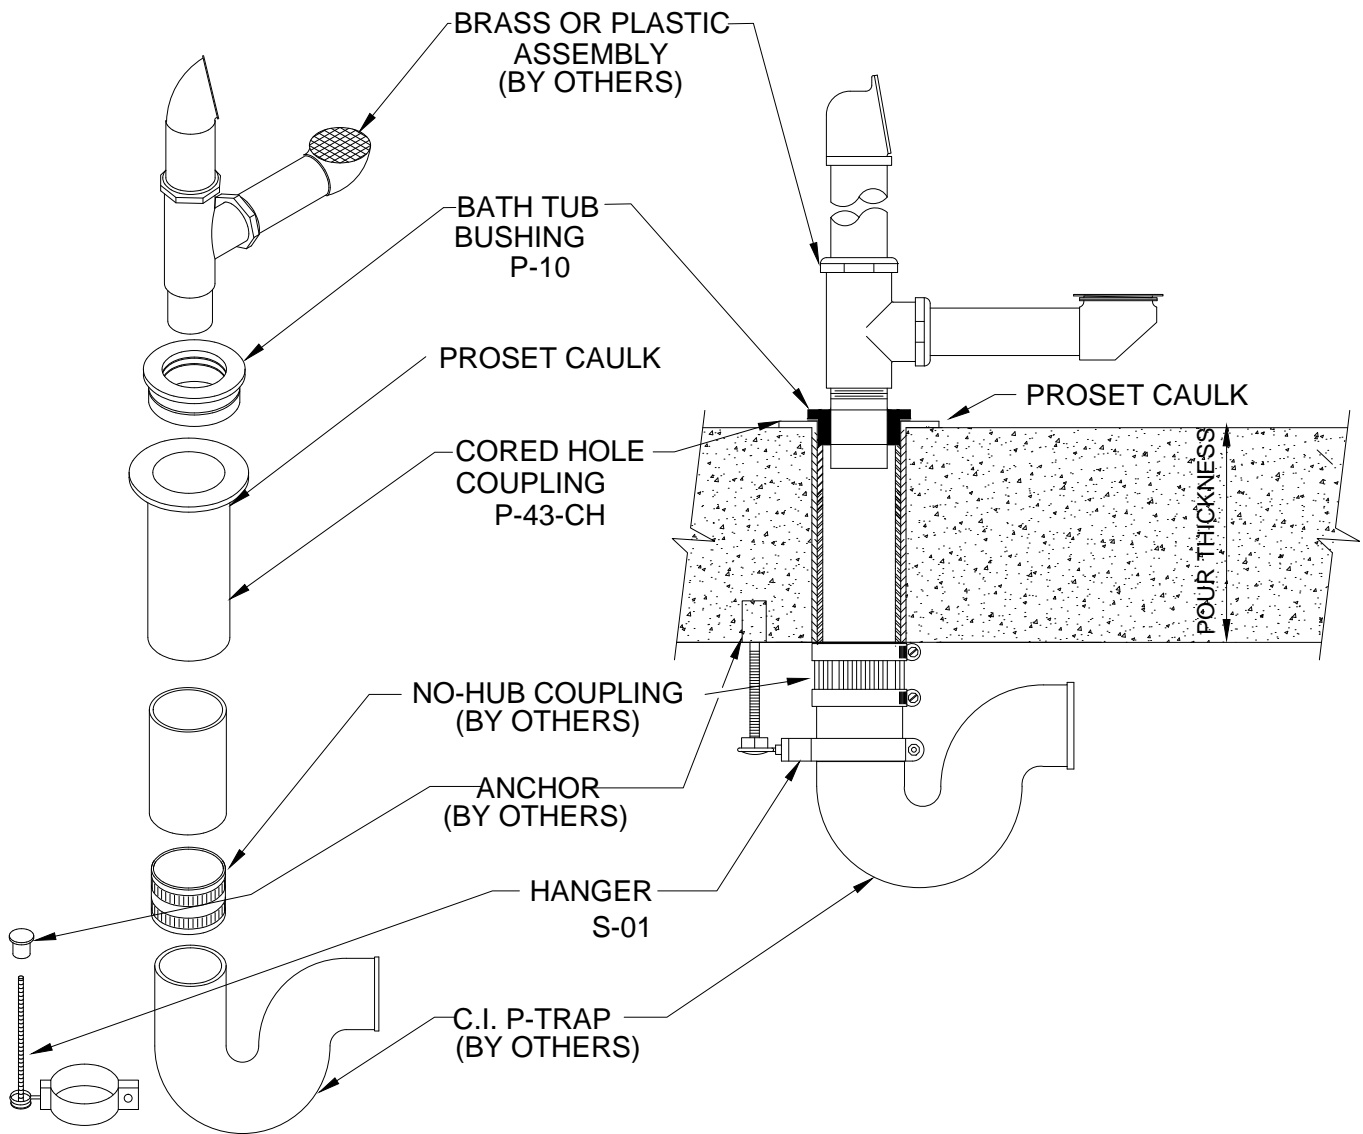

IMPORTANT NOTES :

1. Drill a 2 3/4" cored hole for 2" coupling through the deck - Install a bead of caulk around the flange to waterproof.
2. Use above the floor rough tub or chip concrete down to fit W & O.
3. Insert & solvent cement the proper length CP-95 liner or P-90 pipe up into coupling.
4. Install the C.I. P-Trap to the liner fitting using a no-hub coupling & install the S-01 hanger to the P-Trap in a secure manner.
5. Use either a C25661 for pipe size or C25662 for tube size W & O.



W.H. Directory Reference 97 Edition
Firestop Device
W.H. Design No. PS/PHV 120-04
F Rating 2 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
05-31-21
DRG . NO .
B-6210-D