


# SHOWER/FLOOR DRAIN FITTING ASSEMBLY

PRECAST OR EXISTING CONCRETE  
FOR FLOORS

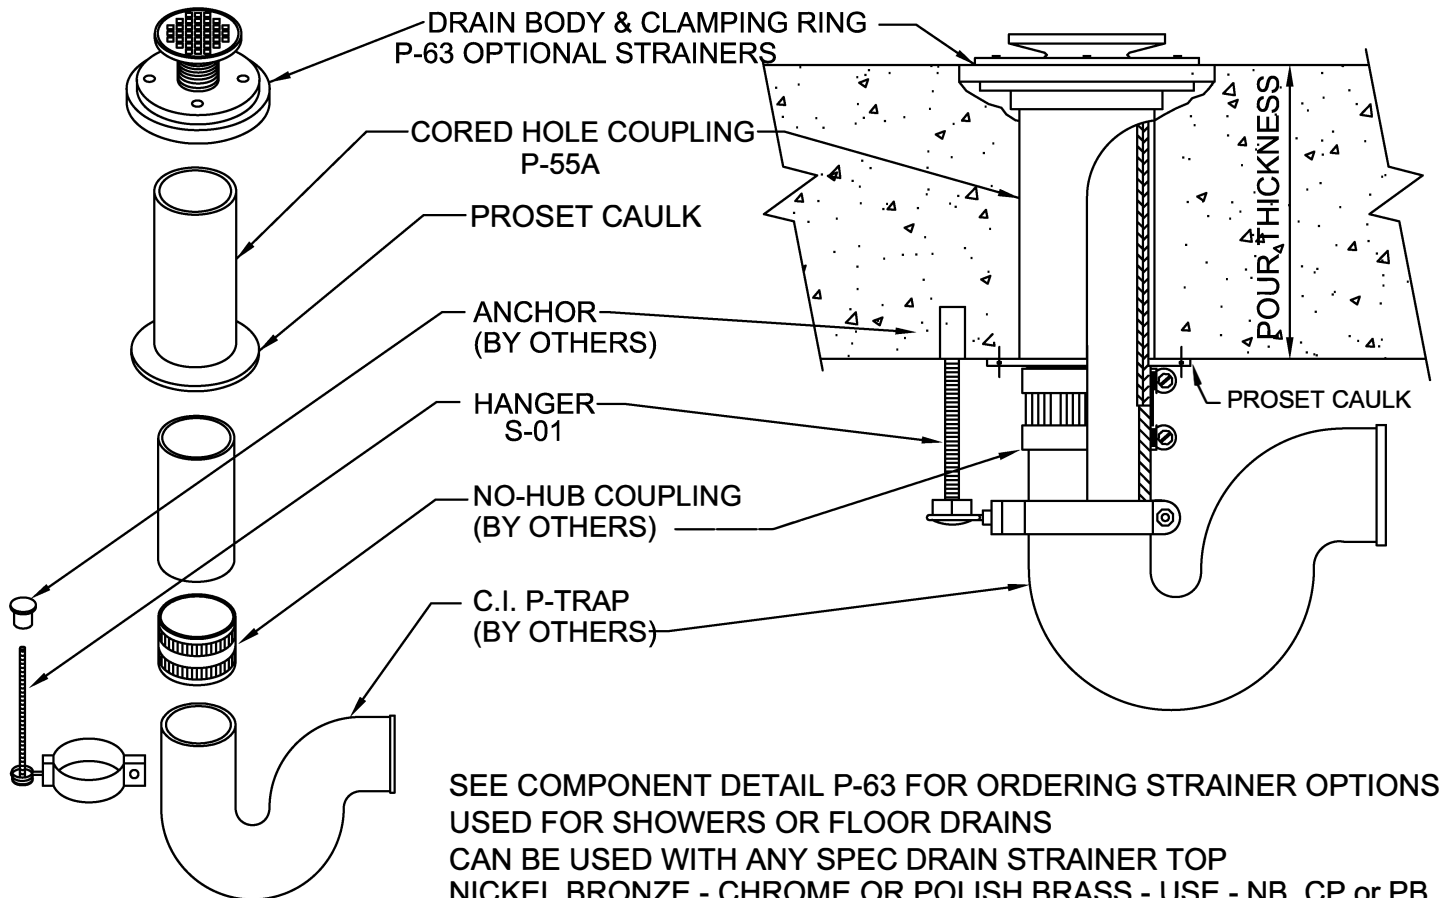

## IMPORTANT NOTES :

1. To size cored hole see drawing no. P-55A.
2. Core hole through the floor to fit coupling.
3. Install a bead of ProSet Caulk around coupling flange to waterproof.
4. Insert the coupling up through the cored hole, chip concrete down on top to fit shower flange.
5. Insert & solvent weld the proper length P-90 pipe into the bottom of drain coupling.
6. Connect the no-hub P-trap to the liner pipe w/ no-hub coupling.
7. Install the S-01 Hanger to the P-trap in a secure manner.
8. A blank ProSeal Plug can be used in top for water testing.
9. Install clamping ring to waterproofing material - insert strainer.



W.H. Directory Reference 97 Edition  
Firestop Device  
W.H. Design No. PS/PH 120-02  
F Rating 2 Hrs.



**PROSET**<sup>®</sup>  
**SYSTEMS**  
FIRESTOP PENETRATOR™

DATE :  
5-31-21

DRG . NO .  
B-6320-D