


# BIDET FITTING ASSEMBLY

## CONCRETE ON WOOD FORM FOR FLOORS

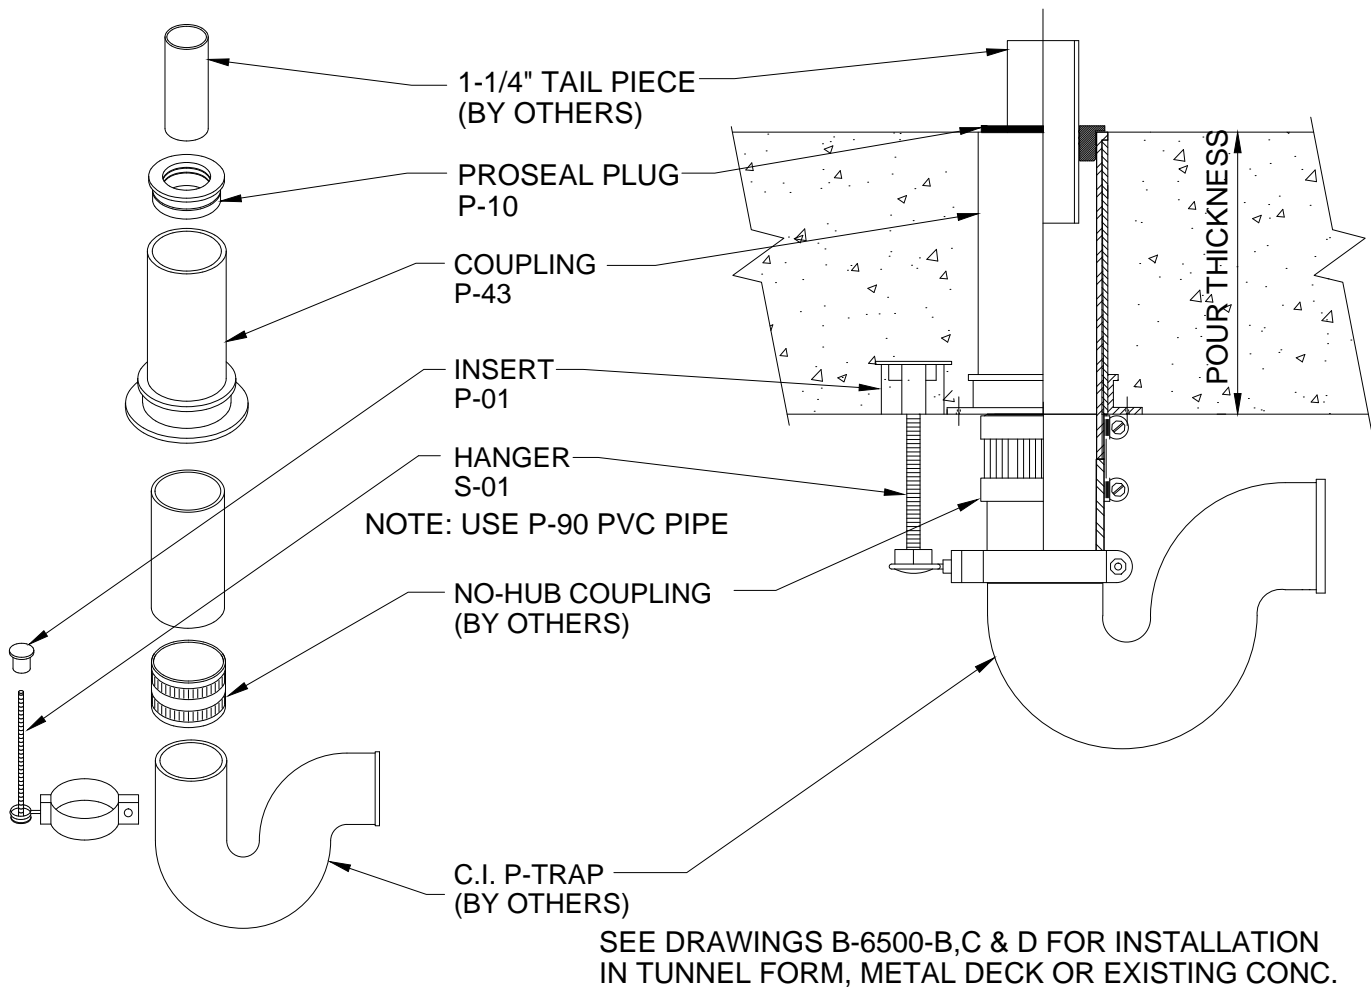

### IMPORTANT NOTES :

1. Use nails through flange holes to mount the sleeve coupling to the deck.
2. Set the P-01 insert abutting against the mounting flange.
3. After concrete is poured, remove protective cap.
4. Insert & solvent weld the proper length P90 Hi-Temp PVC pipe into the bottom of the coupling.
5. Connect the P-Trap to the liner pipe with a no-hub coupling.
6. Install the S-01 Hanger to the P-Trap in a secure manner.
7. Insert the C25660 flex bushing to fit the 1 1/4" Bidet tailpiece.

W.H. Directory Reference 97 Edition  
Firestop Device  
W.H. Design No. PS/PH 120-02  
F Rating 2 Hrs.



**PROSET**<sup>®</sup>  
**SYSTEMS**  
FIRESTOP PENETRATOR™

DATE :  
05-31-21

DRG . NO .  
B-6600-A  
B,C OR D