


CLEANOUT FITTING ASSEMBLY

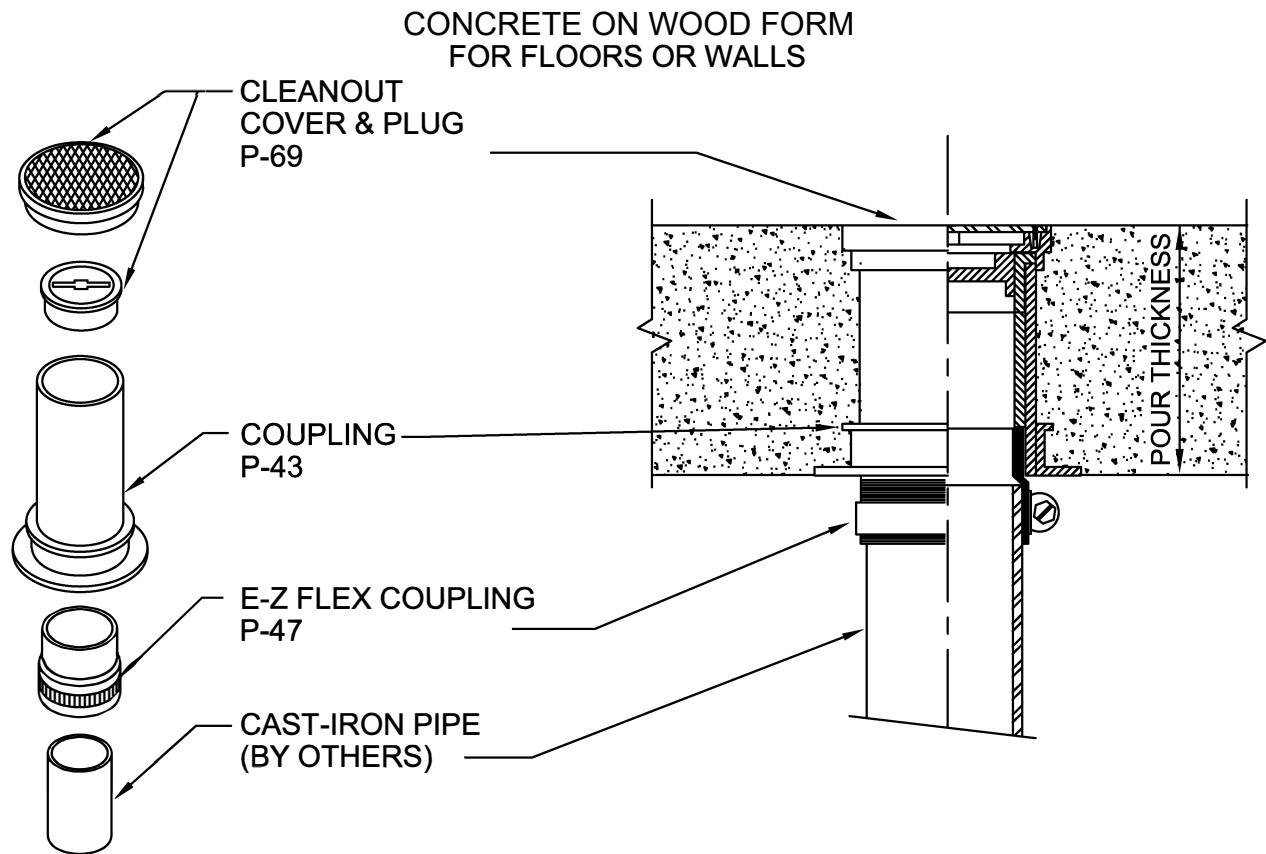

SEE DRAWING NO. C-4402-C OR D FOR INSTALLATION
ON TUNNEL FORM, METAL DECK OR EXISTING CONCRETE.

IMPORTANT NOTES :

1. Order Cleanout stub height to be flush with the finish floor.
2. Use duct tape over cleanout cover to protect during the concrete pour.
3. After the concrete pour, insert & solvent weld the E-Z Flex coupling into the bottom of the cleanout stub. (See E-Z Flex instructions)
4. Connect the cast iron pipe into the E-Z Flex coupling and tighten S.S. band.



W.H. Directory Reference 99 Edition
Firestop Device
W.H. Design No. PS/PH 120-13
F Rating 2 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
5-31-21
DRG . NO .
B-6900-A