


WALL OUTLET CLOSET ASSEMBLY

FOR PRECAST OR EXISTING CONCRETE
FOR FLOORS

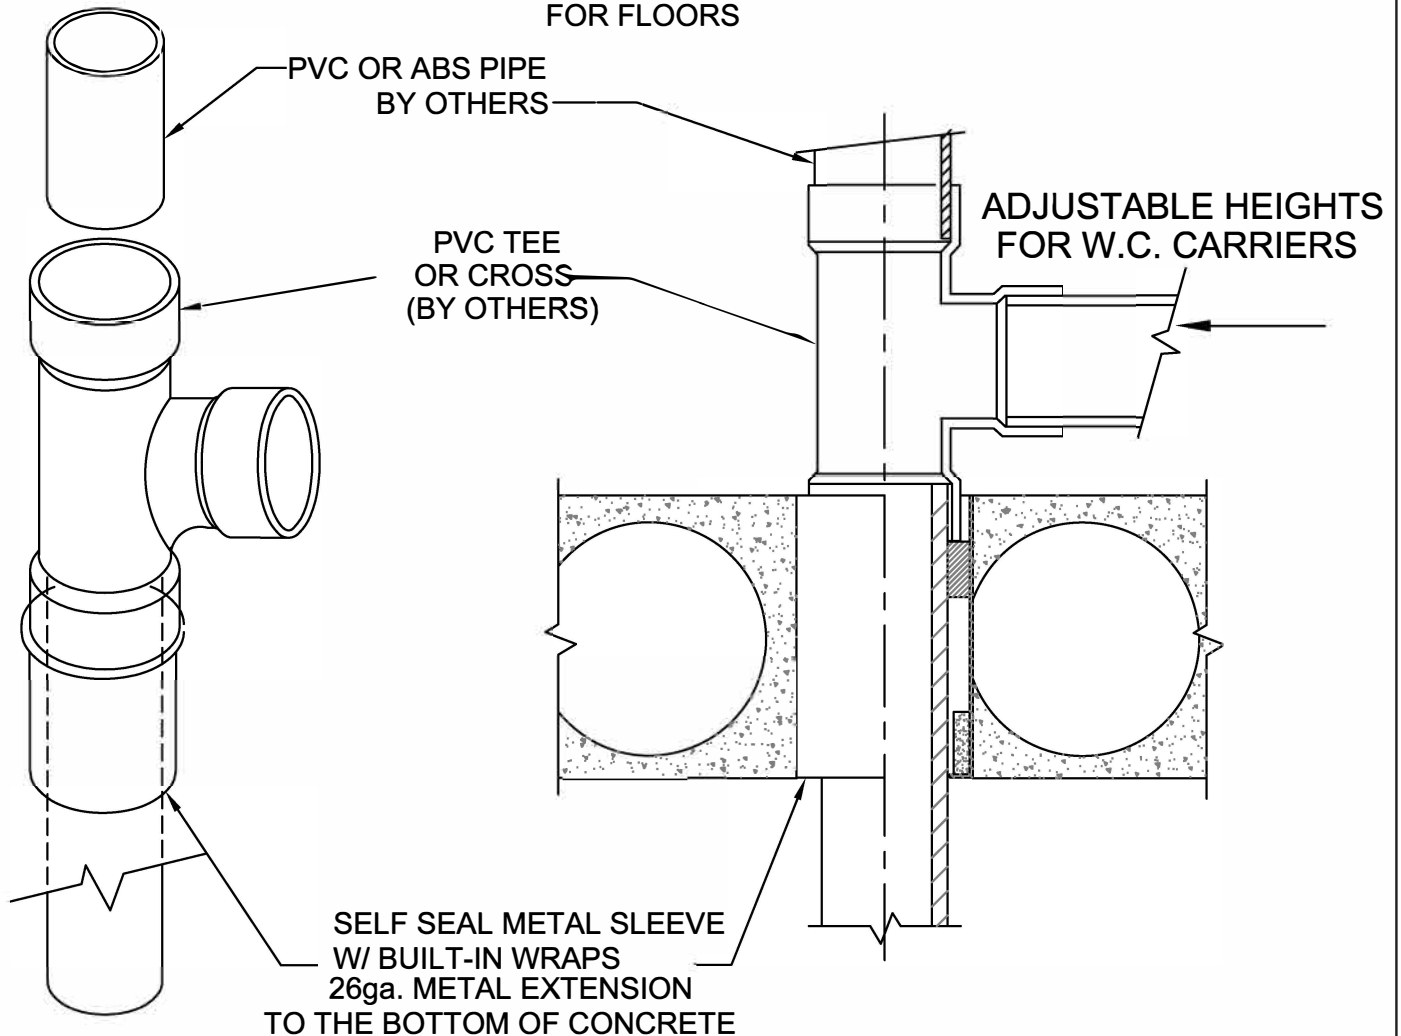

IMPORTANT NOTES:

1. Core a 4 1/2" hole for a 3" pipe and a 6" hole for a 4" pipe.
2. Insert the Tee or Cross and plastic pass through pipe through the Self Seal Cored Metal Sleeve to the required height above and below the concrete floor.
3. The pipe can be solvent cemented to the PVC ring inside the sleeve before inserting into the hole to secure the tee or cross in the sleeve at the proper elevation.
4. Connect the stack and branch piping to the closet assembly to complete the installation



W.H. Directory Reference 99 Edition
Firestop Device
W.H. Design No. PS/PHV 180-03
F Rating 3 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
5-31-21

DRG . NO .
C-4492-DHC