


SELF SEAL ROOF DRAIN ASSEMBLY

CONCRETE ON CORRUGATED METAL FOR FLOORS

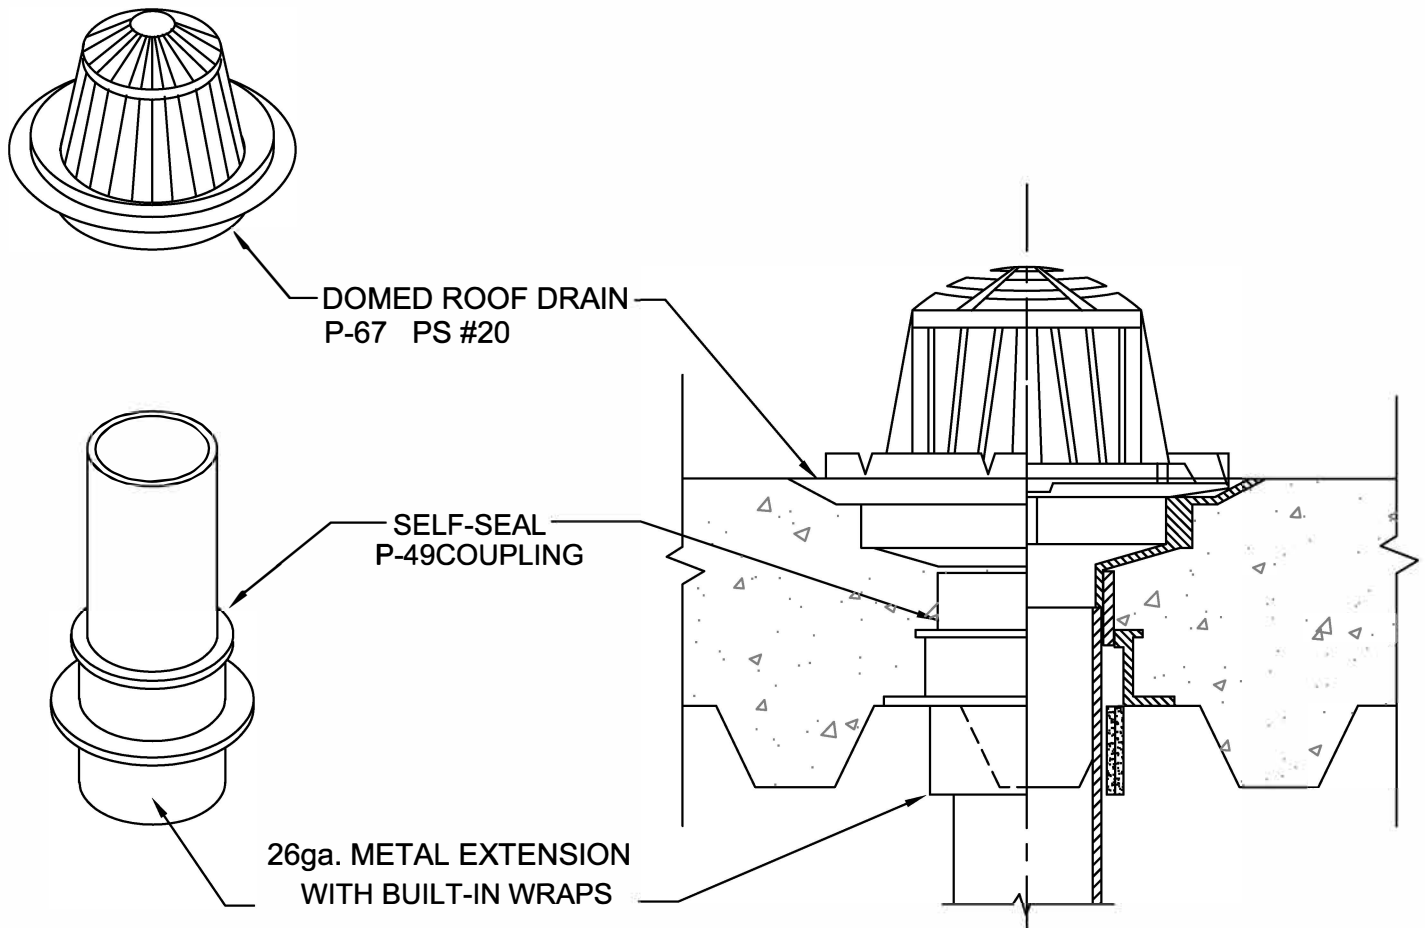

IMPORTANT NOTES:

1. Cut hole through the corrugated metal deck to accommodate the 26 ga. metal extension to the bottom portion of corrugations.
2. Mount the # 49 flange to the corrugated deck with sheet metal screws. If needed, use S-34348 strips to span corrugations
3. After the concrete pour connect plastic pipe to the bottom of the drain stub and complete the installation.

Note: Wrap Strip metal extension is not required if roof is not fire rated.



W.H. Directory Reference 97 Edition
Firestop Device
W.H. Design No. PS/PH 120-07
F Rating 2 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
5-31-21
DRG . NO .
C-6710-C