


T-RITE FLOOR/SHOWER DRAIN

CONCRETE ON CORRUGATED METAL DECK
FOR FLOORS

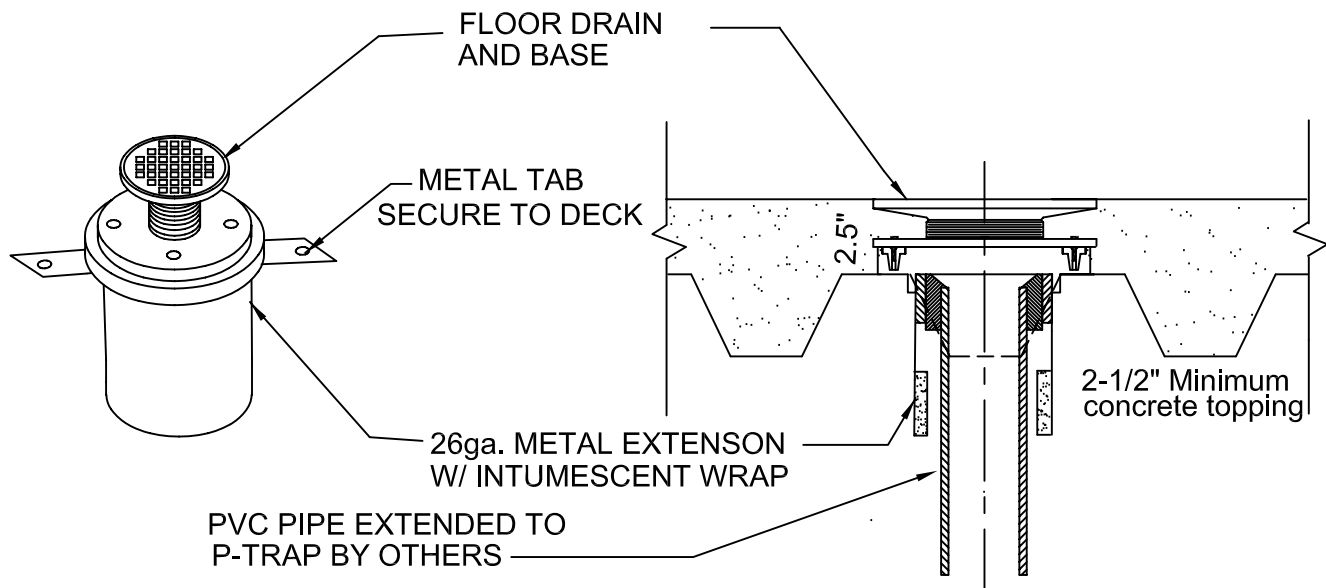

SEE T-RITE STRAINER TOPS FOR VARIOUS TYPES AND SIZE STRAINER OPTIONS.

SEE DRAWINGS T-6300-A FOR CONCRETE ON WOOD FORMS & T-6300-D FOR CORED HOLE

IMPORTANT NOTES:

1. Cut a 4-1/2" hole for 2" and a 6" hole for 3" size drain opening through the corrugated metal deck. If the tailpiece thread is 3-1/2" or 4" a 6" hole through the metal deck is required. The metal sleeve should extend down 2" from the bottom of the corrugated deck.
2. Secure the metal tab from the metal sleeve to the top of the corrugated metal deck.
3. Solvent cement the 2" or 3" plastic pipe into the socket that is up inside the sleeve to the proper length to connect the P-Trap to the drain to finish the installation.



W.H. Directory Reference 08 Edition
Firestop Device
W.H. Design No. PS/PH 120-18
F & T Rating 2 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

| | |
|------------|----------|
| DATE : | 1-10-10 |
| DRG . NO . | T-6332-C |