


PROSEAL PLUG DEVICE

CONCRETE ON WOOD FORM
FOR FLOORS OR WALLS

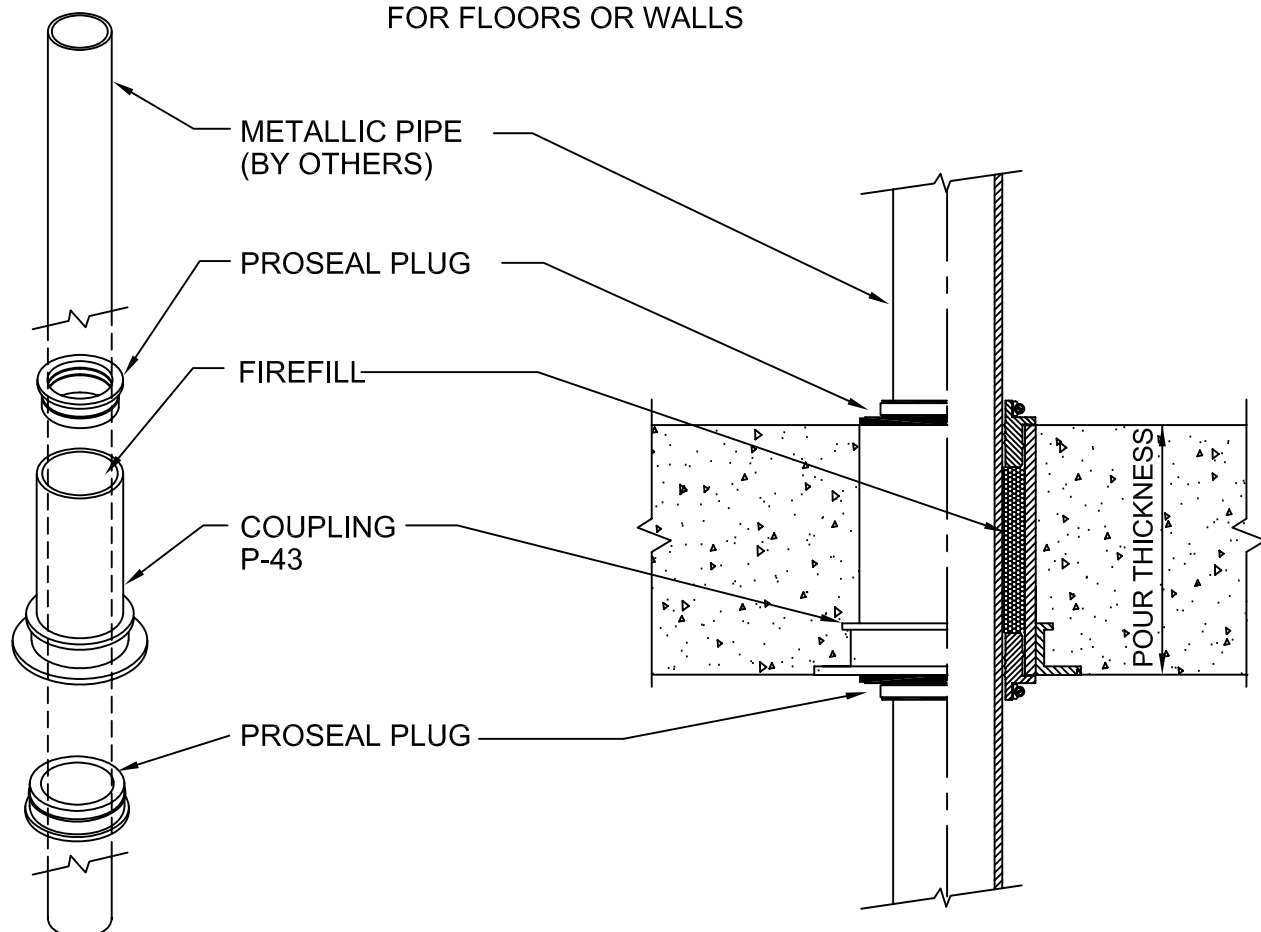

IMPORTANT NOTES :

1. Use nails through flange holes to mount the sleeve coupling to the deck.
2. After concrete is poured, remove protective cap.
3. Insert the pass through piping up through the sleeve coupling.
4. Install the proper size split ProSeal Plug around the pipe & drive up into the sleeve coupling.
5. Completely fill the void, between the pipe & sleeve, from the top side with Firefill material and install the top ProSeal Plug.

Alternate : Plugs can be solvent cemented in for waterproofing.

See drawing A-1001 for glass & plastic piping.



W.H. Directory Reference 99 Edition
Firestop Device
W.H. Design No. PS/PHV 180-02
F Rating 3 Hrs.or 4 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
1-10-06

DRG . NO .
A-1000-A