


# C.I. STACK STUB - OPTION 3

POURED CONCRETE ON WOOD FORM  
FOR FLOORS OR WALLS

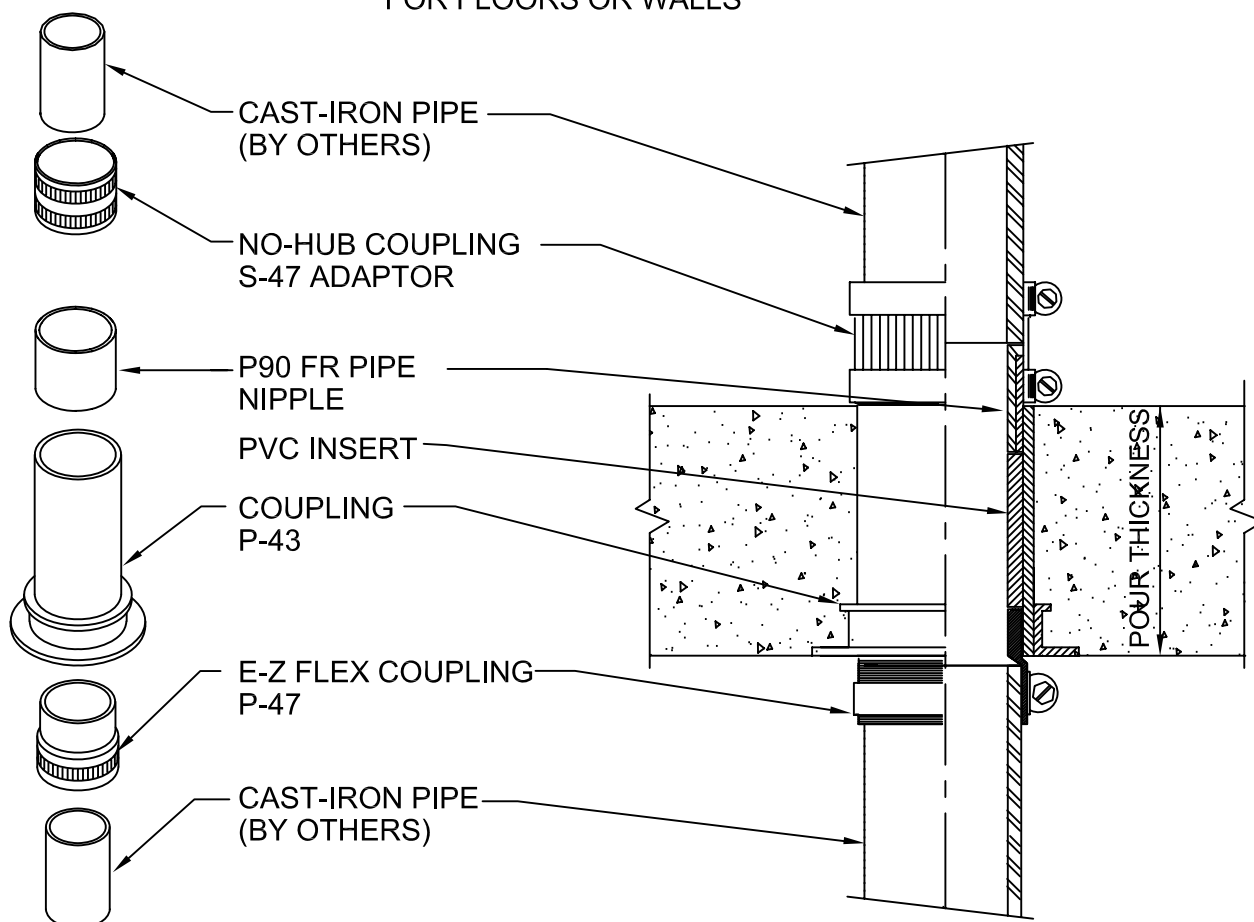

## IMPORTANT NOTES :

1. Use nails through flange holes to mount the sleeve coupling to the deck.
  2. After concrete is poured, remove protective cap.
  3. Insert & solvent weld the P90 FR pipe nipple into the top or bottom of coupling.
  4. Install the S-47 No-Hub adaptor from the P90 pipe to the cast iron pipe side.
  5. Optional: Insert & solvent weld the E-Z Flex into the top or bottom of coupling. See # 6.
  6. PVC Pipe can be solvent cemented into the sleeve coupling & eliminate the E-Z Flex Coupling.
- Option 3. One transition from Iron to PVC or PVC to Iron is permitted per stack.  
See Warnock Hersey listing requirements per PS/PH 120-01



W.H. Directory Reference 97 Edition  
Firestop Device  
W.H. Design No. PS/PH 120-01  
F Rating 2 Hrs.



**PROSET**<sup>®</sup>  
**SYSTEMS**  
FIRESTOP PENETRATOR™

DATE :  
1-10-06  
DRG . NO .  
B-4803-A