


WATERPROOF C.I. PIPE- OPTION 4

CONCRETE ON CORRUGATED METAL
FLOORS

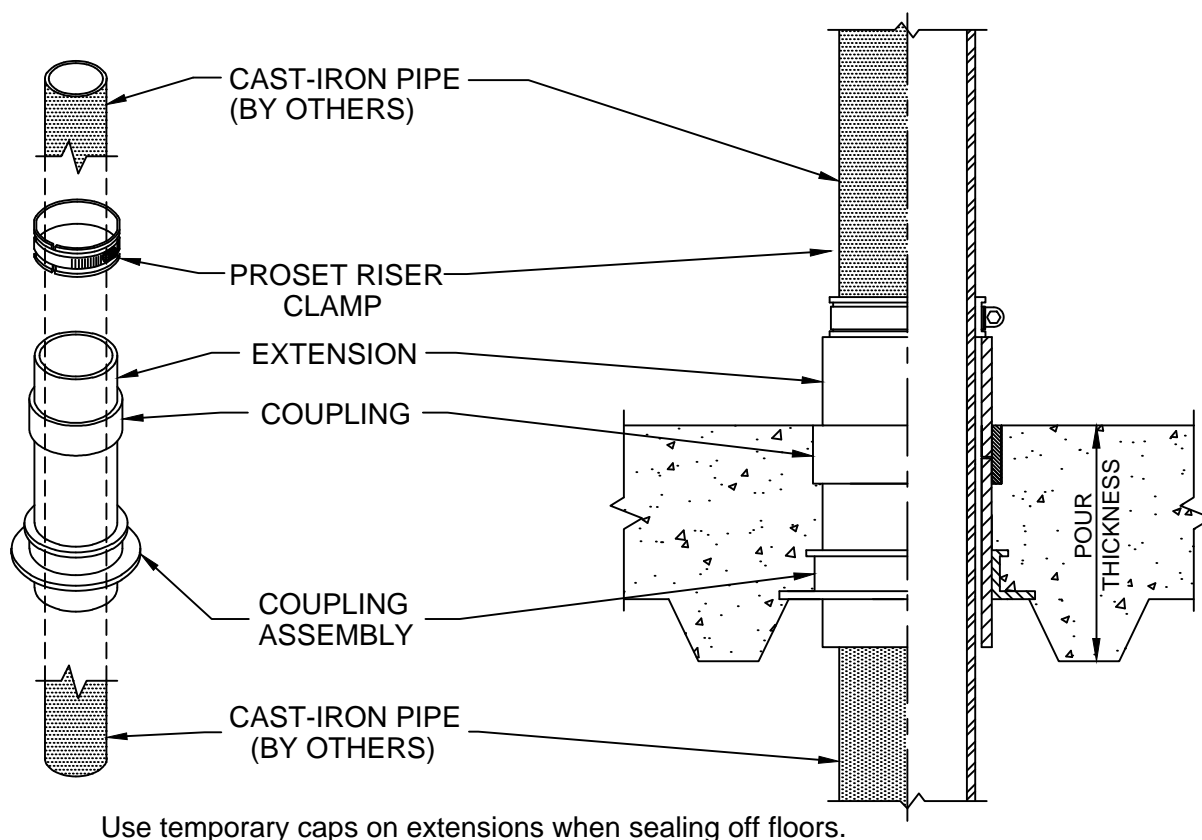

IMPORTANT NOTES :

1. Cut hole through the deck to accommodate the sleeve coupling to the bottom of the corrugations.
2. Mount the flange to the corrugated metal with sheet metal screws, if necessary used a right angle metal strip to span the corrugations.
3. After the concrete pour remove the protective plug & install the extension to raise above the floor.
4. Install the cast iron pipe through the sleeve and the top extension.
5. Install the proper size ProSet Riser Clamp around the pipe onto the sleeve top then tighten clamp.



W.H. Directory Reference 97 Edition
Firestop Device
W.H. Design No. PS/PHV 180-01
F Rating 3 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :

5-20-15

DRG . NO .

B-4804-CC