


FLOOR DRAIN FITTING ASSEMBLY

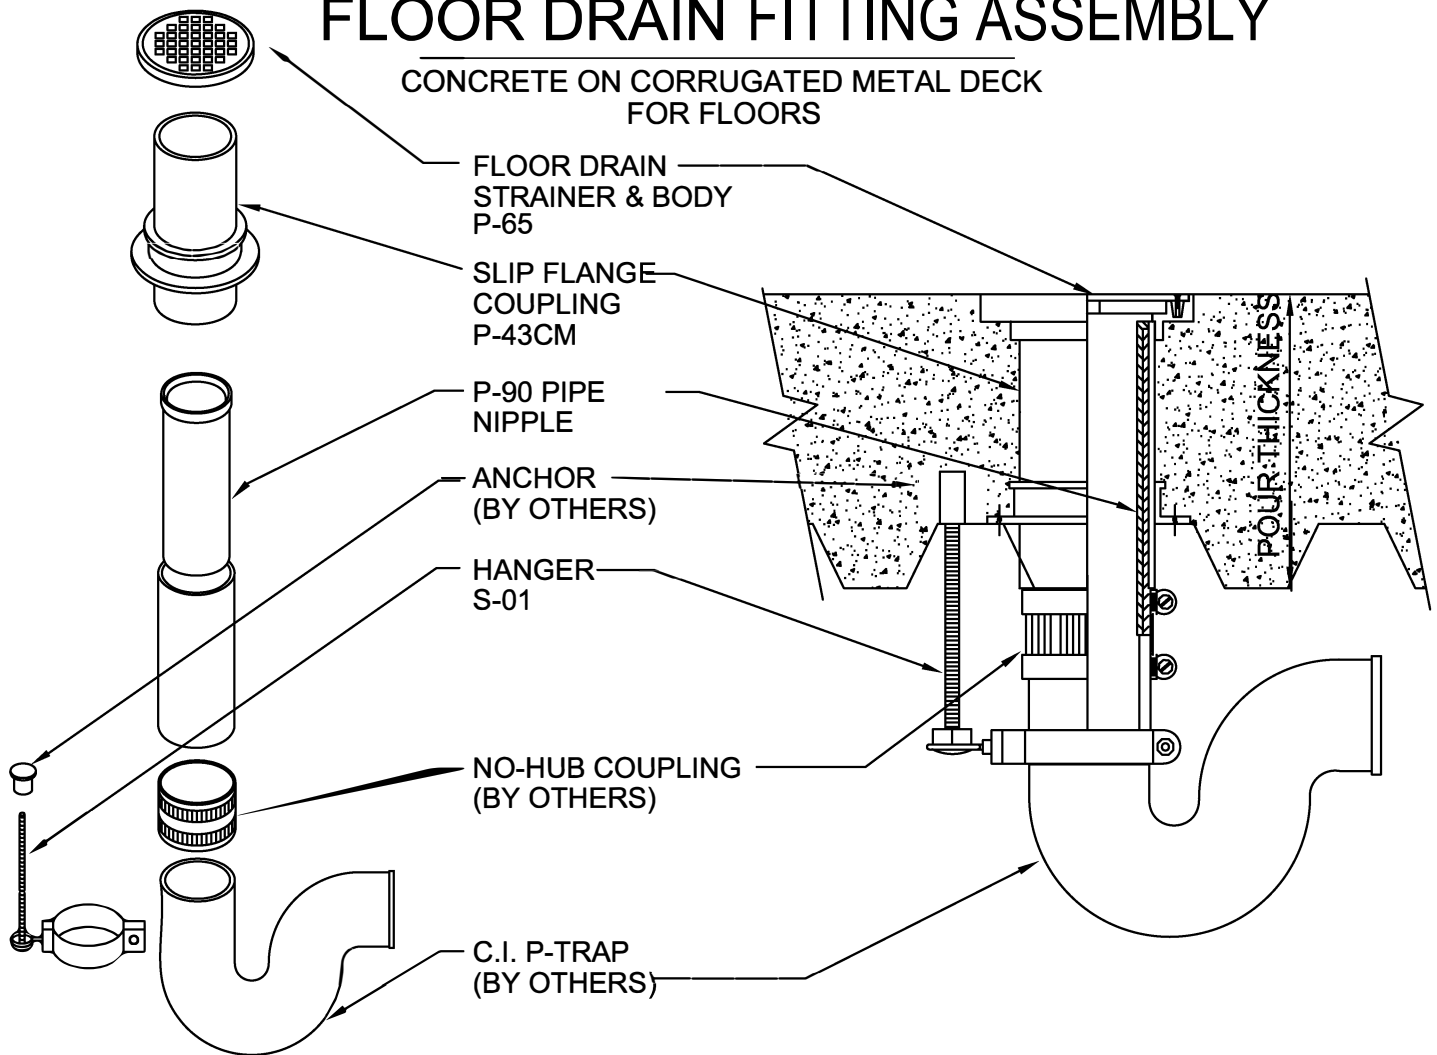

IMPORTANT NOTES :

1. Order floor drain stub height to reflect the amount of pitch of concrete to the drain - 1/2" pitch requires ordering drain 1/2" shorter than the pour.
2. Use duct tape over the top of the floor drain to protect during the concrete pour.
3. Mount to the corrugated metal deck with sheet metal screws, if necessary use a right angle metal strip to span corrugations.
4. Drill hole for 3/8" hanger rod 1/2" away from the flange.
5. Insert & solvent weld the proper length P-90 pipe into the bottom of drain.
6. Connect no-hub P-trap to the P-90 pipe w/ no-hub coupling.
7. Install the S-01 hanger to the P-trap in a secure manner.
8. A blank ProSeal Plug can be used in top for water testing.



W.H. Directory Reference 97 Edition
Firestop Device
W.H. Design No. PS/PH 120-02
F Rating 2 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
5-31-21
DRG . NO .
B-6500-C