


FLOOR DRAIN FITTING ASSEMBLY

PRECAST OR EXISTING CONCRETE FOR FLOORS

OPTIONAL
SNAP-IN STRAINER
PS #19C

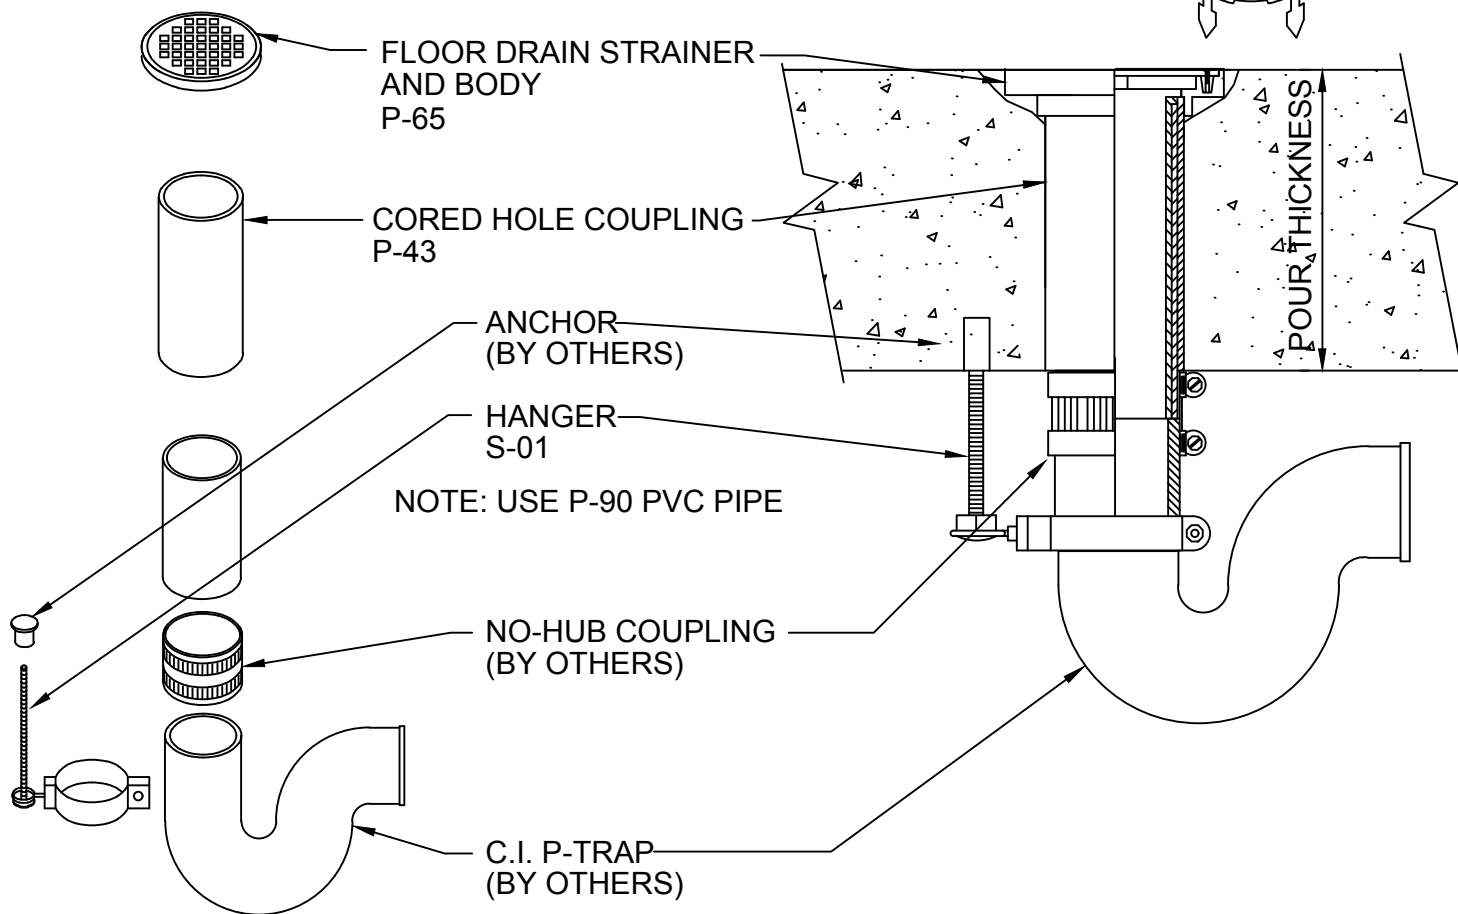

IMPORTANT NOTES :

1. To size cored hole, see component drawing P-55A.
2. Core hole through the floor to fit coupling.
3. Install a bead of ProSet Caulk around strainer body to waterproof.
4. Insert the coupling up through the cored hole, chip concrete down on top to fit the floor drain body and strainer.
5. Insert and solvent weld the proper length P-90 pipe into the bottom of the drain coupling.
6. Connect the no-hub P-trap to the P-90 pipe.
7. Install the S-01 hanger to the P-trap in a secure manner.

(OPTION) - A Snap-in Strainer can be used when the drain is not exposed to foot traffic or heavy loads.



W.H. Directory Reference 99 Edition
Firestop Device
W.H. Design No. PS/PH 120-02
F Rating 2 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
05-31-21

DRG . NO .
B-6500-D