


Self Seal 6" Stack Assembly

POUR CONCRETE ON WOOD FORM
FOR FLOORS

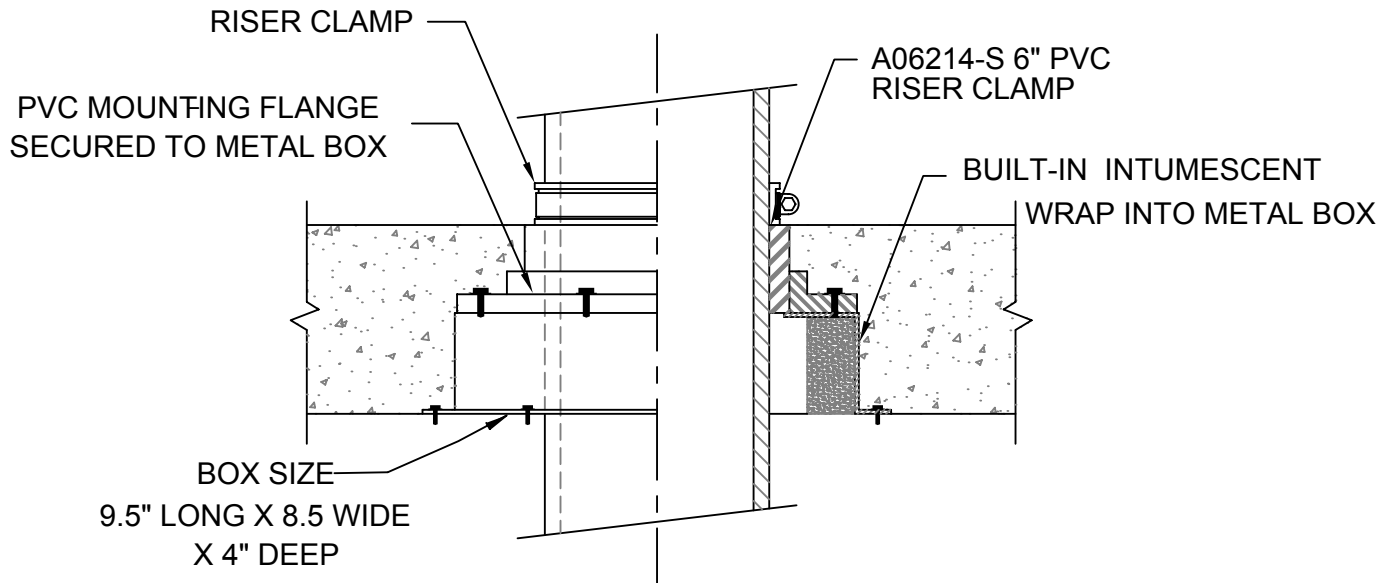

IMPORTANT NOTES :

1. Use nails through the holes in the metal box to mount the 6" Self-Seal unit to the deck form.
2. After concrete is poured, remove protective concrete cap.
3. Insert the through pipe from either the top or the bottom side of the PVC Coupling top extension and install a Riser Clamp around the pipe to support and draft stop.



W.H. Directory Reference 02 Edition
Firestop Device
W.H. Design No. PS/PH 120-16
F Rating 2 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
5-31-21
DRG . NO .
C-9049-A6