


# SELF SEAL SLEEVE ASSEMBLY

EXTENDING INTO A NON RATED WALL  
FOR FLOOR / CEILING ASSEMBLIES

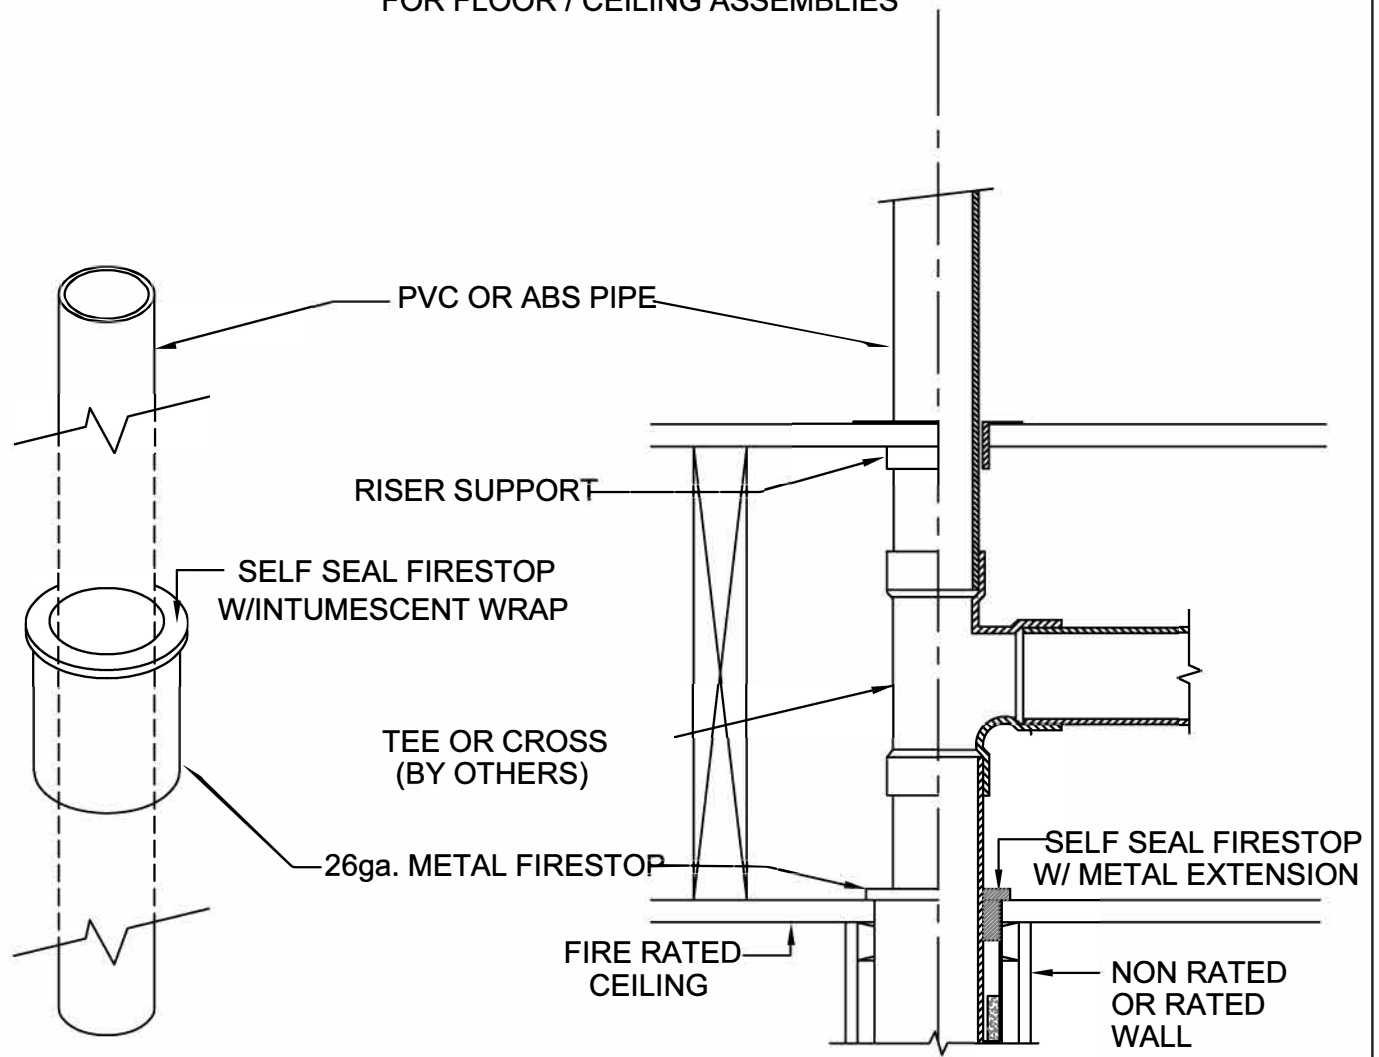

## IMPORTANT NOTES:

1. Drill a 3" hole through the plate for a 2" Self Seal Sleeve, a 4 1/2" hole for a 3" and a 6" hole for a 4". Drill a 3" hole through the floor for 2", a 4" for 3" and a 5-5/8" hole for 4" for the Riser Support fitting.
2. Secure the Riser Support through the flange holes with nails or screws.
3. Install the Piping through both the Riser floor Support and the Self Seal ceiling firestop assembly .
4. A sanitary tee or cross (by others) may be used to connect other stacks or floor mounted fixtures within the concealed floor/ceiling space.

Note: PVC or ABS pass through pipe may be used through the floor/ceiling assembly.  
Using the proper size holes as shown above will eliminate using any fire caulking.



W.H. Directory Reference 99 Edition  
Firestop Device  
W.H. Design No. PS/PV 120-06  
F Rating 2 Hrs.



**PROSET**<sup>®</sup>  
**SYSTEMS**  
FIRESTOP PENETRATOR<sup>™</sup>

DATE :  
5-31-21  
DRG . NO .  
C-9049-E