


PROSEAL PLUG DEVICE

CONCRETE ON WOOD FORM
FOR FLOORS OR WALLS

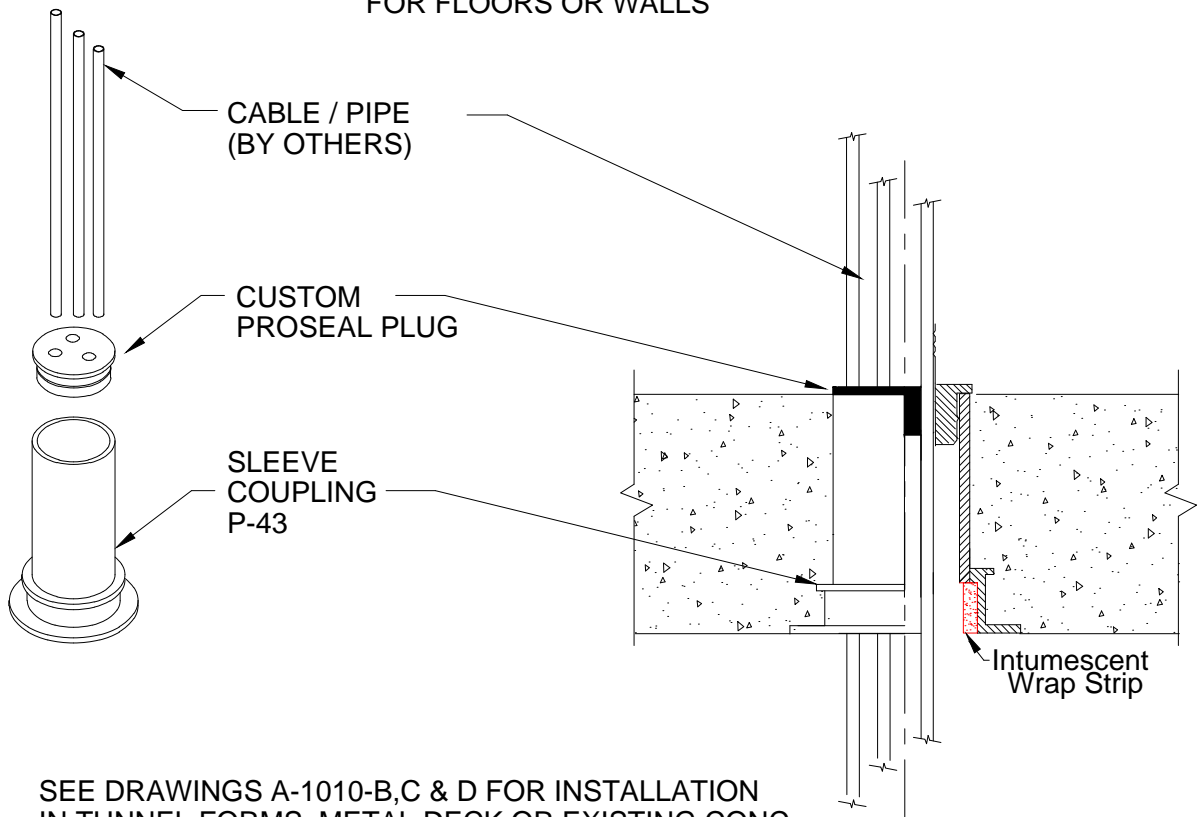

SEE DRAWINGS A-1010-B,C & D FOR INSTALLATION
IN TUNNEL FORMS, METAL DECK OR EXISTING CONC.

IMPORTANT NOTES :

1. Use nails through flange holes to mount the sleeve coupling to the deck.
2. After concrete is poured, remove protective cap.
3. Insert the cables or pipes through the sleeve coupling.
4. Push the pipes or cables into the proper size split holes in the ProSeal Plug at one end of the sleeve coupling.
5. Drive the ProSeal Plug into the sleeve with a hammer.
6. When pass through pipe is insulated, cut the insulation at the top of the sleeve for the ProSeal Plug insertion.

NOTE: Various custom multiple openings are available through blank ProSeal Plugs, see component drawing P-10 for measurements.



W.H. Directory Reference 99 Edition
Firestop Device
W.H. Design No. PS/PH 180-04
F Rating 3 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
1-10-06
DRG . NO .
A-1003-A3