


PROSEAL PLUG SLEEVE ASSEMBLY

CORED HOLE THROUGH CORRUGATED METAL DECK FOR FLOORS

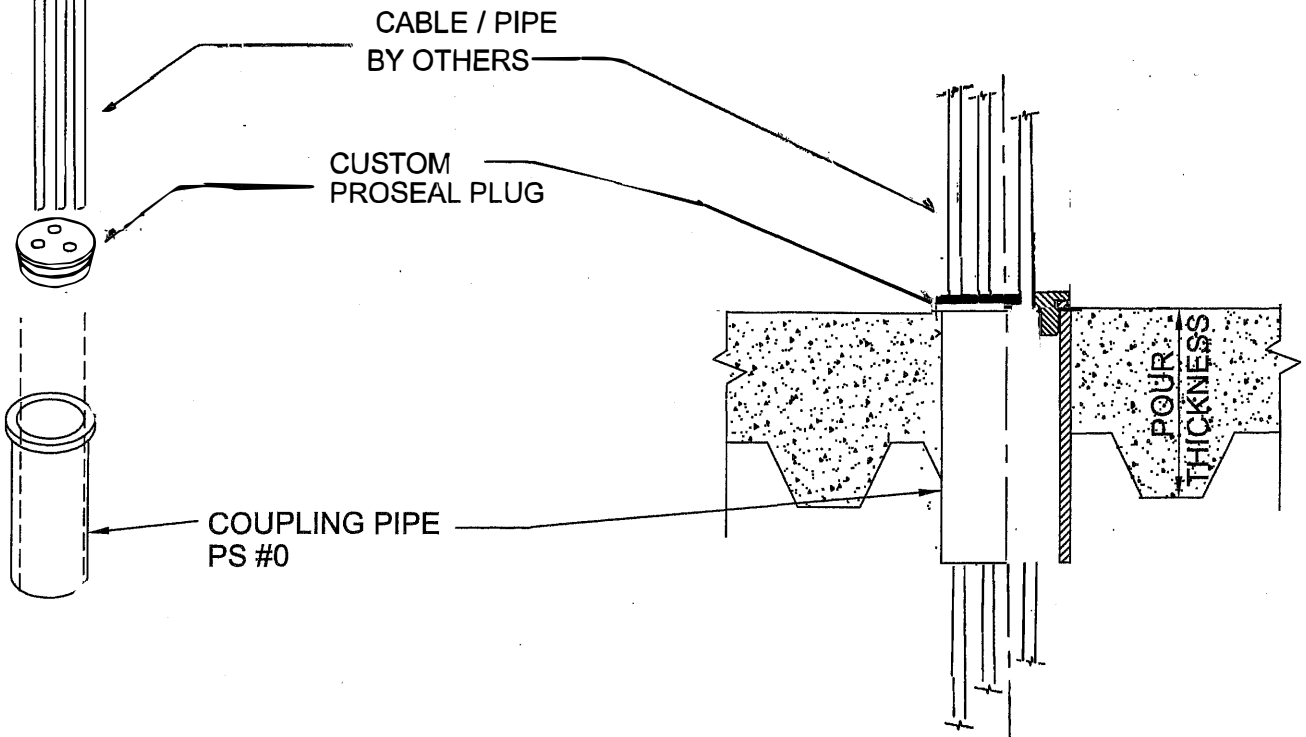

EXPLODED VIEW

IMPORTANT NOTES :

1. For 2" Coupling Pipe drill a 2 3/4" cored hole.
2. Install a bead of ProSet Caulk around the coupling flange to waterproof.
3. Insert pass through cable or piping up through the sleeve coupling.
4. Push the pipes or cables into the proper size split holes in the ProSeal Plug on top of the sleeve.
5. Drive the ProSeal Plug into the sleeve with a hammer.



W.H. Directory Reference 97 Edition
Firestop Device
W.H. Design No. PS/PHV 120-03
F Rating 2 Hr. or 3 Hrs. or 4 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
5-31-21

DRG . NO .
A-1003-DC