


PROSEAL PLUG SLEEVE ASSEMBLY

FOR CORED HOLES THROUGH FLOORS

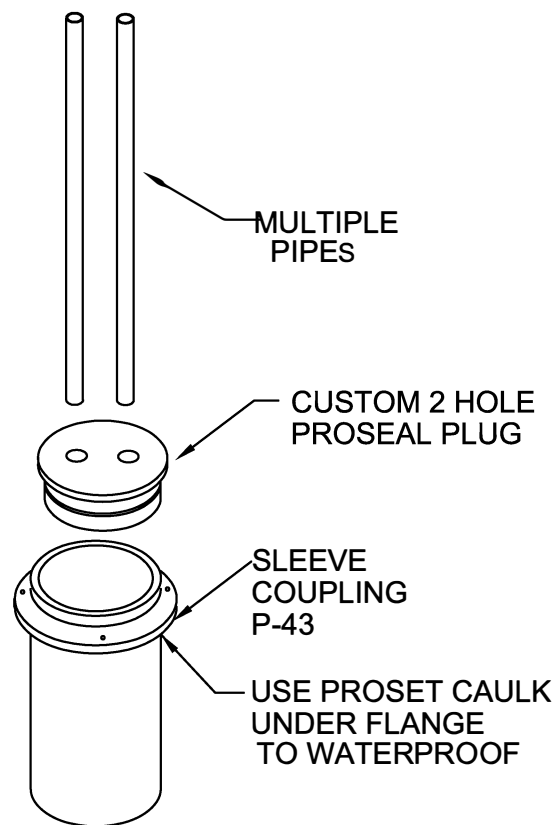

EXPLODED VIEW

IMPORTANT NOTES :

1. For 2" Coupling Pipe drill a 2 3/4" cored hole.
2. Install a bead of ProSet Caulk around the coupling flange to waterproof.
3. Insert pass through piping up through the sleeve coupling.
4. Install the custom size split ProSeal Plug around the pipes & insert into the sleeve coupling.
5. Use two ProSeal plugs for wall installations.
6. Penetrations used in a series must be spaced 2" apart side by side.



W.H. Directory Reference 99 Edition
Firestop Device
W.H. Design No. PS/PHV 120-03
F Rating 2 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
5-31-21

DRG . NO .
A-1003-DR