


PROSEAL PLUG DEVICE

INSULATED PIPING THROUGH CONCRETE ON WOOD FORM
FOR FLOORS OR WALLS

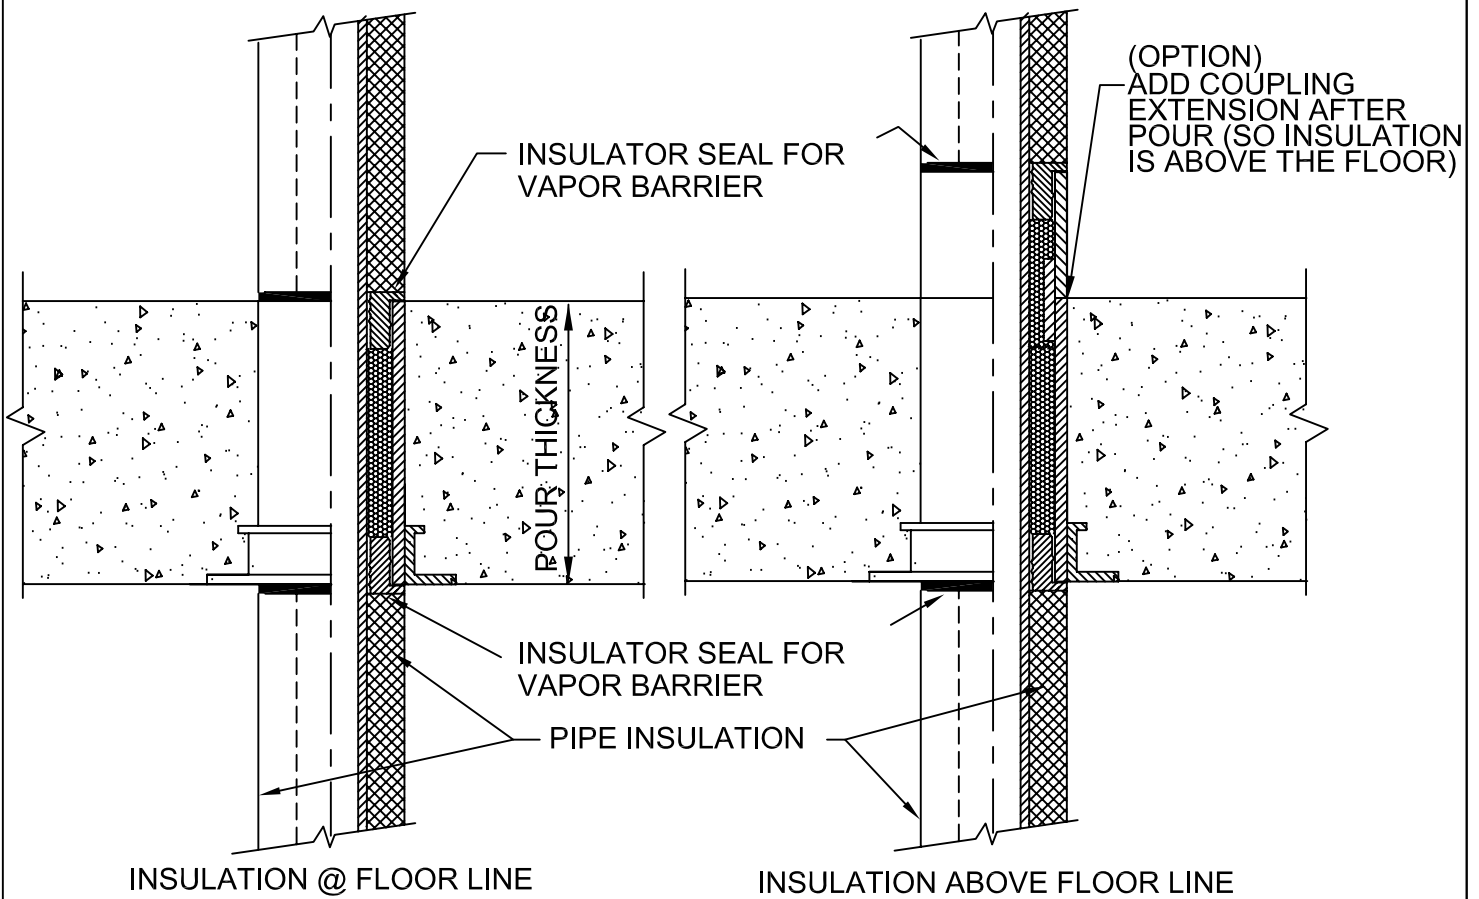

IMPORTANT NOTES :

1. Firefill should be firmly packed in the sleeve coupling.
2. Insulation should butt against Proseal Plug.
3. Insulator should use adhesive cement between insulation and the Proseal Plugs to seal for vapor barrier when using chilled water lines.



W.H. Directory Reference 99 Edition
Firestop Device
W.H. Design No. PS/PHV 180-02
F Rating 3 Hrs. or 4 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
1-10-10

DRG. NO.
A-1004-A
B,C OR D