


WATER DAM PROSEAL PLUG ASSEMBLY

CONCRETE ON WOOD FORM
FOR FLOORS OR WALLS

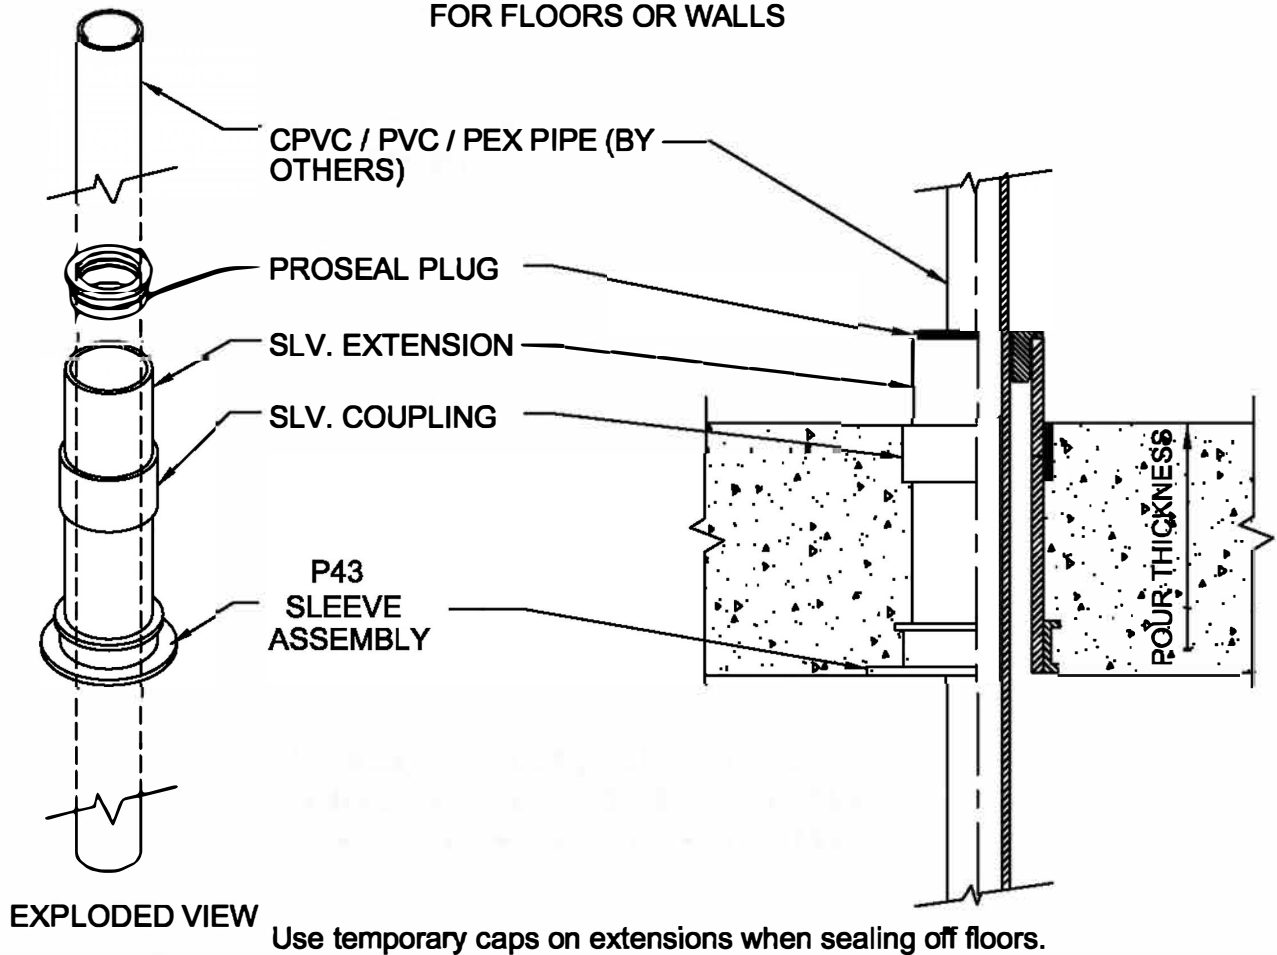

EXPLODED VIEW

Use temporary caps on extensions when sealing off floors.

IMPORTANT NOTES :

1. Use nails through flange holes to mount the sleeve assembly to the deck.
2. After concrete is poured, remove protective cap that is flush with the finish floor.
3. Solvent cement the sleeve extension into the coupling to raise the sleeve above the floor.
4. Install the pass through pipe through the sleeve and the top extension.
5. Install the proper size split ProSeal Plug around the cpvc pipe & drive in from the top side.

Important: See drawing A-1010-ACR for waterproofing.



W.H. Directory Reference 99 Edition
Firestop Device
W.H. Design No. PS/PHV 120-04
F Rating 2 Hrs. or 3 Hrs or 4 Hrs



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :

5-31-21

DRG . NO .

A-1011-AC