


# PROSEAL PLUG DEVICE

PRECAST CONCRETE OR EXISTING CONCRETE  
FOR FLOORS & WALLS

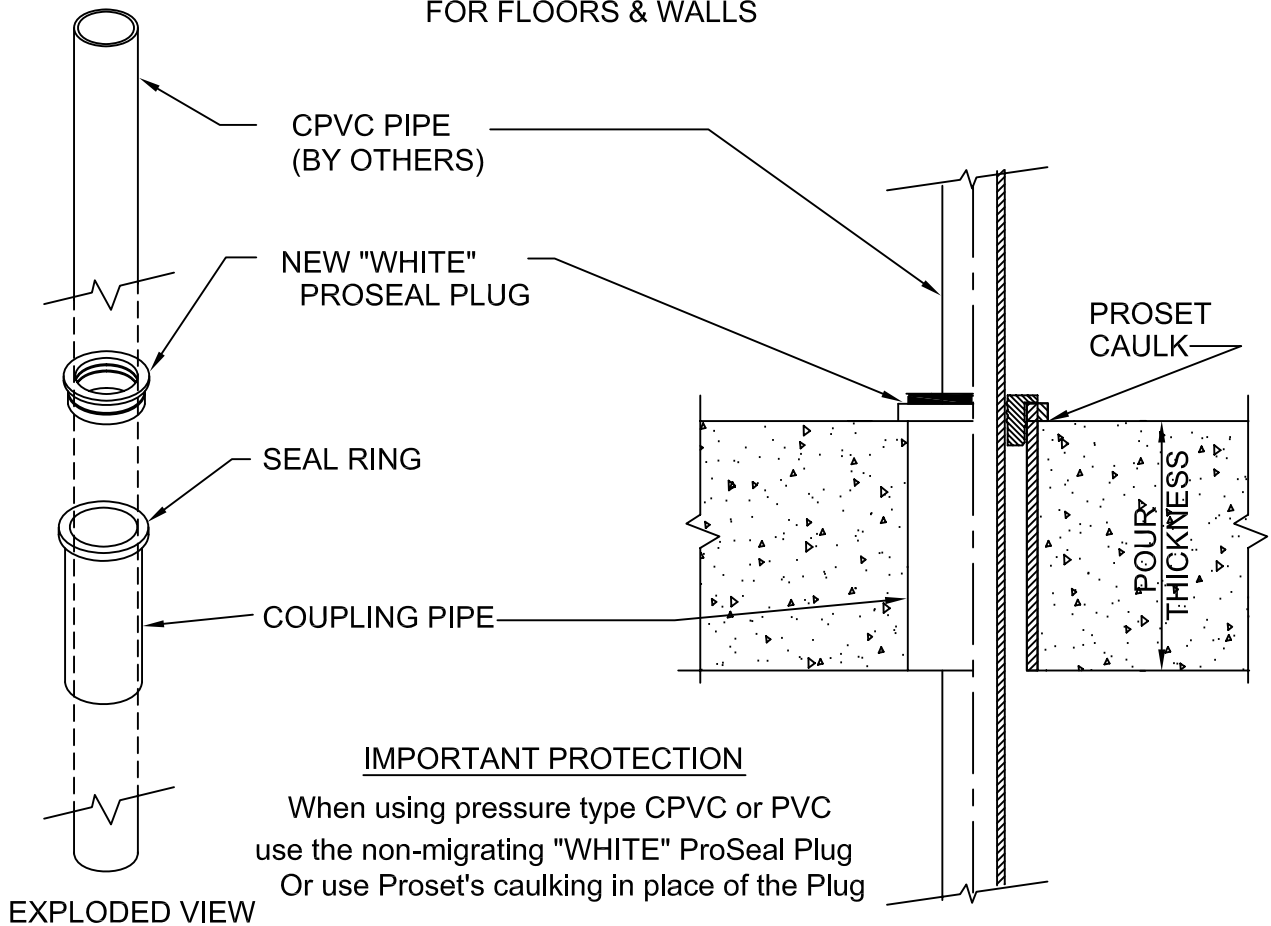

## IMPORTANT PROTECTION

When using pressure type CPVC or PVC  
use the non-migrating "WHITE" ProSeal Plug  
Or use Proset's caulking in place of the Plug

## IMPORTANT NOTES :

1. For 2" Coupling Pipe drill a 2 3/4" cored hole.
2. Optional: Install a bead of ProSet Caulk around the coupling flange to waterproof.
3. Insert pass through piping up through the sleeve coupling.
4. Install the proper size split ProSeal Plug around the pipe & drive into the sleeve coupling.
5. Completely fill the void, between the pipe & the sleeve and drive in from the top side.
6. Use two ProSeal plugs for wall installation. - See Drg. No. A-1011-F & G.
7. Use Seal Ring in middle of Coupling Pipe to secure within masonry wall.

Alternate : Plugs may be solvent cemented in for waterproofing and ease of installation.

IMPORTANT: The new non-migrating "WHITE" plug must be used - not the black.



W.H. Directory Reference 99 Edition  
Firestop Device  
W.H. Design No. PS/PHV 120-04  
F Rating 2 Hrs.



**PROSET**<sup>®</sup>  
**SYSTEMS**  
FIRESTOP PENETRATOR™

DATE :  
1-10-06

DRG . NO .  
A-1011-D