


PROSEAL PLUG DEVICE

CONCRETE ON WOOD OR METAL FORMS
FOR FLOORS

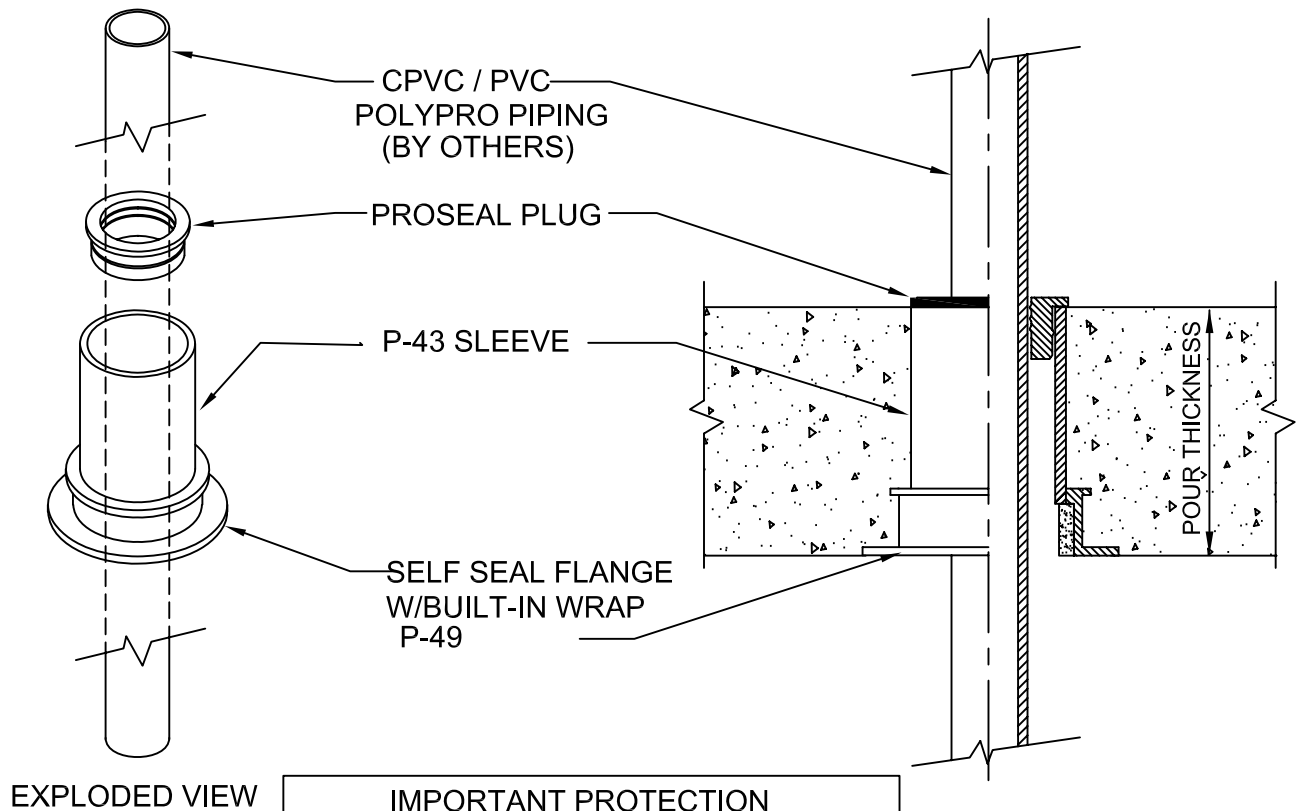

IMPORTANT PROTECTION

When using pressure type CPVC or PVC
use the White ProSeal Plug only.

IMPORTANT NOTES :

1. Use nails through flange holes to mount the sleeve coupling to the deck.
2. After concrete is poured, remove protective cap.
3. Insert pass through piping up through the sleeve coupling.
4. Install the proper size split ProSeal Plug around the pipe & drive in from the top side.
The ProSeal Plug will support the vertical pass through piping floor to floor.

NOTE: For 2 Hr. F. Ratings See Drawing A-1011-A

IMPORTANT: Use the White ProSeal Plug for pressure type PVC or CPVC piping.



W.H. Directory Reference 01 Edition
Firestop Device
W.H. Design No. PS/PH 180-04
F Rating 3 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
1-10-06
DRG . NO .
A-1012-A