


PROSEAL PLUG DEVICE

PRECAST CONCRETE OR EXISTING CONCRETE
FOR FLOORS

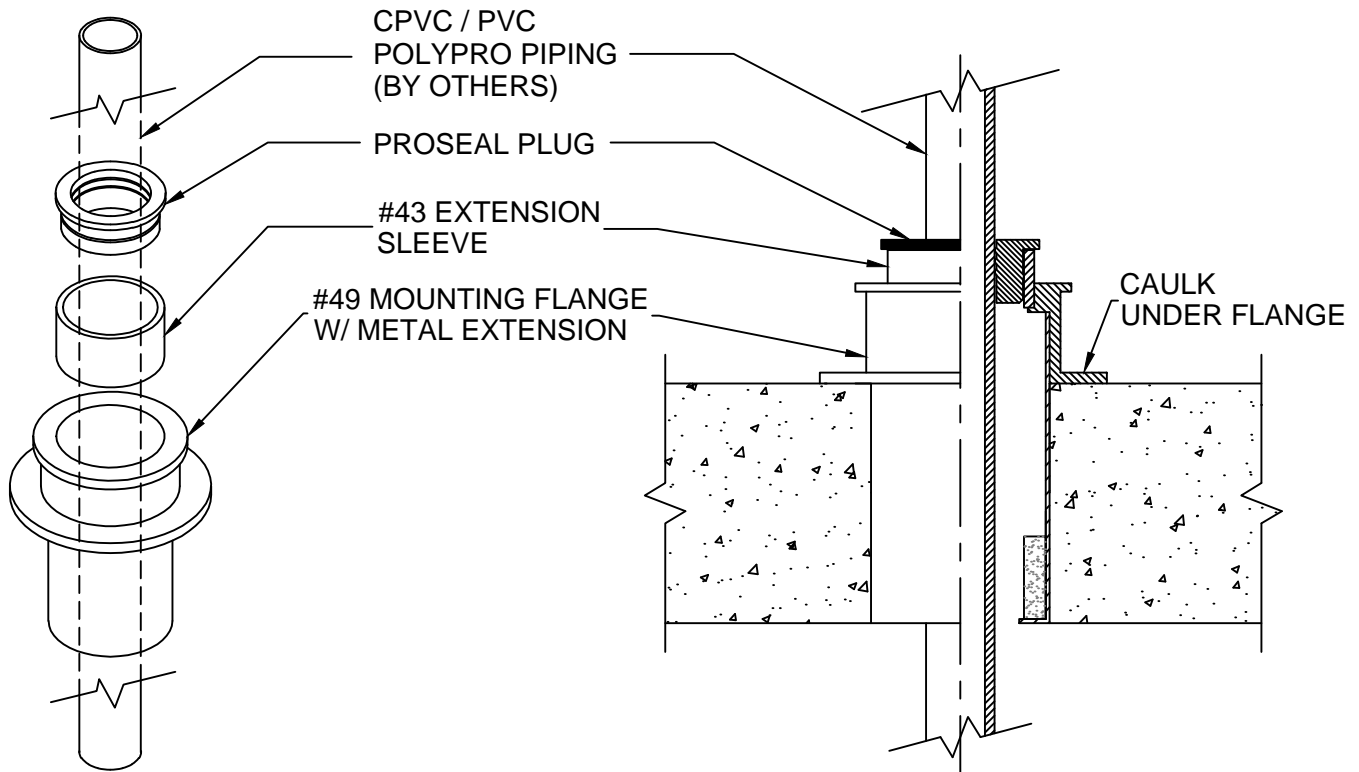

IMPORTANT NOTES :

1. For 1/2" through 1 1/2" piping drill a 3" cored hole.
2. Install a bead of ProSet Caulk around the sleeves flange for optional waterproofing.
3. Insert pass through piping up through the sleeve coupling.
4. Install the proper size split ProSeal Plug around the pipe & drive the plug into the sleeve.
The ProSeal Plug will support the vertical pass through piping floor to floor.

NOTE: For 2 Hr. F. Ratings See Drawing A-1011-D

IMPORTANT: Use the White ProSeal Plug for pressure type PVC or CPVC piping.



W.H. Directory Reference 98 Edition
Firestop Device
W.H. Design No. PS/PH 180-04
F Rating 3 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
12-18-2017
DRG . NO .
A-1012-DCHE