


BUILT-IN WRAP DEVICE FOR INSULATED PIPE

CONCRETE ON WOOD FORM
FOR FLOORS OR WALLS

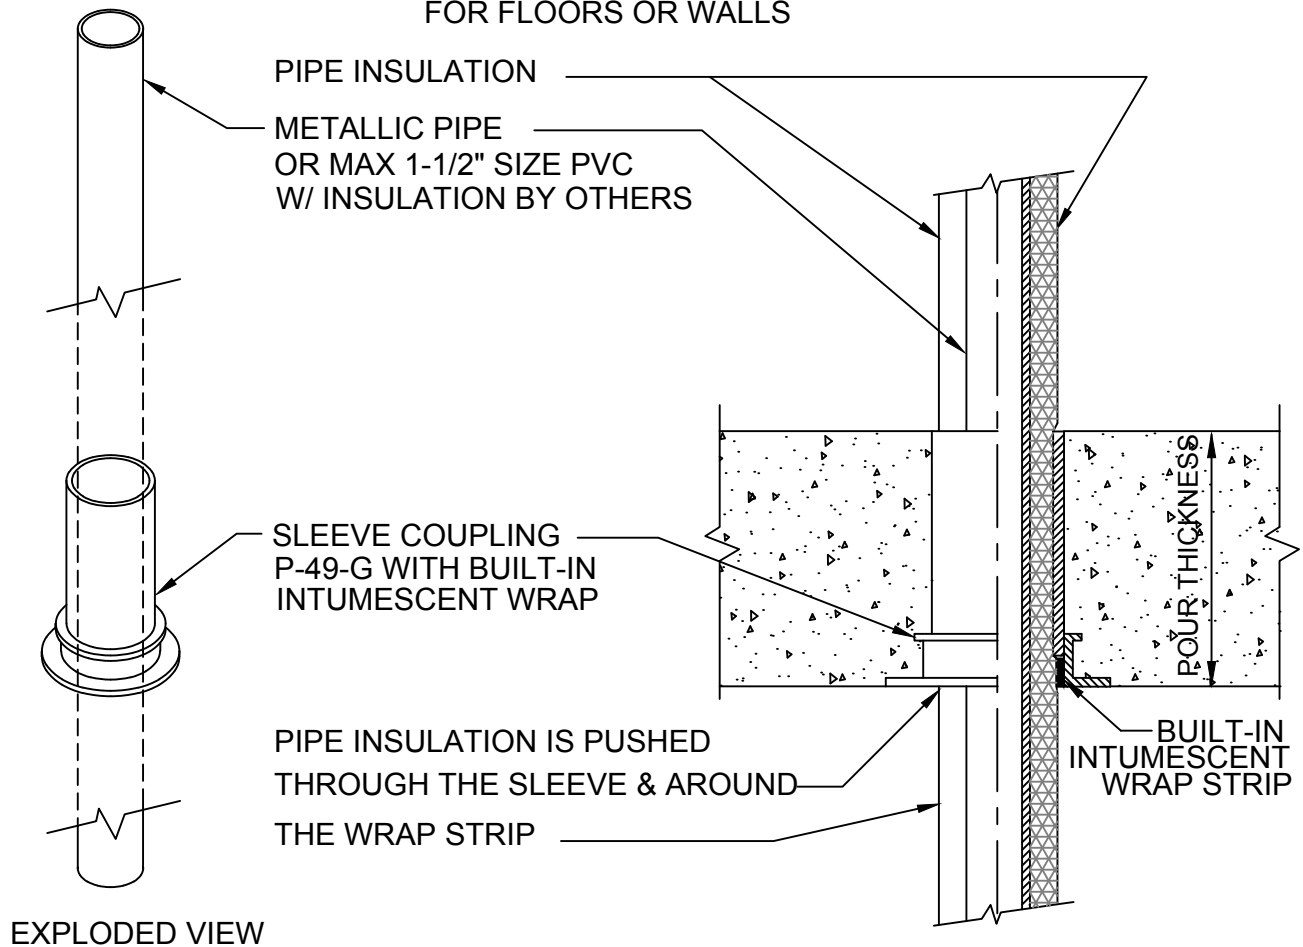

IMPORTANT NOTES :

1. Use nails or screws through flange holes to mount the sleeve coupling to the wood or metal deck.
2. After concrete is poured, remove protective cap.
3. Insert insulated pass through metallic piping up through the sleeve coupling.
(The pass through piping should be supported on both sides of the penetration.)
4. A Silicone caulk should be used to fill any void between the pipe insulation and the sleeve.



W.H. Directory Reference 00 Edition
Firestop Device
W.H. Design No. PS/PHV 180-03
F & T Ratings 3 Hrs



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
08-01-18
DRG . NO .
A-1016-ai