


PROSEAL CLOSET STUB

POURED CONCRETE ON WOOD OR STEEL FORMS
FOR FLOORS

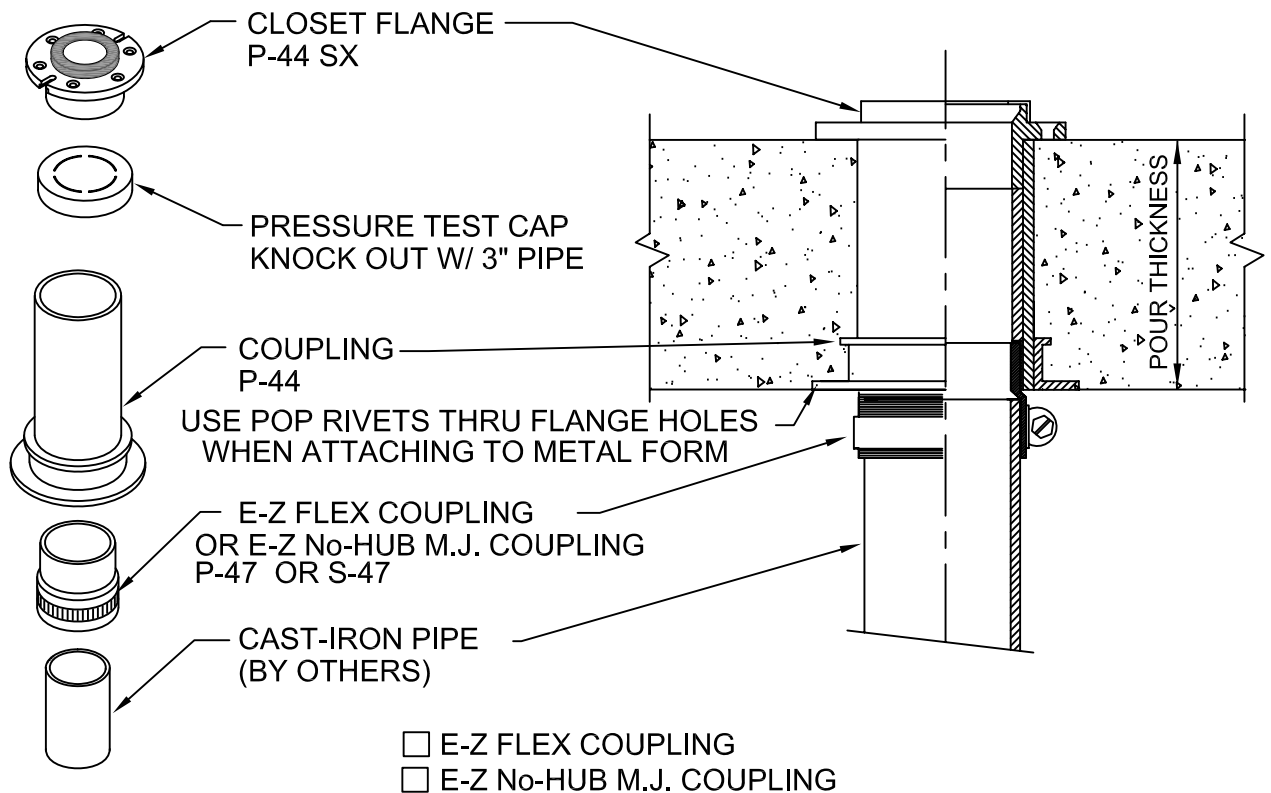

IMPORTANT NOTES :

1. Use nails through flange holes to mount the coupling to the deck.
2. After concrete is poured, do not remove test cap until testing is done and * closet is ready to set.
* Use a 3" pipe to knock out test cap. The knock out piece is sized not to fall into the drain line
- * 3. Insert & solvent weld the * E-Z Flex or E-Z No-Hub into the bottom of the coupling
4. Connect the closet bend into the E-Z Flex or E-Z No-Hub & tighten S.S. band.
5. Insert & solvent cement the P-44-SX closet flange with the built-in seal into the stub and set toilet.
* A special P44-HX flange is available in a longer 4" extension length if the finished floor is raised.
* The new elastomeric seal on this flange has been tested to hold a 10 ft. head of water pressure.
* See E-Z Flex installation instructions.

W.H. Directory Reference 01 Edition
Firestop Device
W.H. Design No. PS/PH 120-13
F Rating 2 & 3 Hrs.

 **PROSET**[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
1-10-08
DRG . NO .
B-4402-A