


4" WALL OUTLET CLOSET STUB ASSEMBLY

CONCRETE ON WOOD FORM

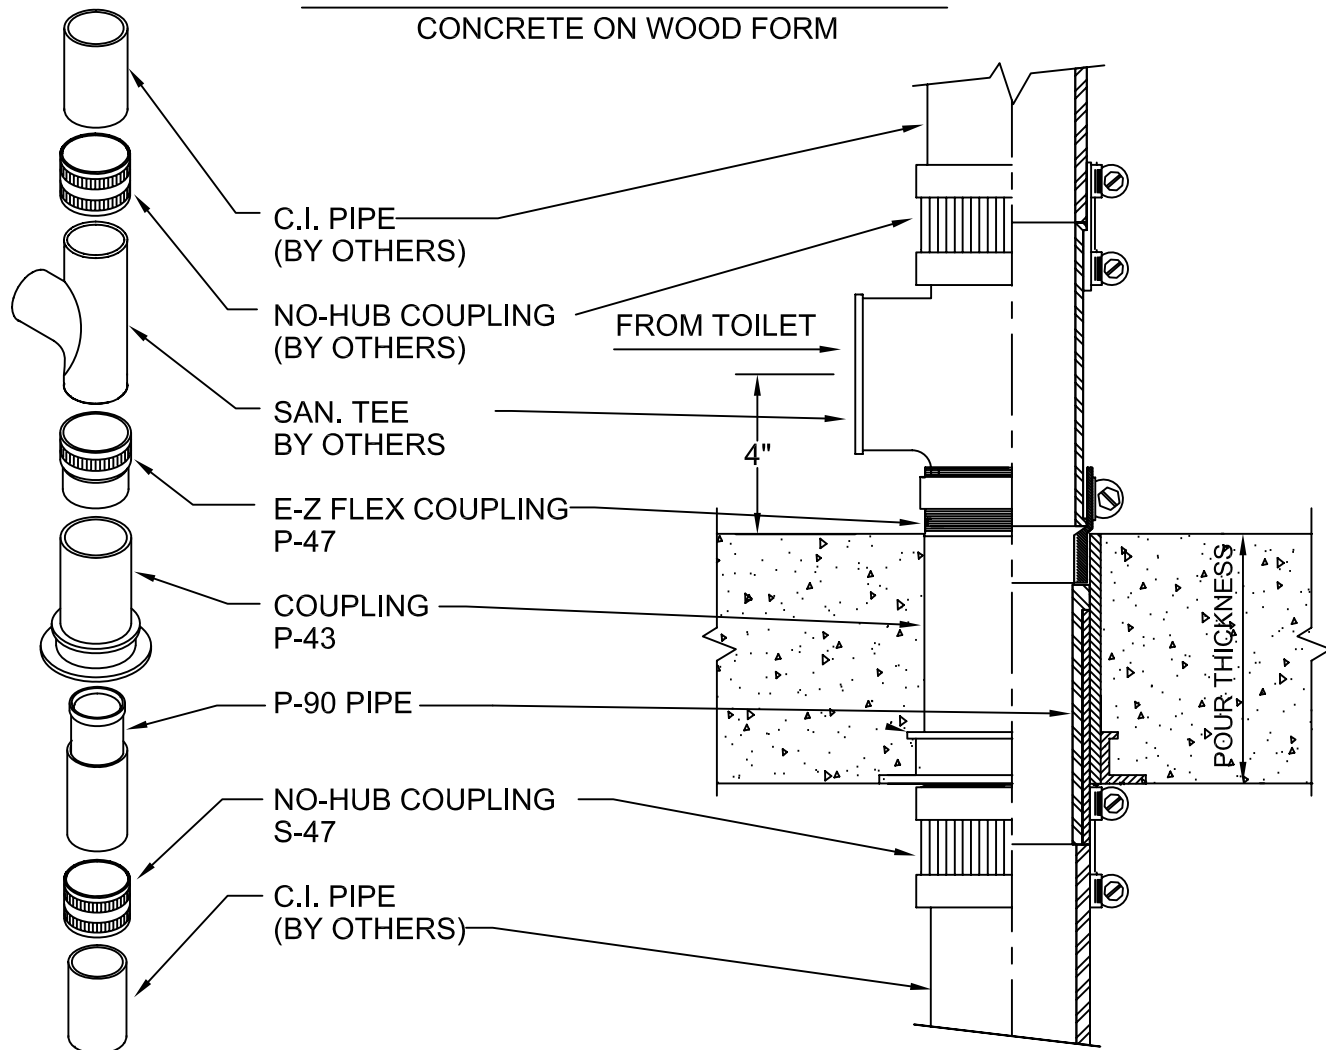

IMPORTANT NOTES :

1. Use nails through flange holes to mount the sleeve coupling to the deck.
 2. After concrete is poured, remove protective cap.
 - * 3. Insert & solvent weld the E-Z Flex into the top of the coupling.
 4. Install the sanitary tee into the E-Z Flex at the bottom & a regular no-hub coupling on the top.
 5. Install the proper size P-90 pipe into the bottom of sleeve coupling & connect the S-47 coupling to the other cast iron pipe.
 6. Connect water closet or battery of closets to the low tee opening.
- * See E-Z Flex installation instructions.



W.H. Directory Reference 97 Edition
Firestop Device
W.H. Design No. PS/PH 120-01
F Rating 2 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
1-10-06

DRG . NO .
B-4403-A