


HUB DRAIN FITTING ASSEMBLY

CONCRETE ON WOOD FORM FOR FLOORS

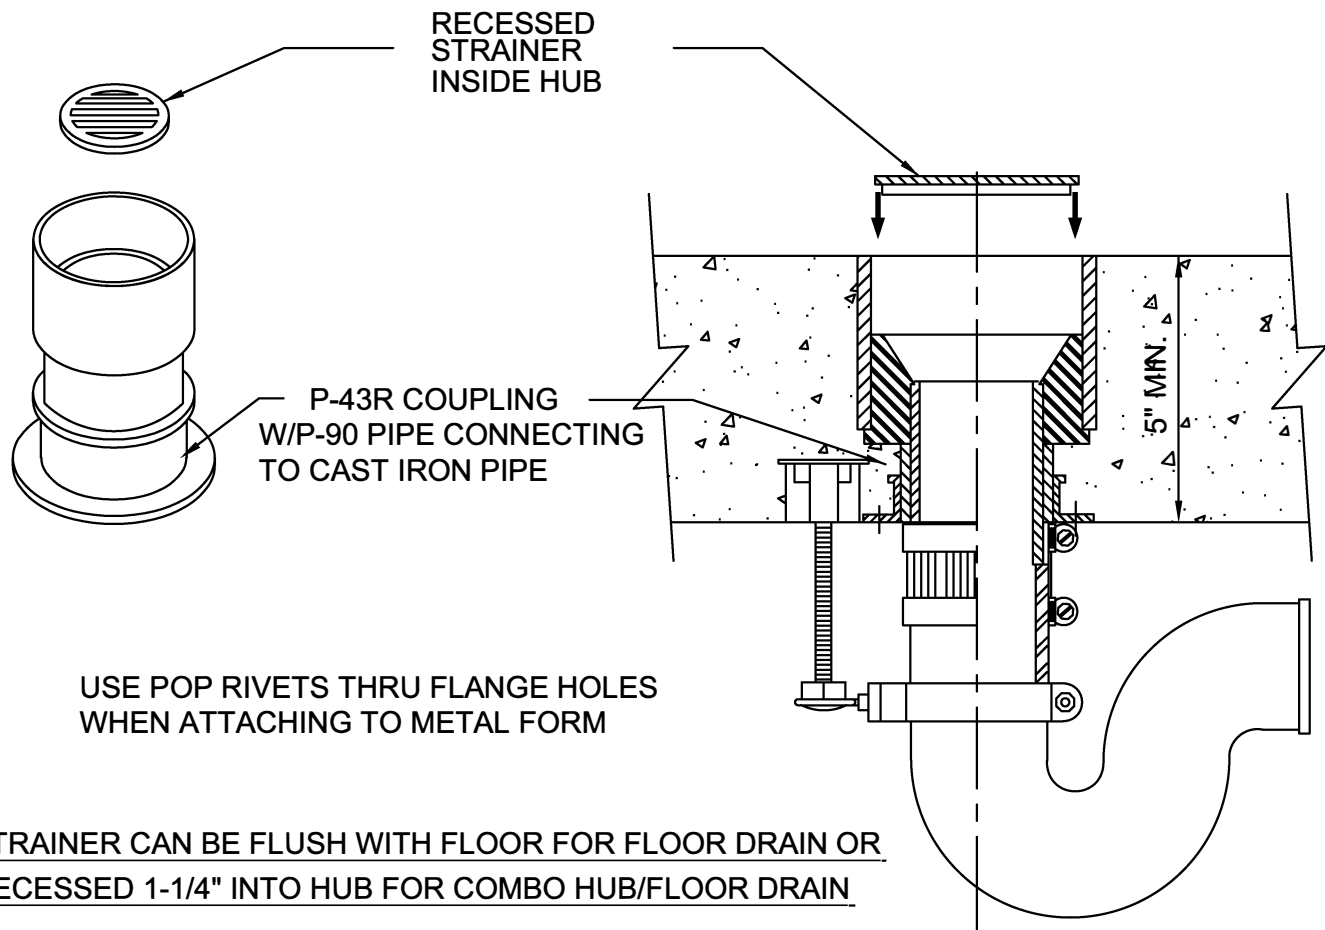

IMPORTANT NOTES :

1. Use nails through flange holes to mount the hub drain to the deck.
2. Set the P-01 insert abutting against the mounting flange.
3. After the concrete pour, remove protective cap.
4. Insert & solvent weld the proper length P-90 pipe into the bottom of coupling.
5. Connect the P-Trap to the P-90 pipe using a E-Z no-hub coupling.
6. Install the S-01 hanger to the P-Trap in a secure manner.
7. After the pressure test, break out the knock out cap.
8. The hub drain can be extended above floor, discharge branches into the hub.



W.H. Directory Reference 99 Edition
Firestop Device
W.H. Design No. PS/PH 120-02
F Rating 2 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :

5-31-21

DRG. NO.
B-6110-A
B,C OR D