


HUB DRAIN FITTING ASSEMBLY

CONCRETE ON WOOD FORM FOR FLOORS

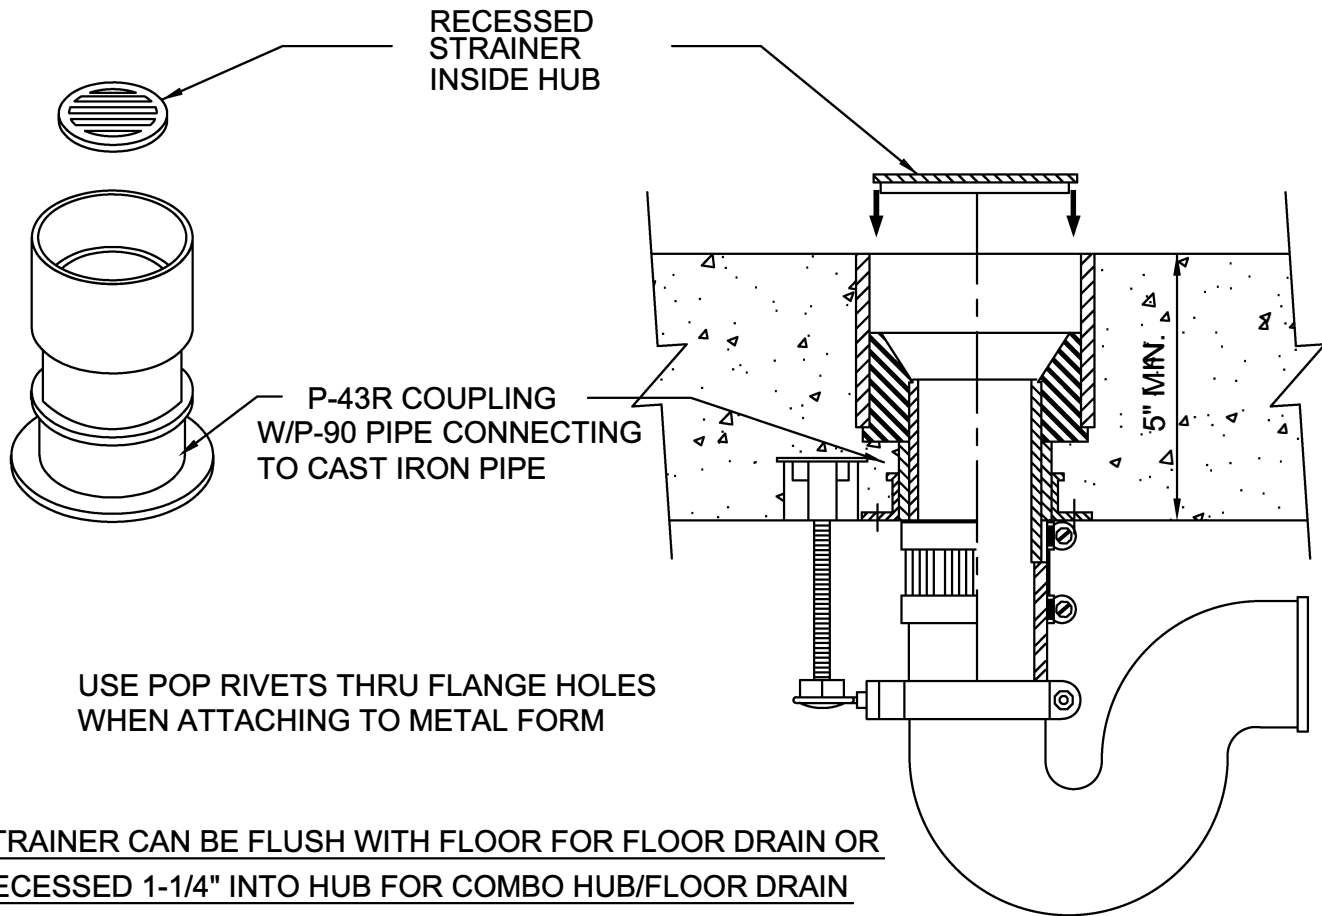

USE POP RIVETS THRU FLANGE HOLES
WHEN ATTACHING TO METAL FORM

STRAINER CAN BE FLUSH WITH FLOOR FOR FLOOR DRAIN OR
RECESSED 1-1/4" INTO HUB FOR COMBO HUB/FLOOR DRAIN

Size	Part No.	Description	Price	Unit Total
2"	P23FHDRS	2" x 3" Hub Drain W/ Recess Strnr.	22.10	
2"	P23FHDS	2" X 3" Hub Drain W/ Flush Strnr.	22.10	
3/8"	A00138	3/8" Concrete Insert	1.35	
2"	A02238	2" J-Bend Hanger Assembly	5.45	28.90
2"	P24FHDRS	2" X 4" Hub Drain W/ Recess Strnr.	30.60	
2"	P24FHDS	2" X 4" Hub Drain W/ Flush Strnr.	30.60	37.40

FURNISH THE DEPTH OF THE CONCRETE WHEN ORDERING

H = 6" replace 6" with your concrete slab size



W.H. Directory Reference 99 Edition
Firestop Device
W.H. Design No. PS/PH 120-02
F Rating 2 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
5-31-21

DRG. NO.
B-6110-Ap
B,C OR D