


PROSEAL CLOSET ASSEMBLY

CONCRETE ON WOOD OR STEEL FORMS FOR FLOORS

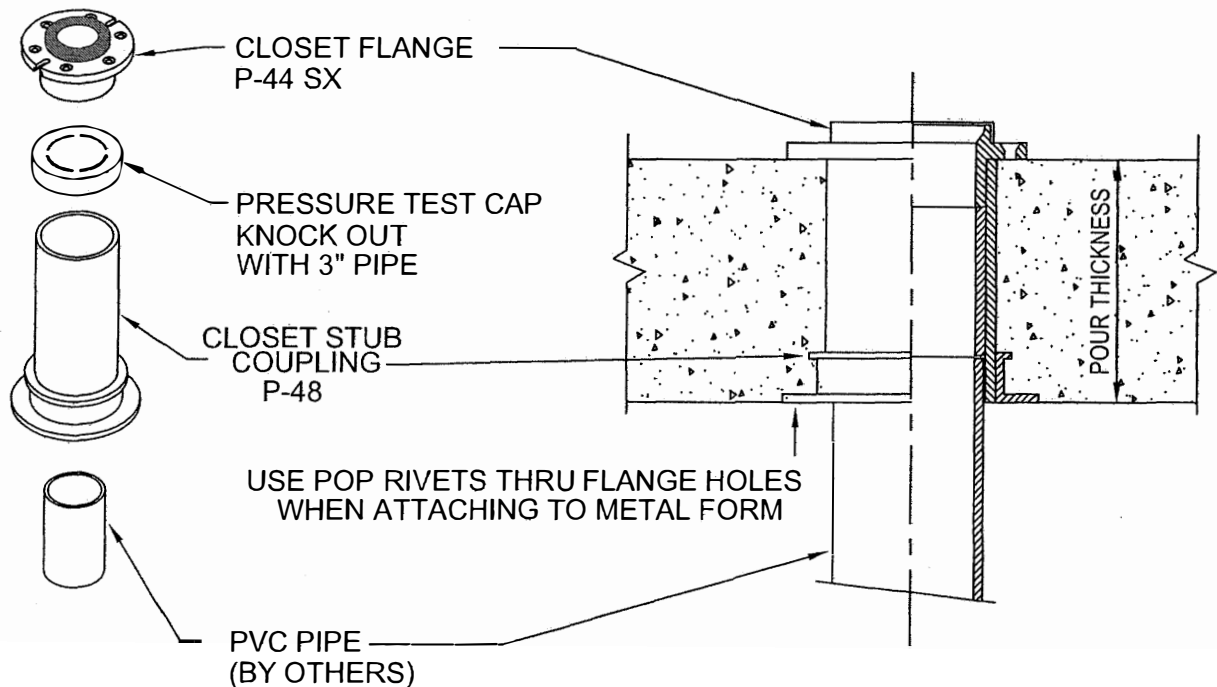

IMPORTANT NOTES :

1. Use nails through the flange holes to mount the Closet Stub to the deck.
2. After the concrete pour, do not remove the test cap until testing is done and * closet is ready to set.
* Use a 3" pipe to knock out cap. The knock out piece will not plug up the drain line
3. Solvent cement the branch piping directly into the bottom of the closet stub.
4. Insert & solvent cement the P-44-SX closet flange with the built-in seal into the stub and set toilet.
* A special P44-HX flange is available in a longer 4" extention lenght if the finished floor is raised.
* The new elastomeric seal on this flange has been tested to hold a 10 ft. head of water pressure.



W.H. Directory Reference 01 Edition
Firestop Device
W.H. Design No. PS/PH 120-15
F Rating 2 & 3 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :

5-31-21

DRG . NO .

C-4402-A