


TUB BOX FITTING ASSEMBLY

CONCRETE ON CORRUGATED METAL DECK FOR FLOORS

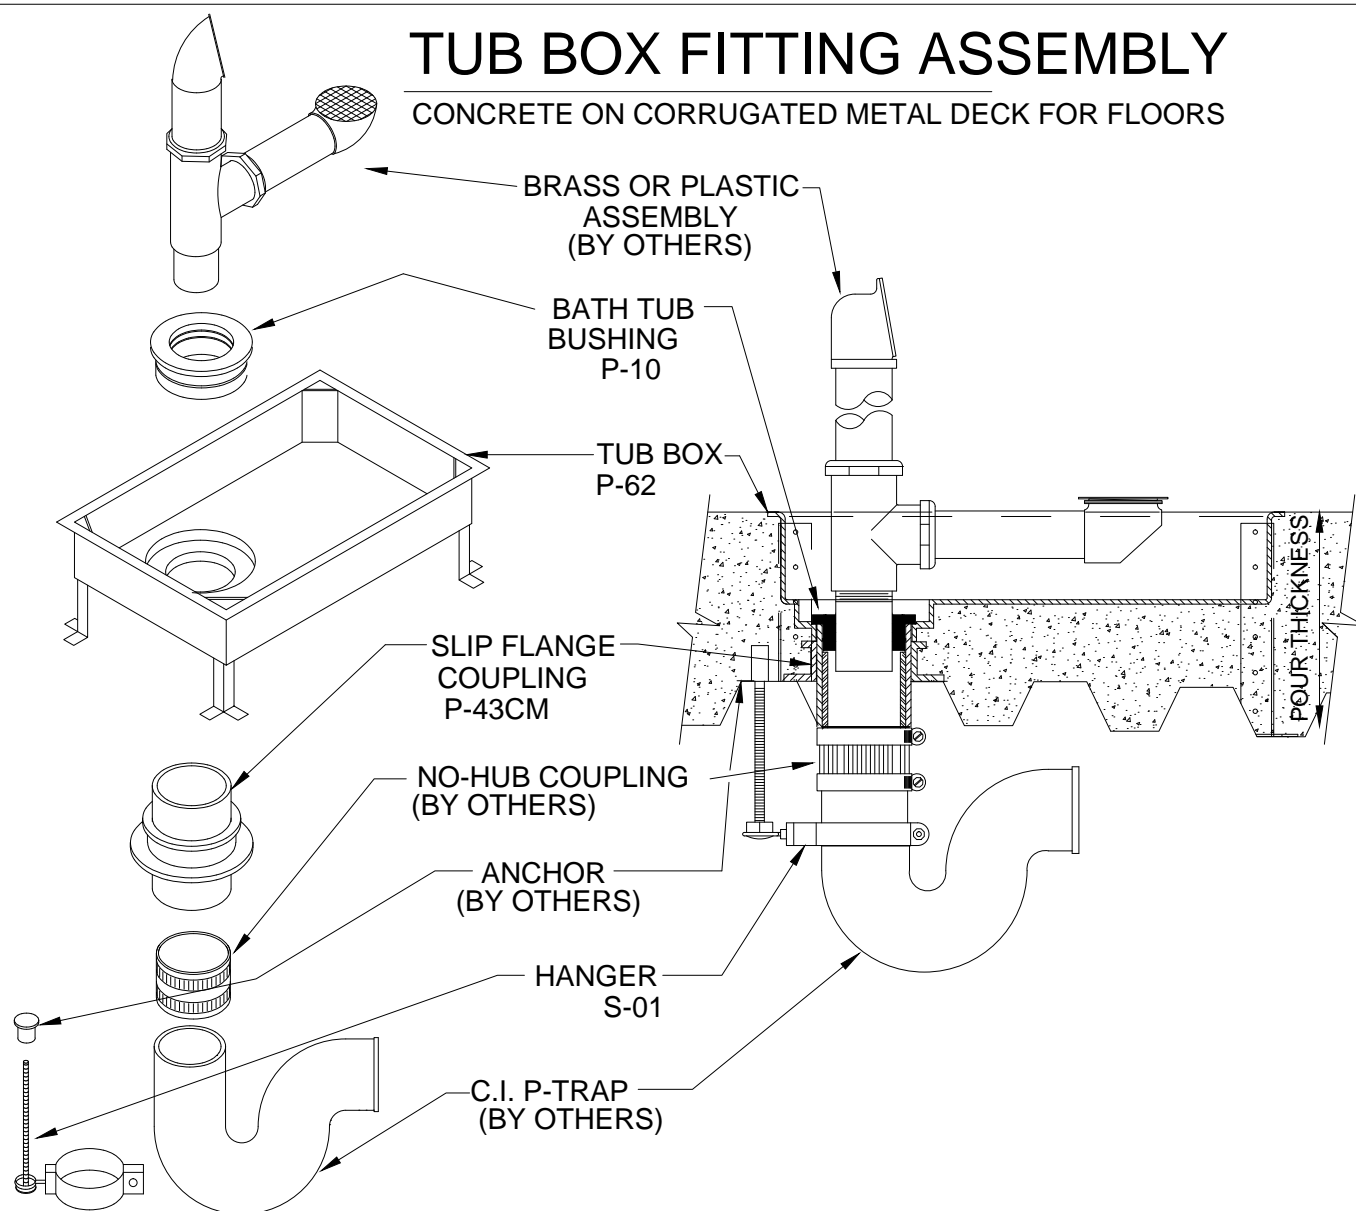

IMPORTANT NOTES :

1. Insert the proper height snap-in support legs & solvent cement the coupling into the socket in the tub box.
2. Cut hole through deck to accommodate the sleeve to the bottom of corrugations.
3. Mount coupling & legs to the corrugated metal with sheet metal screws, If necessary use right angle metal strips to span corrugation.
4. After the concrete pour, insert & solvent cement the P25902 P-90 stub-out fitting into the P-43CM coupling.
5. Install the cast iron P-Trap to the liner using a no-hub coupling & install the S-01 hanger to the P-Trap in a secure manner.
6. Remove styrofoam from tub box, knock out test plug & insert either a C25661 tub bushing for a pipe size or C25662 tube size W & O.



W.H. Directory Reference 97 Edition
Firestop Device
W.H. Design No. PS/PH 120-02
F Rating 2 Hr. or 3 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
05-31-21

DRG . NO .
B-6210-C