


PRECAST SHOWER SLEEVE ASSEMBLY

THRU CONCRETE ON WOOD OR STEEL FORMS
FOR SHOWER FLOORS

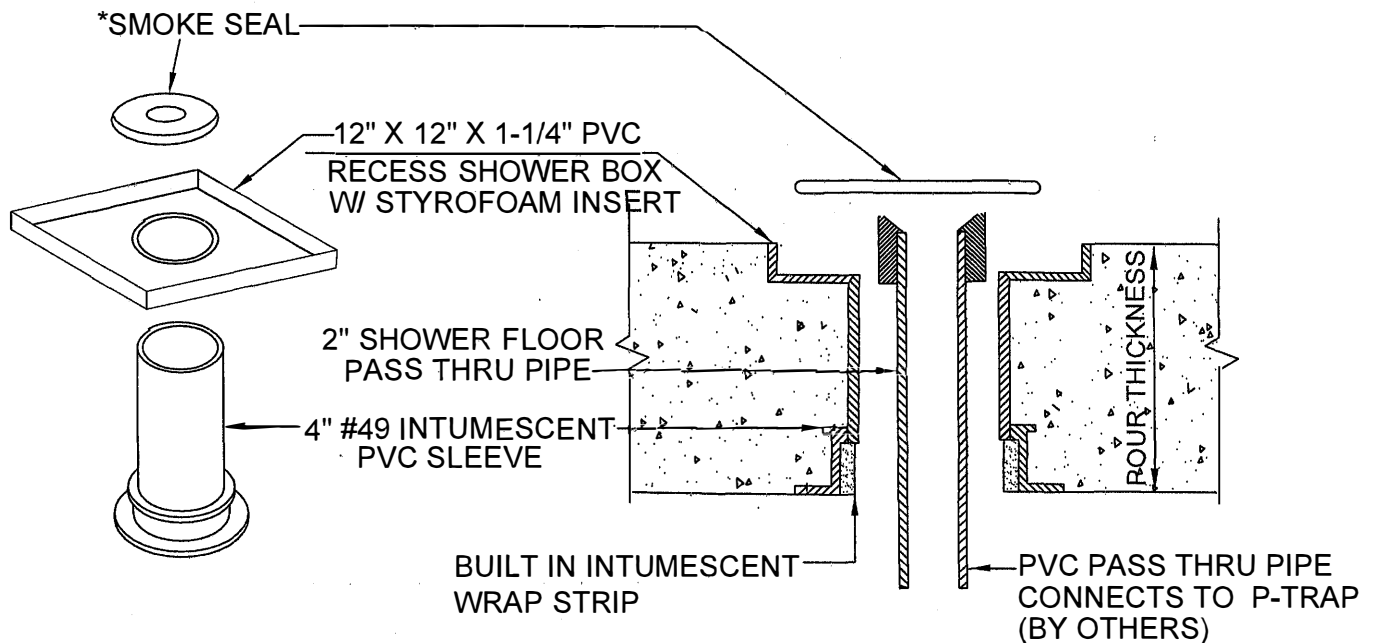

*As an alternate, mineral wood batt insulation can be installed from the bottom to replace the Smoke Seal.

IMPORTANT NOTES :

1. Use nails through the flange holes to mount the Shower Stub to the deck.
2. After setting the Shower Stub to the shower centerline, solvent cement the Box to the stub.
3. After the concrete pour remove the styrofoam from inside the recessed Shower Box.
4. Connect the 2" pass thru pipe to the shower drain and thru the 4" firestop sleeve.
5. Connect the 2" pass thru pipe to the branch P-Trap to complete the connection.



W.H. Directory Reference 01 Edition
Firestop Device
W.H. Design No. PS/PHV 180-03
F Rating 3 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR[™]

DATE :

5 -31-21

DRG . NO .

C-61-RSF