


CLEANOUT ASSEMBLY

PRECAST CONCRETE OR EXISTING CONCRETE
FOR FLOORS OR WALLS

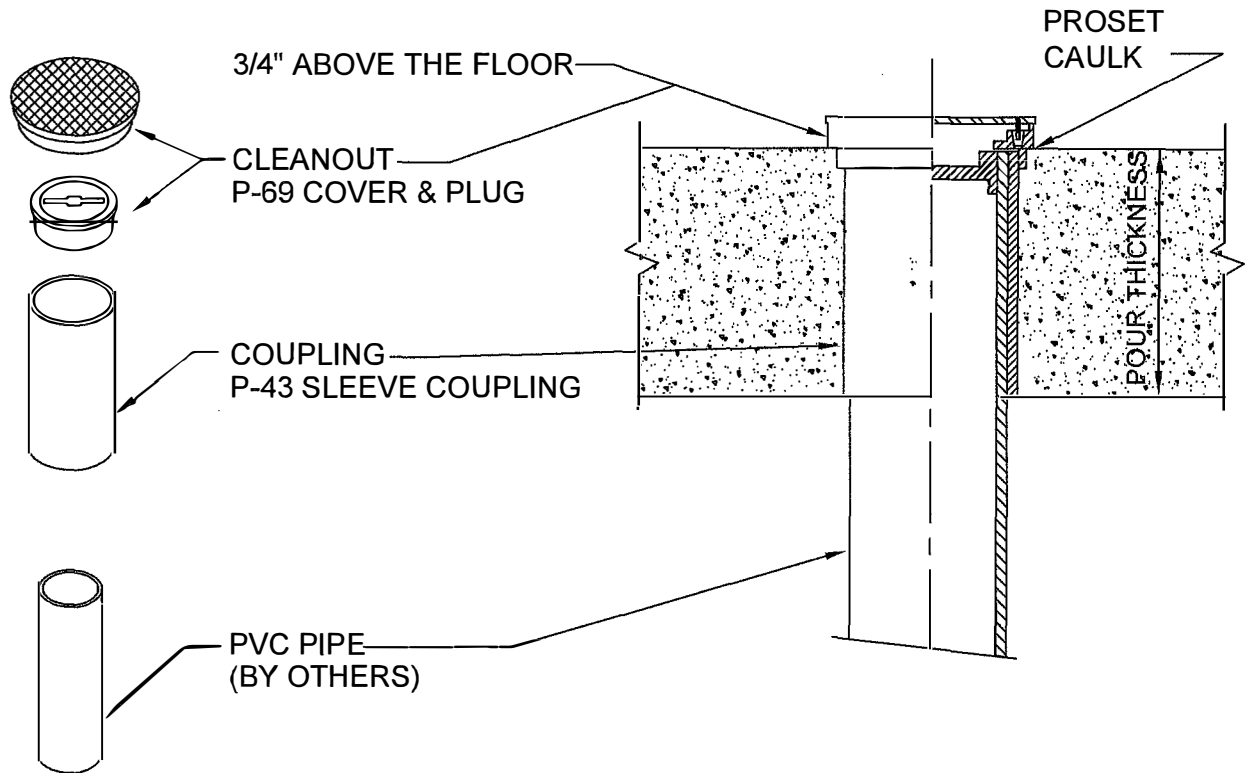

IMPORTANT NOTES :

1. Order Cleanout Stub height for recessing top down or extending top up to finish floor.
The top of the Cleanout body can be recessed for no topping or raised for additional topping.
2. For 2" Pipe drill a 2 3/4" hole, for 3" pipe a 4" hole and for 4" pipe a 5" hole.
3. Install a bead of ProSet Caulk under the Cleanout body to waterproof.
4. Connect the PVC or Cast Iron piping directly into the bottom of stub to complete the installation.



W.H. Directory Reference 99 Edition
Firestop Device
W.H. Design No. PS/PH 120-15
F Rating 2 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
5-31-21
DRG . NO .
C-6900-D