


# PROSEAL PLUG SLEEVE ASSEMBLY

CONCRETE ON WOOD FORM  
FOR FLOORS OR WALLS

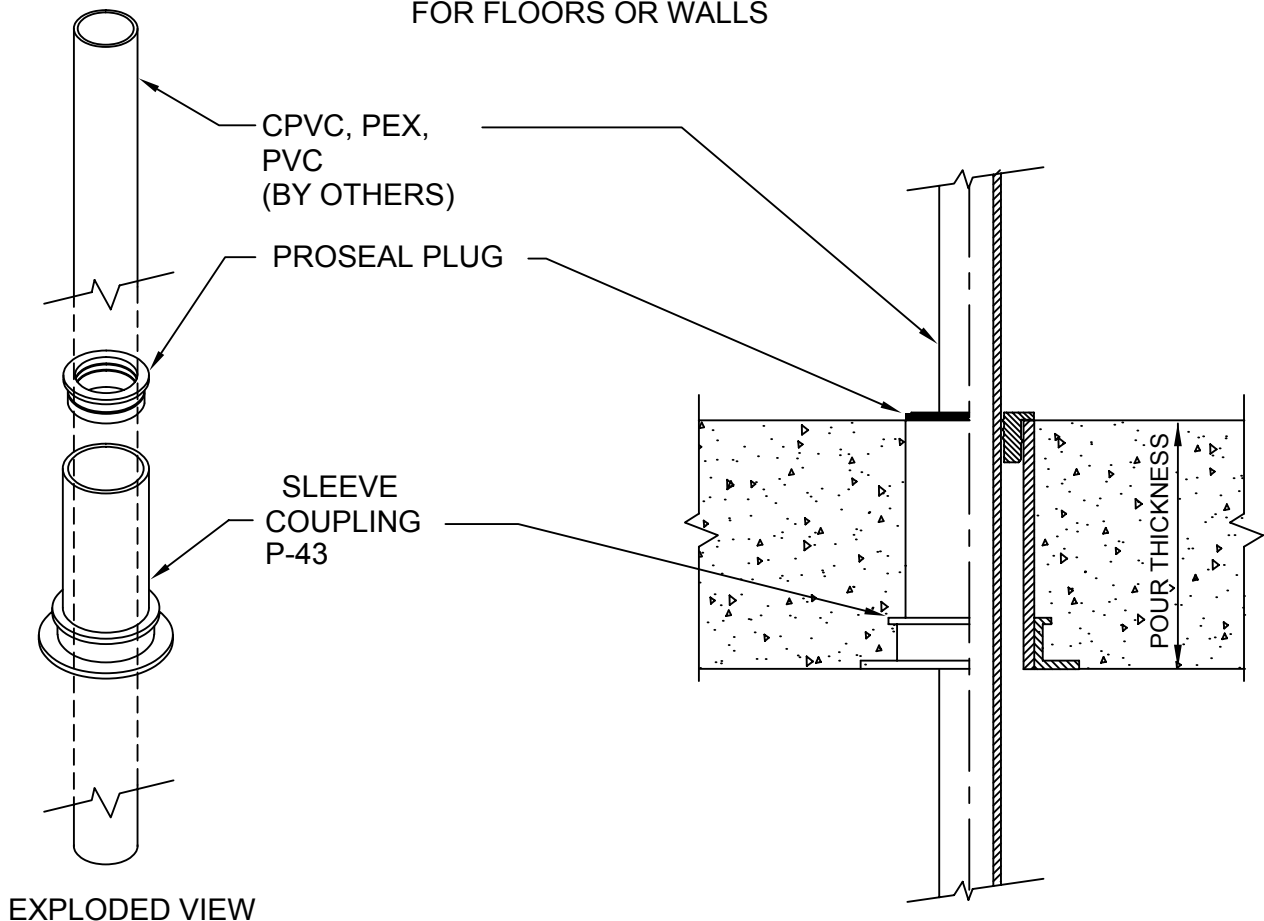

## IMPORTANT NOTES :

1. Use nails through flange holes to mount the sleeve coupling to the deck.
2. After concrete is poured, remove protective cap.
3. Insert pass through piping up through the sleeve coupling.
4. Install the proper size split ProSeal Plug around the pipe & drive in from the top side.
5. Use two ProSeal plugs for wall installation. - See Drg. No. A-1011-F & G.

Alternate : Plugs may be solvent cemented in for waterproofing and ease of installation. I

Important: See drawing A-1010-AC or ACR for waterproofing



W.H. Directory Reference 99 Edition  
Firestop Device  
W.H. Design No. PS/PHV 120-04  
F Rating 2 Hrs.



**PROSET**<sup>®</sup>  
**SYSTEMS**  
FIRESTOP PENETRATOR™

DATE :

5-31-21

DRG . NO .

A-1011-A