


FIRE RATED CLOSET FLANGE

FOR FLOOR / CEILING ASSEMBLIES

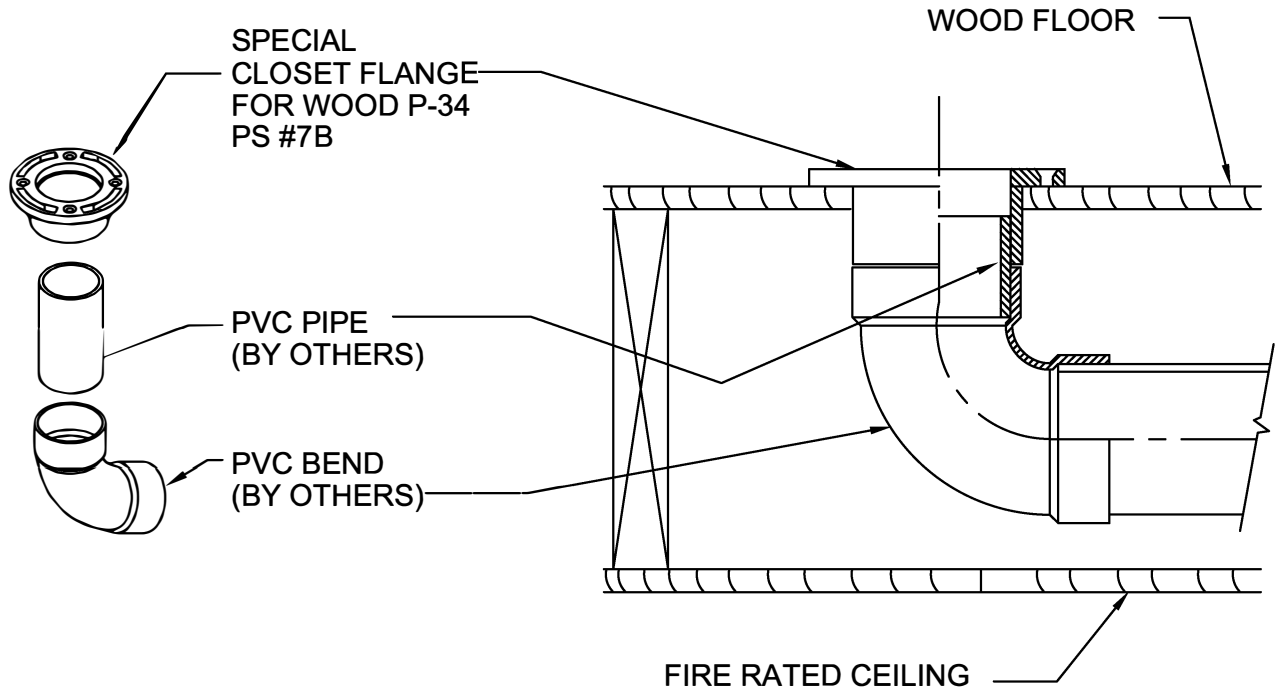

IMPORTANT NOTES :

1. Use a hole saw to drill a 4" or 5" hole through the wood floor. It is important to have the flange fit tight through the floor.
2. Insert the P-34 3" or 4" closet flange through the 4" or 5" holes.
3. Connect the PVC plastic pipe directly to the coupling flange in between the spandrel space.
4. Knock out the test cap & set water closet to the closet flange.



W.H. Directory Reference 99 Edition
Firestop Device
W.H. Design No. PS/PH 120-12
F Rating 1 Hr. or 2 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
5-31-21

DRG . NO .
C-3401-E