


T-RATINGS FOR CAST IRON STACKS

PRECAST OR EXISTING CONCRETE
FOR REQUIRED T. RATING FOR FLOORS OR WALLS

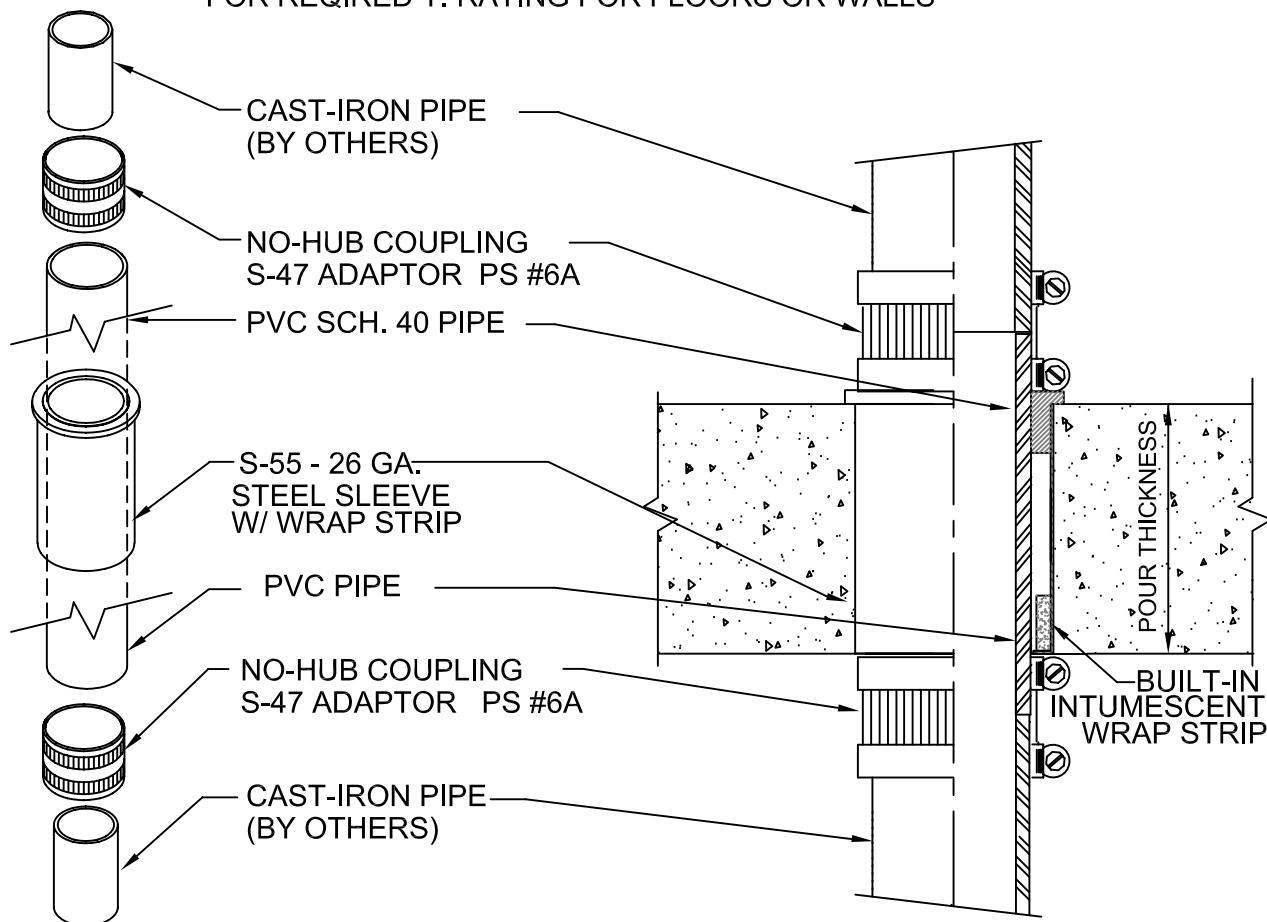

IMPORTANT NOTES:

1. Core hole through the concrete to fit the C.H. Coupling. See component drawing S-55-CH or below for proper core sizes. Install a bead of caulk under the Seal Ring to waterproof.
2. Insert and solvent cement PVC pipe through the metal sleeve to extend out 1 1/8" on the top and 1 1/8" out of the bottom.
3. Install the S-47 No-hub adaptor mechanical joint couplings to connect the cast iron pipe to the plastic Sch. 40 pipe.

Note: Complete unit can be factory assembled to simply insert into a cored hole.

Core a 3" hole for 2", a 4 1/2" hole for 3" and a 6" hole for 4" pipe.



W.H. Directory Reference 00 Edition
Firestop Device
W.H. Design No. PS/PHV 180-03
F Rating 3 Hrs. - T Rating 3 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
1-20-01

DRG . NO .
B-4807-D