


SOVENT STACK BOX

POURED CONCRETE ON WOOD FORM
FOR FLOORS

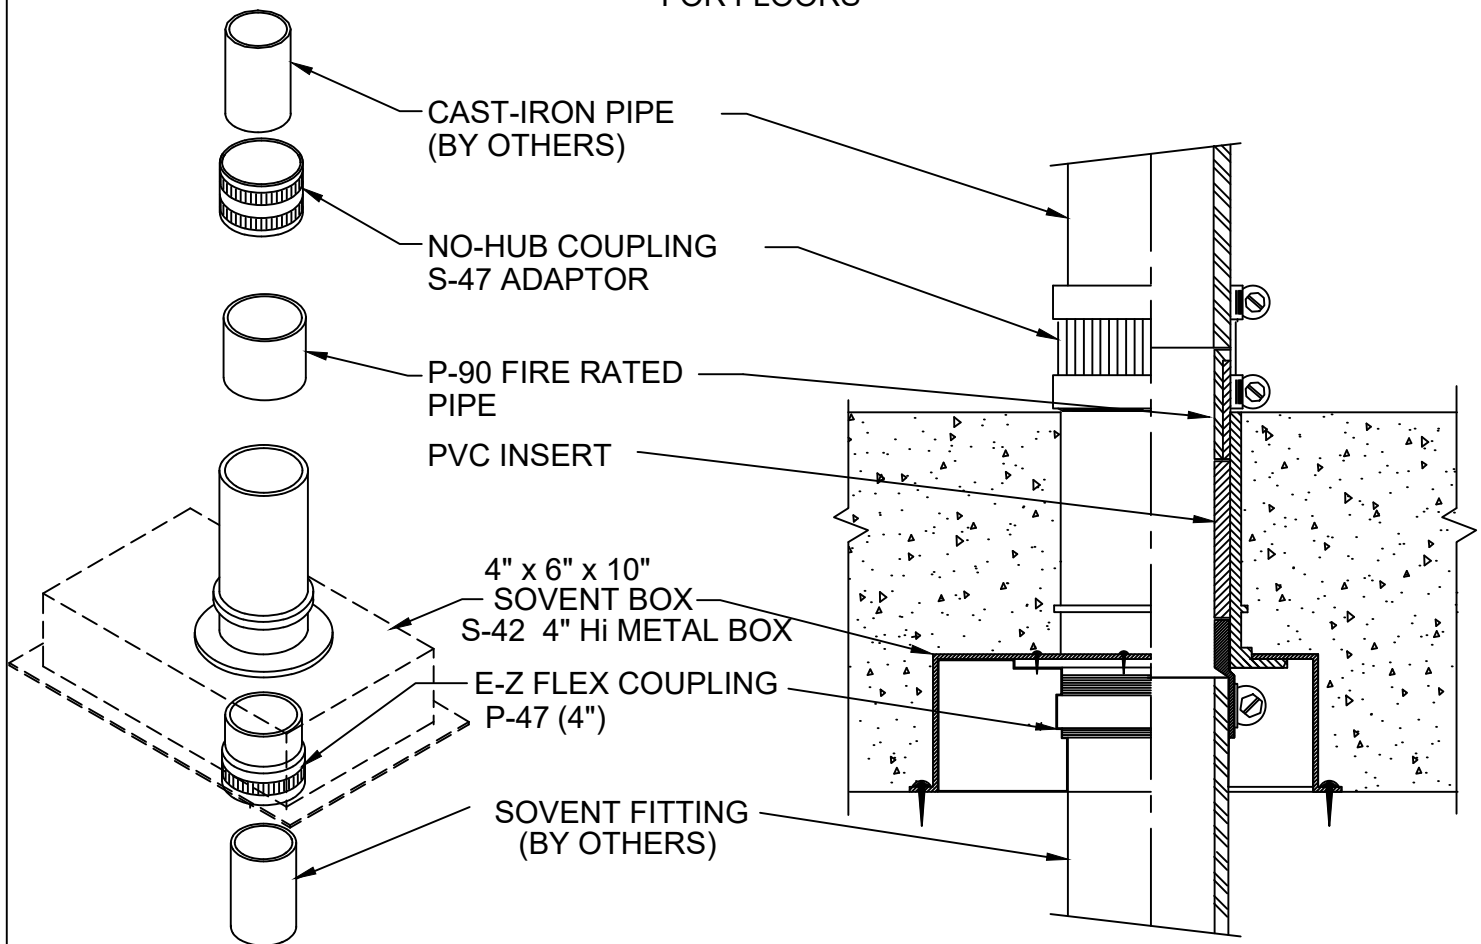

IMPORTANT NOTES :

1. Line up the box to fit into the plumbing wall & make sure the recess will be covered by the drop ceiling.
2. Use the nail holes in the Sovent box to secure to the deck.
3. After the concrete pour, remove protective cap & solvent weld the P90 pipe into the sleeve coupling.
4. Install the S-47 No-Hub adaptor from the P90 pipe to cast iron pipe.
5. Connect Aerator fitting into the factory installed E-Z Flex Coupling at the bottom of sleeve coupling.
6. Connect the no-hub pipe between the Aerator bottom & the E-Z no-hub on top of the sleeve coupling to complete the stack installation.



W.H. Directory Reference 99 Edition
Firestop Device
W.H. Design No. PS/PH 120-01
F Rating 2 Hrs.



ProSet[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :

03-04-20

DRG . NO .

B-4813-AS