


PRECAST SHOWER DRAIN FITTING ASSEMBLY

CONCRETE ON WOOD FORM
FOR FLOORS

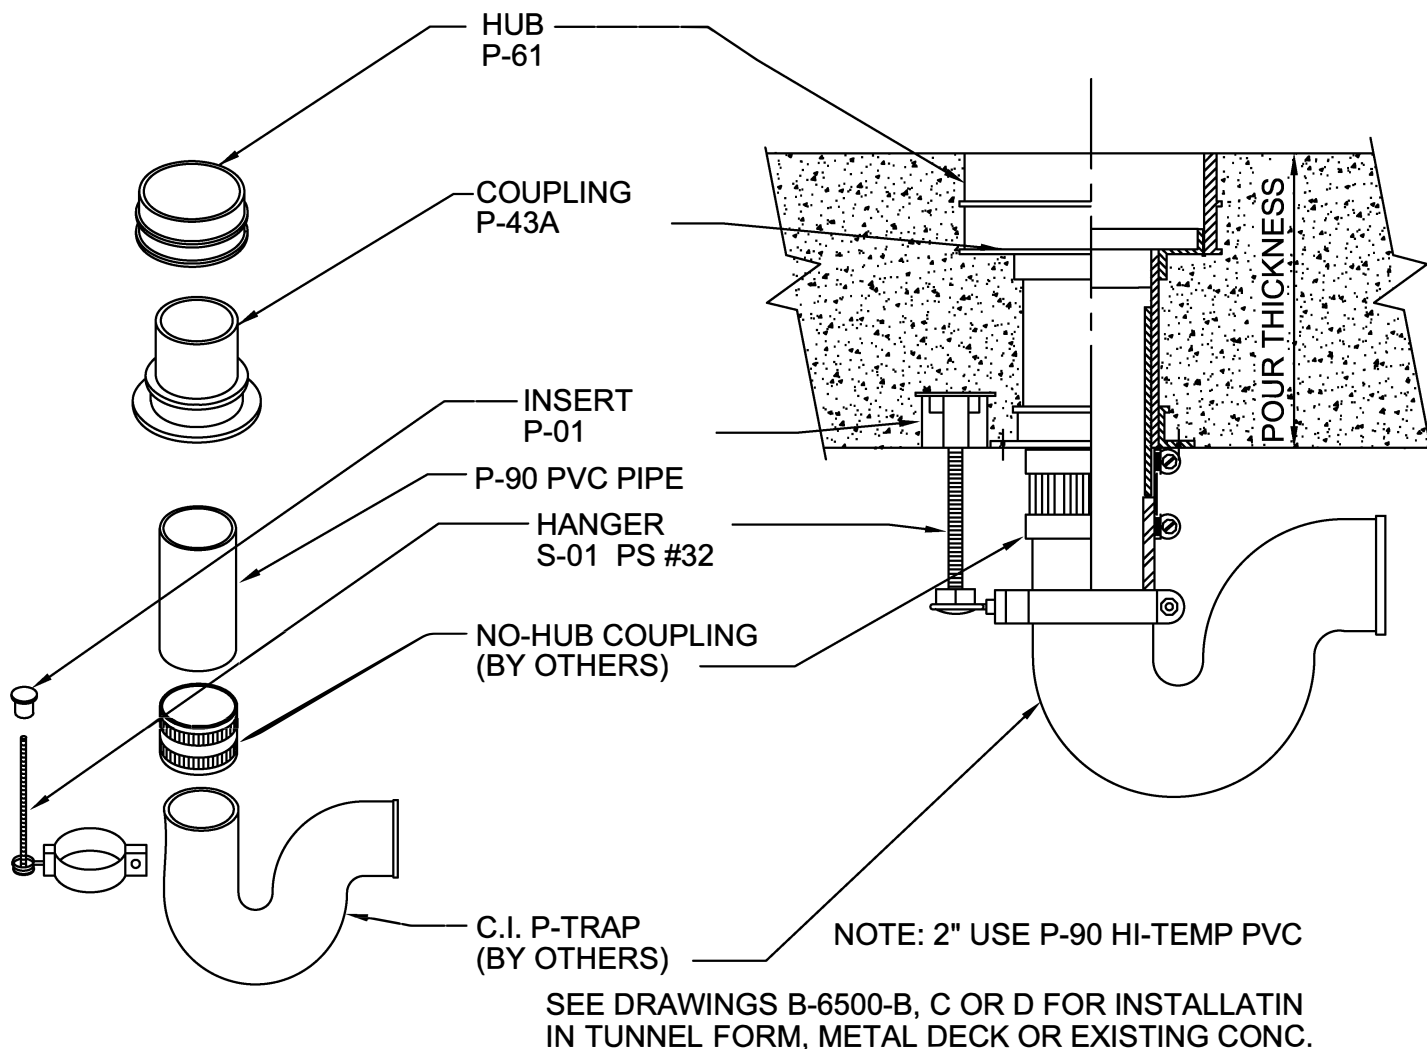

IMPORTANT NOTES :

1. Use nails through flange holes to mount the hub drain to the deck.
2. Set the P-01 insert abutting against the mounting flange.
3. After the concrete pour, remove protective cap.
4. Insert & solvent weld the proper length CP-95 or P-90 pipe into the bottom of coupling.
5. Connect the P-Trap to the liner fitting or P-90 pipe using a E-Z no-hub coupling.
6. Install the S-01 hanger to the P-Trap in a secure manner.
7. After the pressure test, break out the knock out cap.
8. To connect a precast shower drain, insert & solvent weld a 2" PVC pipe into the coupling to extend up through the shower strainer, then use a jiffy joint between the strainer & the pipe.



W.H. Directory Reference 99 Edition
Firestop Device
W.H. Design No. PS/PH 120-02
F Rating 2 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
5-31-21

DRG. NO.
B-6100-A
B,C OR D