


HUB/FLOOR DRAIN FITTING ASSEMBLY WITH TRAP GUARD

CONCRETE ON WOOD OR STEEL FORM
FOR UTILITY ROOM FLOORS

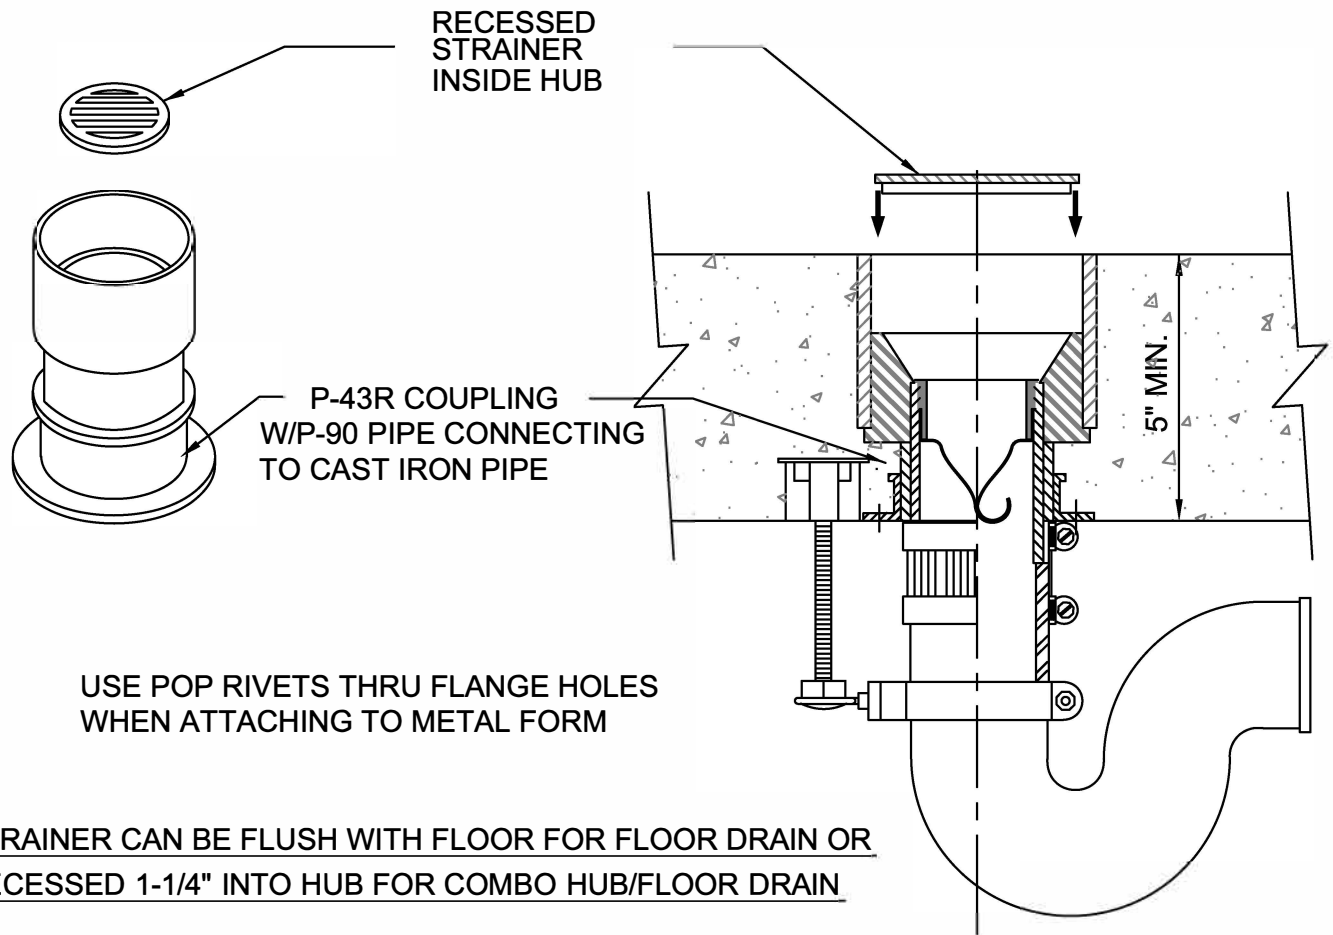

IMPORTANT NOTES :

1. Use nails or pop rivets through the fastening flange holes to mount the self-seal flange to the deck.
2. The drain comes with a hard test cap solvent cemented to the top for water testing when required.
3. After the concrete pour and water test, knock out the test cap to use the combo hub/floor drain.
4. Connect the 2" P-90 nipple to the cast iron branch piping and trap to the bottom of drain stub.

If the trap guard device should get damaged or impaired in any way, the device can be easily removed. A puller tool attaches to the two built-in lugs inside of the Trap Guard for easy removal & replacement.



W.H. Directory Reference 01 Edition
Firestop Device
W.H. Design No. PS/PH 120-02
F Rating 2 & 3 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
5-31-21

DRG. NO. :
B-6323-ATG