


# PLANTER DRAIN FITTING ASSEMBLY

CONCRETE ON WOOD FORM  
FOR FLOORS

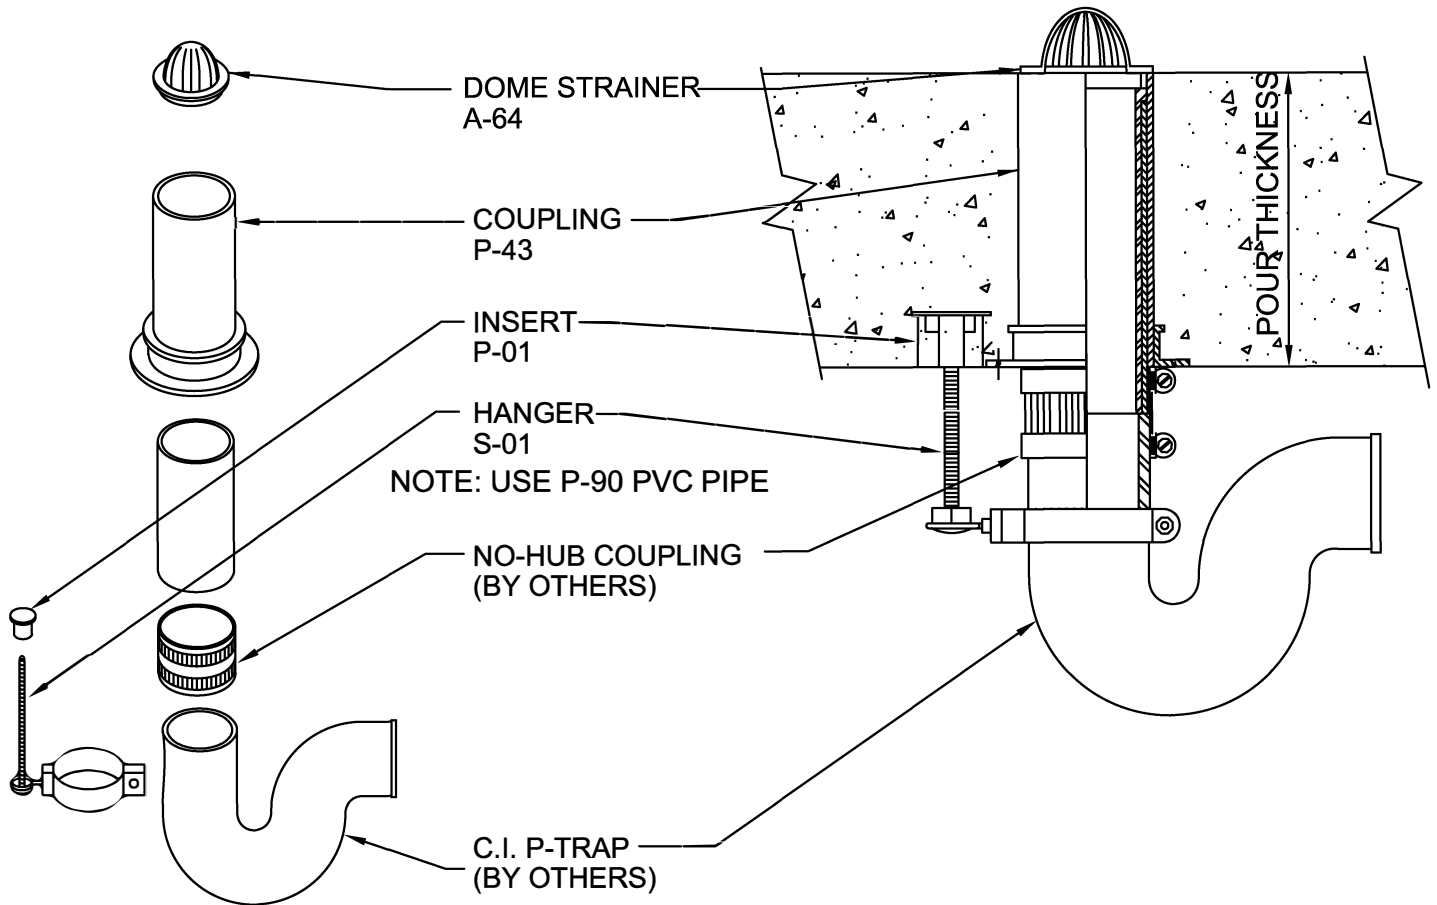

SEE DRAWINGS B-6500-B,C OR D FOR INSTALLATION  
IN CONC. TUNNEL FORM, METAL DECK OR EXISTING CONC.

## IMPORTANT NOTES :

1. Use nails through flange holes to mount the sleeve coupling to the deck.
2. Set the P-01 insert abutting against the mounting flange.
3. After concrete is poured, remove protective cap.
4. Insert & solvent weld the proper length P-90 pipe into the bottom of coupling.
5. Connect the P-Trap to the P-90 fitting using a no-hub coupling.
6. Install the S-01 hanger to the P-Trap in a secure manner.
7. The domed strainer sets inside pipe on top of coupling opening.



W.H. Directory Reference 97 Edition  
Firestop Device  
W.H. Design No. PS/PH 120-02  
F Rating 2 Hrs.



**PROSET**<sup>®</sup>  
**SYSTEMS**  
FIRESTOP PENETRATOR™

DATE :  
5-31-21

DRG. NO.  
B-6400-A  
B,C OR D