


PROSEAL CLOSET ASSEMBLY

PRECAST CONCRETE OR EXISTING CONCRETE FOR FLOORS

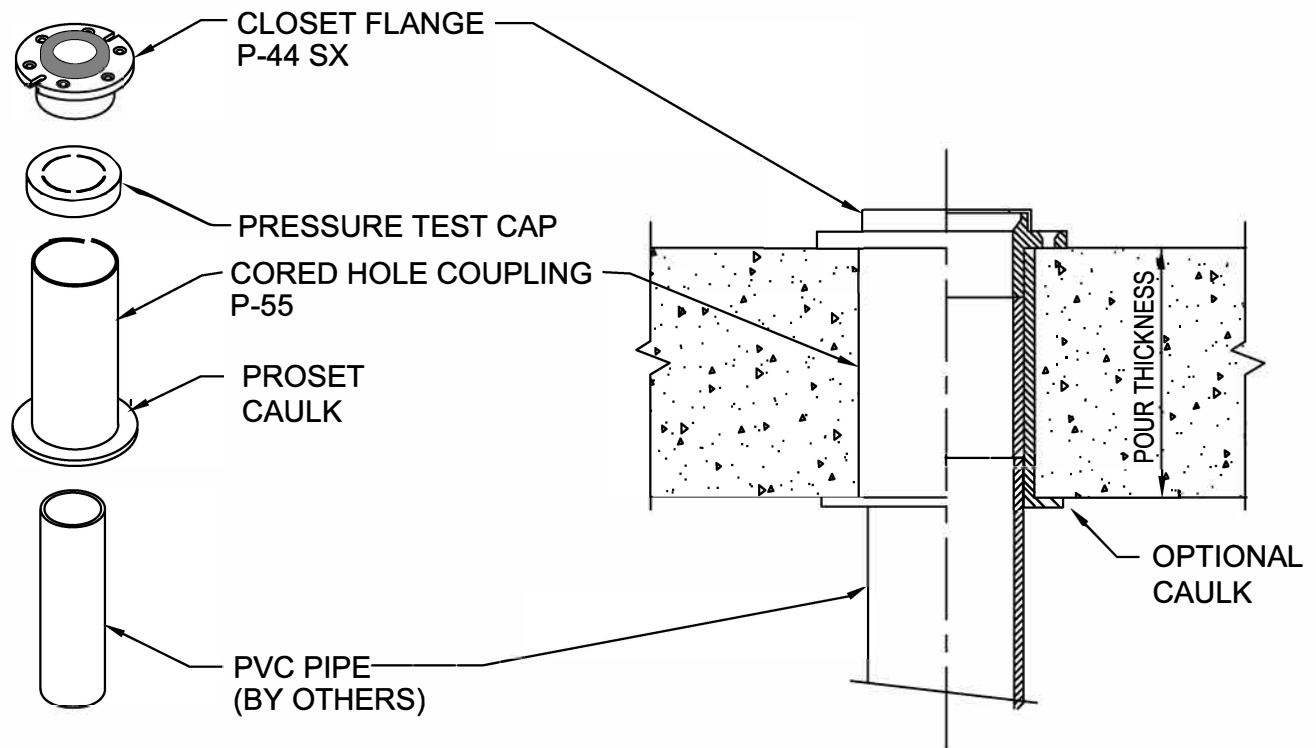

IMPORTANT NOTES :

1. Core a 4" hole for a 3" closet stub & a 5" hole for a 4" closet stub P-55B coupling.
2. Install a bead of ProSet Caulk around the coupling flange to waterproof.
3. Insert & secure the coupling into the hole from the bottom.
4. The coupling to extend 1" above the floor then solvent cement test cap to coupling.
5. After the floor is finished, cut off coupling extension to the top of the floor.
6. Solvent cement the *P-44-SX closet flange with the built-in seal into the coupling before setting toilet.

* The new elastomeric seal on this flange replaces a wax ring. Holds a 10 ft. head of water pressure.



W.H. Directory Reference 01 Edition
Firestop Device
W.H. Design No. PS/PH 120-15
F Rating 2 & 3 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR[™]

DATE :
5.31.21

DRG. NO.
C 4402 D