


WALL OUTLET CLOSET ASSEMBLY

CONCRETE ON WOOD OR STEEL FORMS
FOR FLOORS

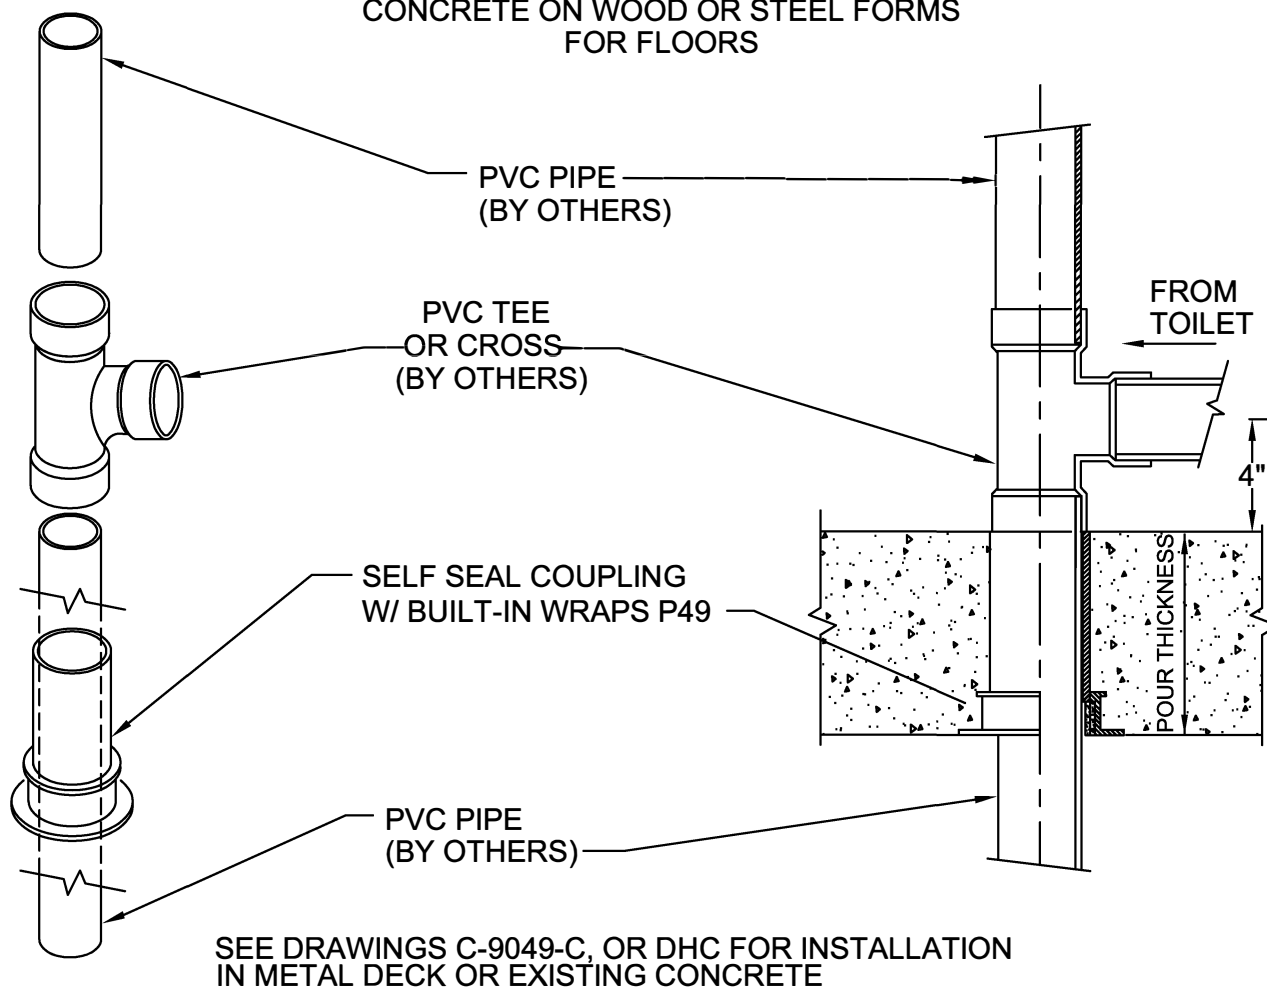

IMPORTANT NOTES :

1. Use nails or pop-rivets through flange holes to mount the Self Seal sleeve coupling to the deck.
2. After concrete is poured, remove protective cap.
3. Solvent cement plastic pipe up into the bottom socket of the Self Seal coupling.
4. Solvent cement the plastic tee or cross at proper elevation into the top of sleeve coupling.

Option: A 1 1/2" recess can be made by adding a P49 flange on top of the Self Seal coupling. for tee or cross outlet elevation variations. 3" Part # P3543H-XR- 4" Part # P4543H-XR



W.H. Directory Reference 99 Edition
Firestop Device
W.H. Design No. PS/PHV 180-03
F Rating 3 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
5.31.21
DRG . NO .
C-4492-A