


# PROSEAL CLOSET ASSEMBLY

CONCRETE ON WOOD OR STEEL FORMS FOR FLOORS

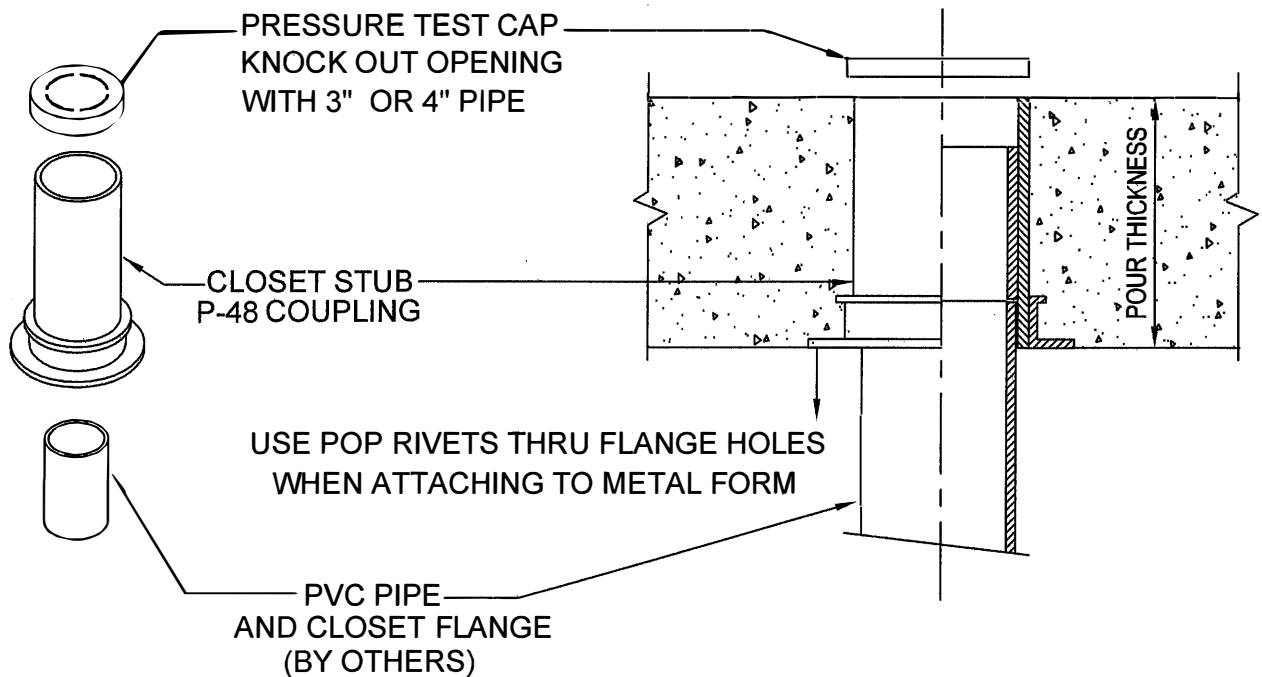

## IMPORTANT NOTES :

1. Use nails through the flange holes to mount the Closet Stub to the deck.
2. After the concrete pour, do not remove the test cap until testing is done.
3. Use a 3" or 4" pipe to knock out cap. Then solvent cement the closet flange into the closet stub.
4. To complete the hook up, solvent cement the branch piping directly into the bottom of the closet stub.



W.H. Directory Reference 01 Edition  
Firestop Device  
W.H. Design No. PS/PH 120-15  
F Rating 2 & 3 Hrs.



**PROSET**<sup>®</sup>  
**SYSTEMS**  
FIRESTOP PENETRATOR™

DATE :  
5-31-21  
DRG . NO .  
C-4802-AS