


SPECIAL TUB/SHOWER PENETRATION

CONCRETE ON WOOD FORM
FOR FLOORS

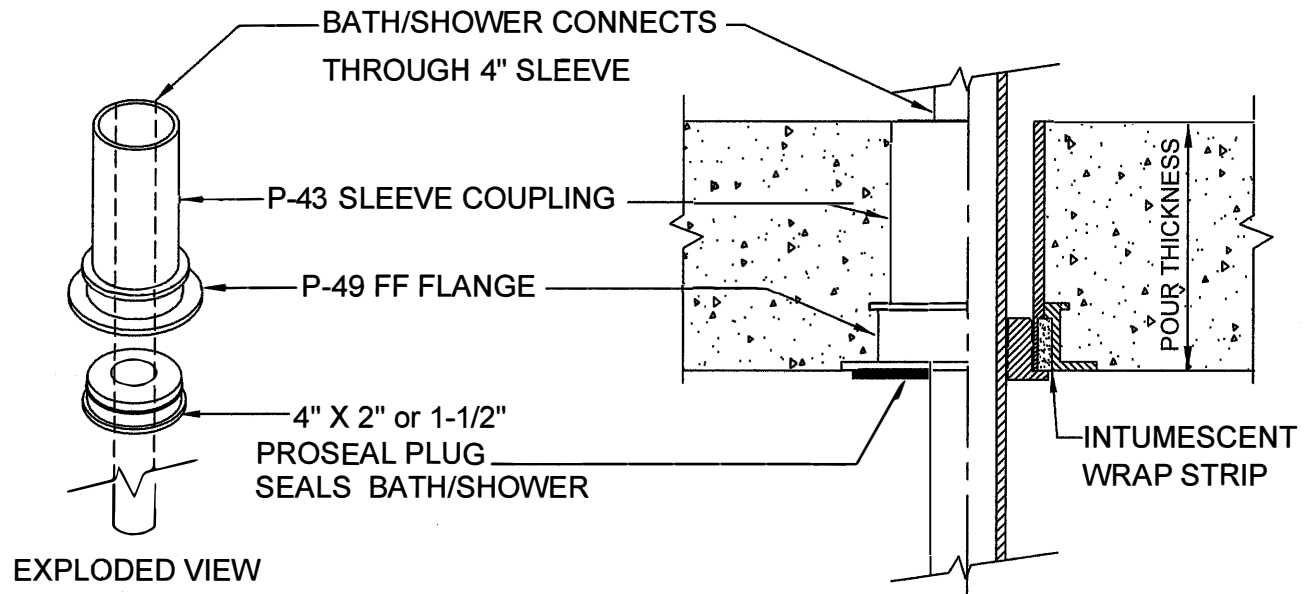

THIS SPECIAL PENETRATION ISD USED TO PROVIDE MOVEMENT WITH A LARGER
OPENING TO CONNECT PRECAST BATH TUBS AND SHOWER BASES.

IMPORTANT NOTES :

1. Use nails through #49 flange holes to mount the sleeve coupling to the deck.
2. After concrete is poured, remove protective cap.
3. Insert pass through piping from the tub or shower through the sleeve coupling.
4. Install the proper size split 4" ProSeal Plug around the pipe & drive up into the sleeve coupling.
5. Connect the P-Trap to the tub or shower drain to complete the installation.

Alternate : Blank 4" Plugs may be drilled to provide for any off center piping.



W.H. Directory Reference 00 Edition
Firestop Device
W.H. Design No. PS/PHV 180-03
F Rating 3 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
5-31-21

DRG. NO.
C-6263-A