


# TRAP GUARD FLOOR DRAIN ASSEMBLY

CONCRETE ON CORRUGATED METAL DECK  
FOR FLOORS

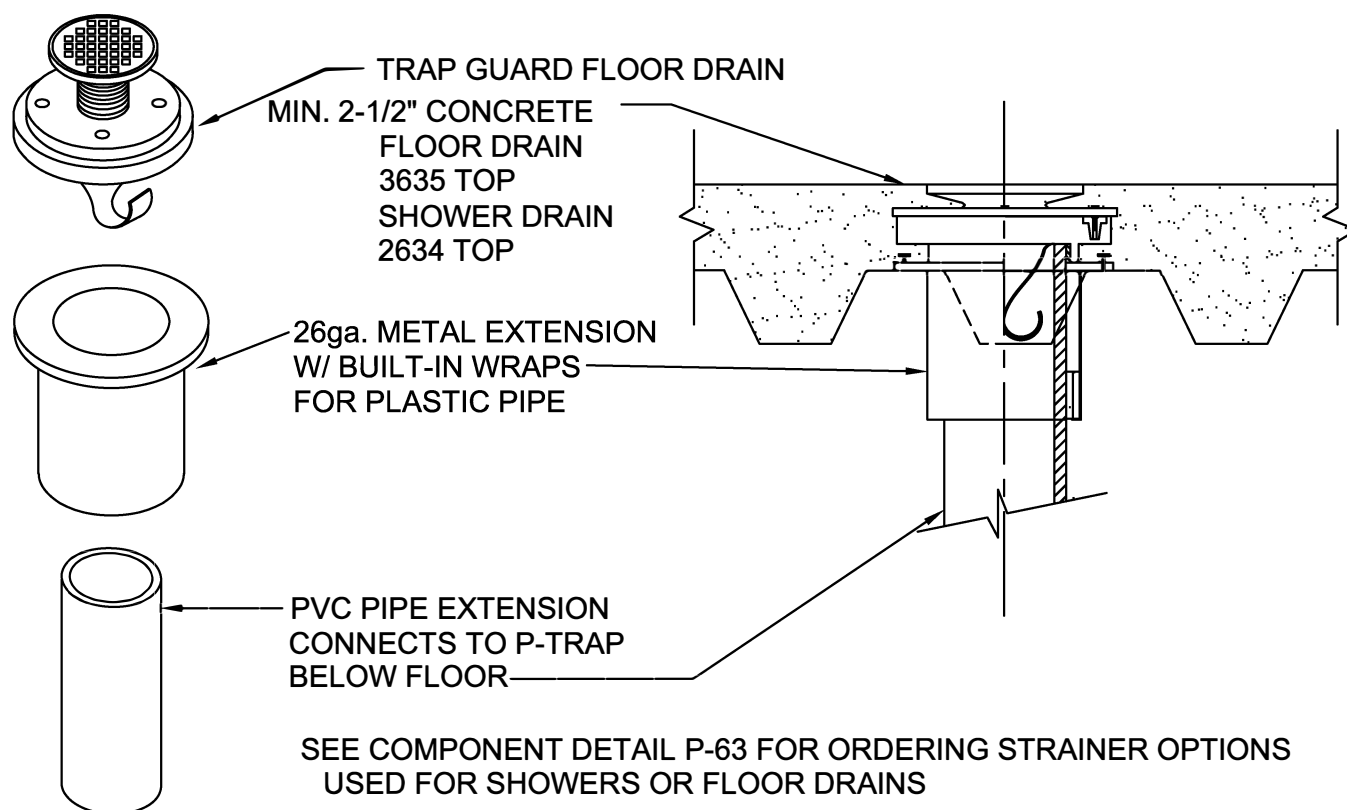

## IMPORTANT NOTES:

1. Cut hole through the corrugated metal deck to accommodate the 26 gauge metal extension to the bottom of the corrugations.
2. Mount the flange to the corrugated metal through the holes with sheet metal screws. If necessary use a right angle metal strip, S34348, to span various size corrugations.
3. Insert the drain top and extension pipe through the flange to the bottom of the corrugations.
4. Solvent cement the plastic pipe to the flange at the proper elevation.
5. Connect the vertical pipe to a P-Trap and branch piping. Not for use on waxed or grease laden floors.

Also available with various tops - See component drwg. P-63

Note: Care should be taken not to touch the Trap Guard Device with primer or solvent.  
Seepage openings should be sealed with mastic when pan is not used.



W.H. Directory Reference 98 Edition  
Firestop Device  
W.H. Design No. PS/PH 120-14  
F Rating 2 Hrs.



**PROSET**<sup>®</sup>  
**SYSTEMS**  
FIRESTOP PENETRATOR™

DATE :	5-31-21
DRG . NO .	C-6332-CTG