


# FLOOR DRAIN ASSEMBLY

CONCRETE ON CORRUGATED METAL DECK FOR FLOORS

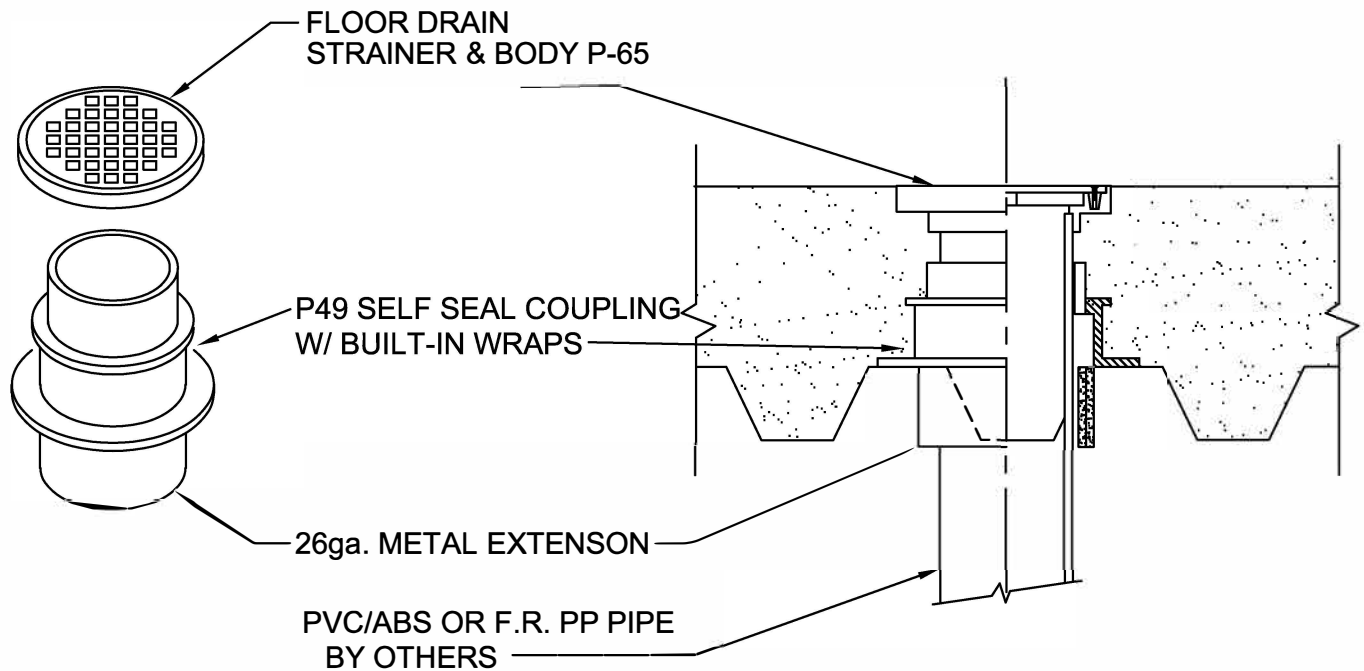

## IMPORTANT NOTES:

1. Cut hole through the corrugated metal deck to accommodate the 26 gauge metal extension to the bottom of the corrugations. Solvent cement F.D. top to sleeve coupling
2. Mount the # 49 flange to the corrugated metal with sheet metal screws. If necessary use a right angle metal strip, S-34348, to span the corrugations.
3. After the pour, remove protective tape.
4. Solvent cement the plastic pipe into the # 45 tapered coupling.
5. Plastic pipe is supported at the trap by solvent cementing to embedded coupling.



W.H. Directory Reference 98 Edition  
Firestop Device  
W.H. Design No. PS/PH 120-14  
F Rating 2 Hrs.



**PROSET**<sup>®</sup>  
**SYSTEMS**  
FIRESTOP PENETRATOR™

DATE :  
5-31-21  
DRG . NO .  
C-6520-C