


LAV/SINK DROP LEG SLEEVE ASSEMBLY

FOR BOTH CORED HOLE AND CAST IN PLACE PASSING
THROUGH CONCRETE FLOORS

**NON-VENTED CLOSED END PENETRATIONS
DO NOT REQUIRE FIRE WRAP**

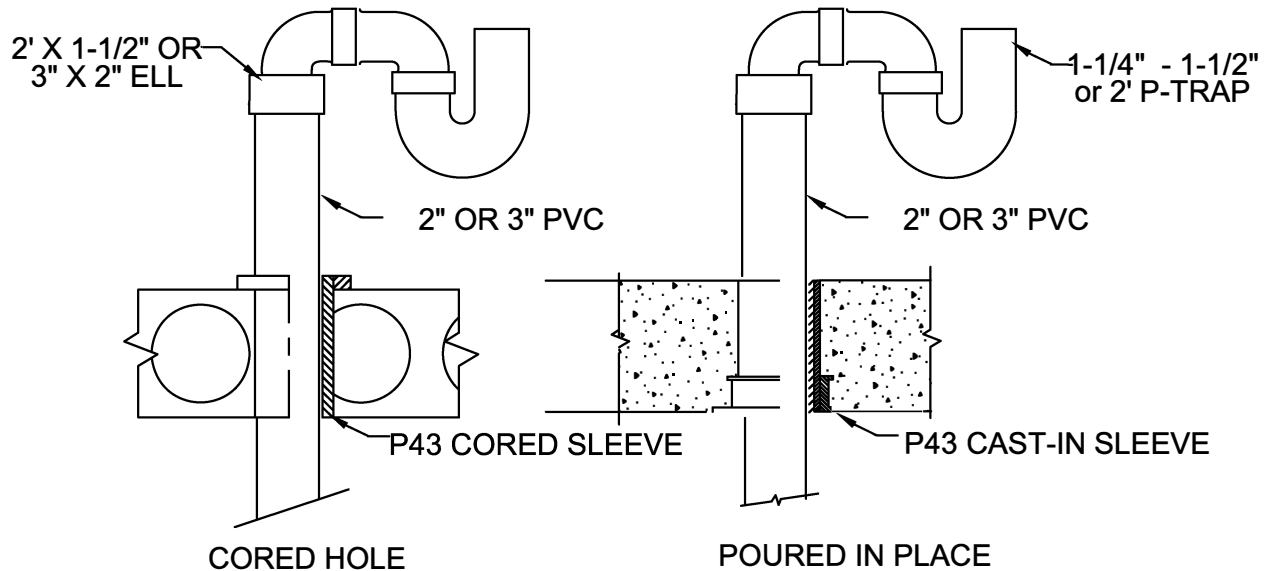

IMPORTANT NOTES :

1. Core a 2-3/4" hole for a 2" or a 4" hole for 3" pipe stubs or set the 2" or 3" Cast-in concrete sleeves.
2. Install a bead of adhesive Caulk under the bottom of the cored flange for waterproofing option.
3. Use the 2" stub-up for sinks & lavs. The 3" is sometimes used for washing machines drains.
4. 1-1/4" Traps can be connected back to back with one 2" vertical drop.
5. Two back to back 1-1/2" Sink Traps require two separate vertical drops.



W.H. Directory Reference 05 Edition
Firestop Device
W.H. Design No. PS/PH 120-08



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
5-31-21

DRG . NO .
C-8130-ADp