


Self Seal Flush Fit Stack Assembly

CONCRETE ON CORRUGATED METAL DECK
FOR FLOORS

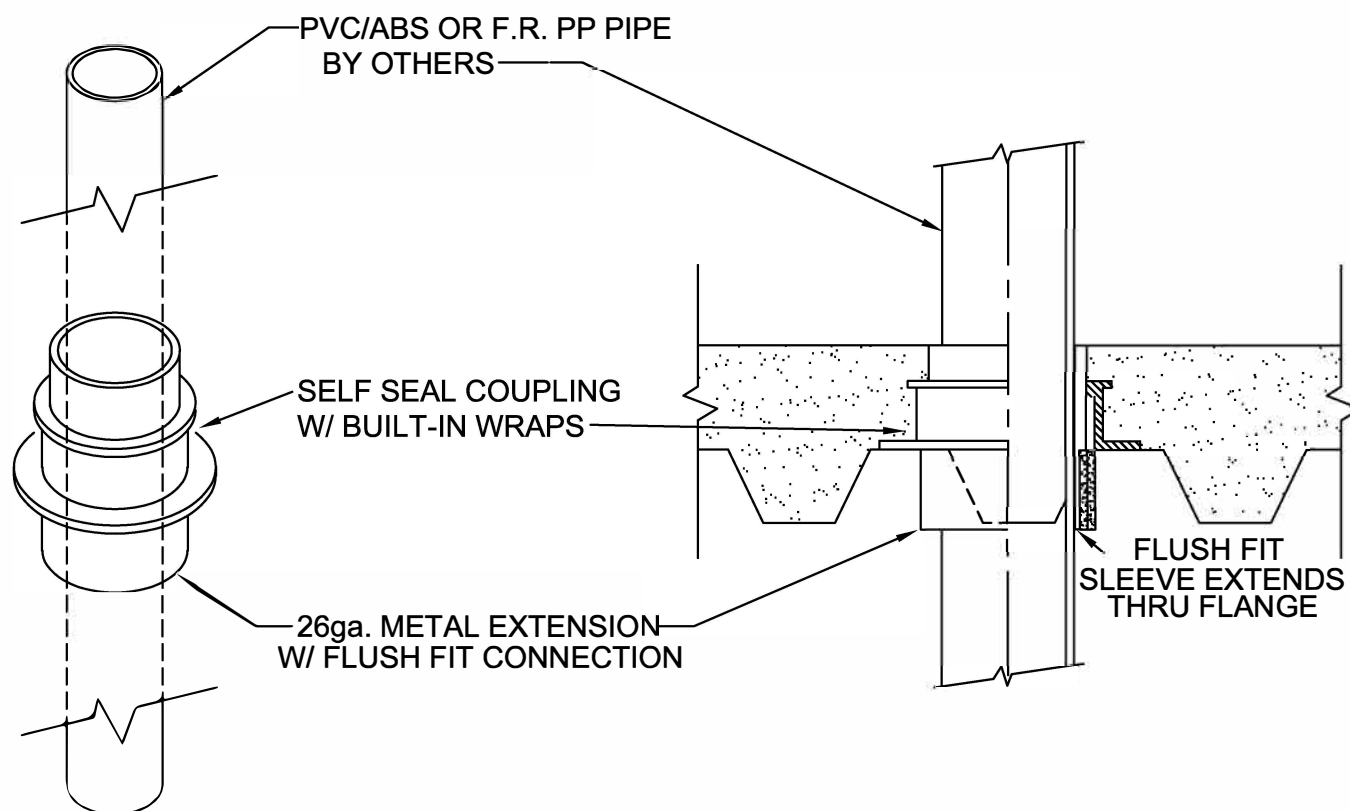

IMPORTANT NOTES:

1. Cut hole through the corrugated metal deck to accommodate the 26 gauge metal extension to the bottom of the corrugations.
2. Mount the # 49 flange to the corrugated metal with sheet metal screws. If necessary use a right angle metal strip, S-34348, to span the corrugations.
3. After the pour, remove protective cap.
4. Solvent cement the ProVent Stack Fitting into the flush fit extended coupling
5. Sovent cement the PVC pipe into the top of the sleeve coupling to finish the stack. pipe can be solvent cemented to the top of the sleeve coupling.



W.H. Directory Reference 99 Edition
Firestop Device
W.H. Design No. PS/PH 120-14
F Rating 2 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
5-31-21

DRG . NO .
C-9049-CFF