


T-RITE 2" x 3" OR 4" HUB DRAIN

FOR CORED HOLES THROUGH CONCRETE FLOORS

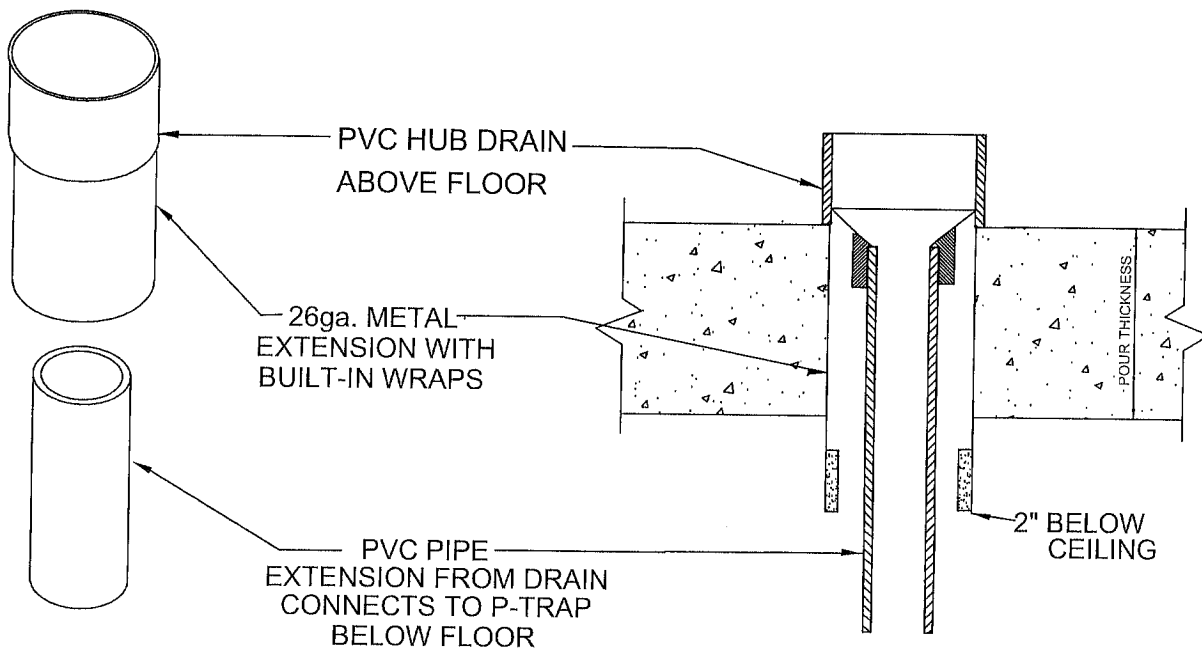

SEE DRAWING T-6330-A FOR CAST-IN PLACE & T-6330-CPS FOR METAL DECK.

IMPORTANT NOTES :

1. Core a 4 1/2" hole at the proper location of the 2" X 3" or 4" hub drain
2. Insert the T-Rite hub drain sleeve opening so the hub is set to the required opening.
If there is no topping the concrete can be cut down into the cored hole .
3. Connect the pvc extension pipe to the P-Trap to complete the installation.



W.H. Directory Reference 08 Edition
Firestop Device
W.H. Design No. PS/PH 120-18
F & T Rating 2 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
3-10-12

DRG . NO .
T-6330-DHD